 
 



Global Error Flag Counter

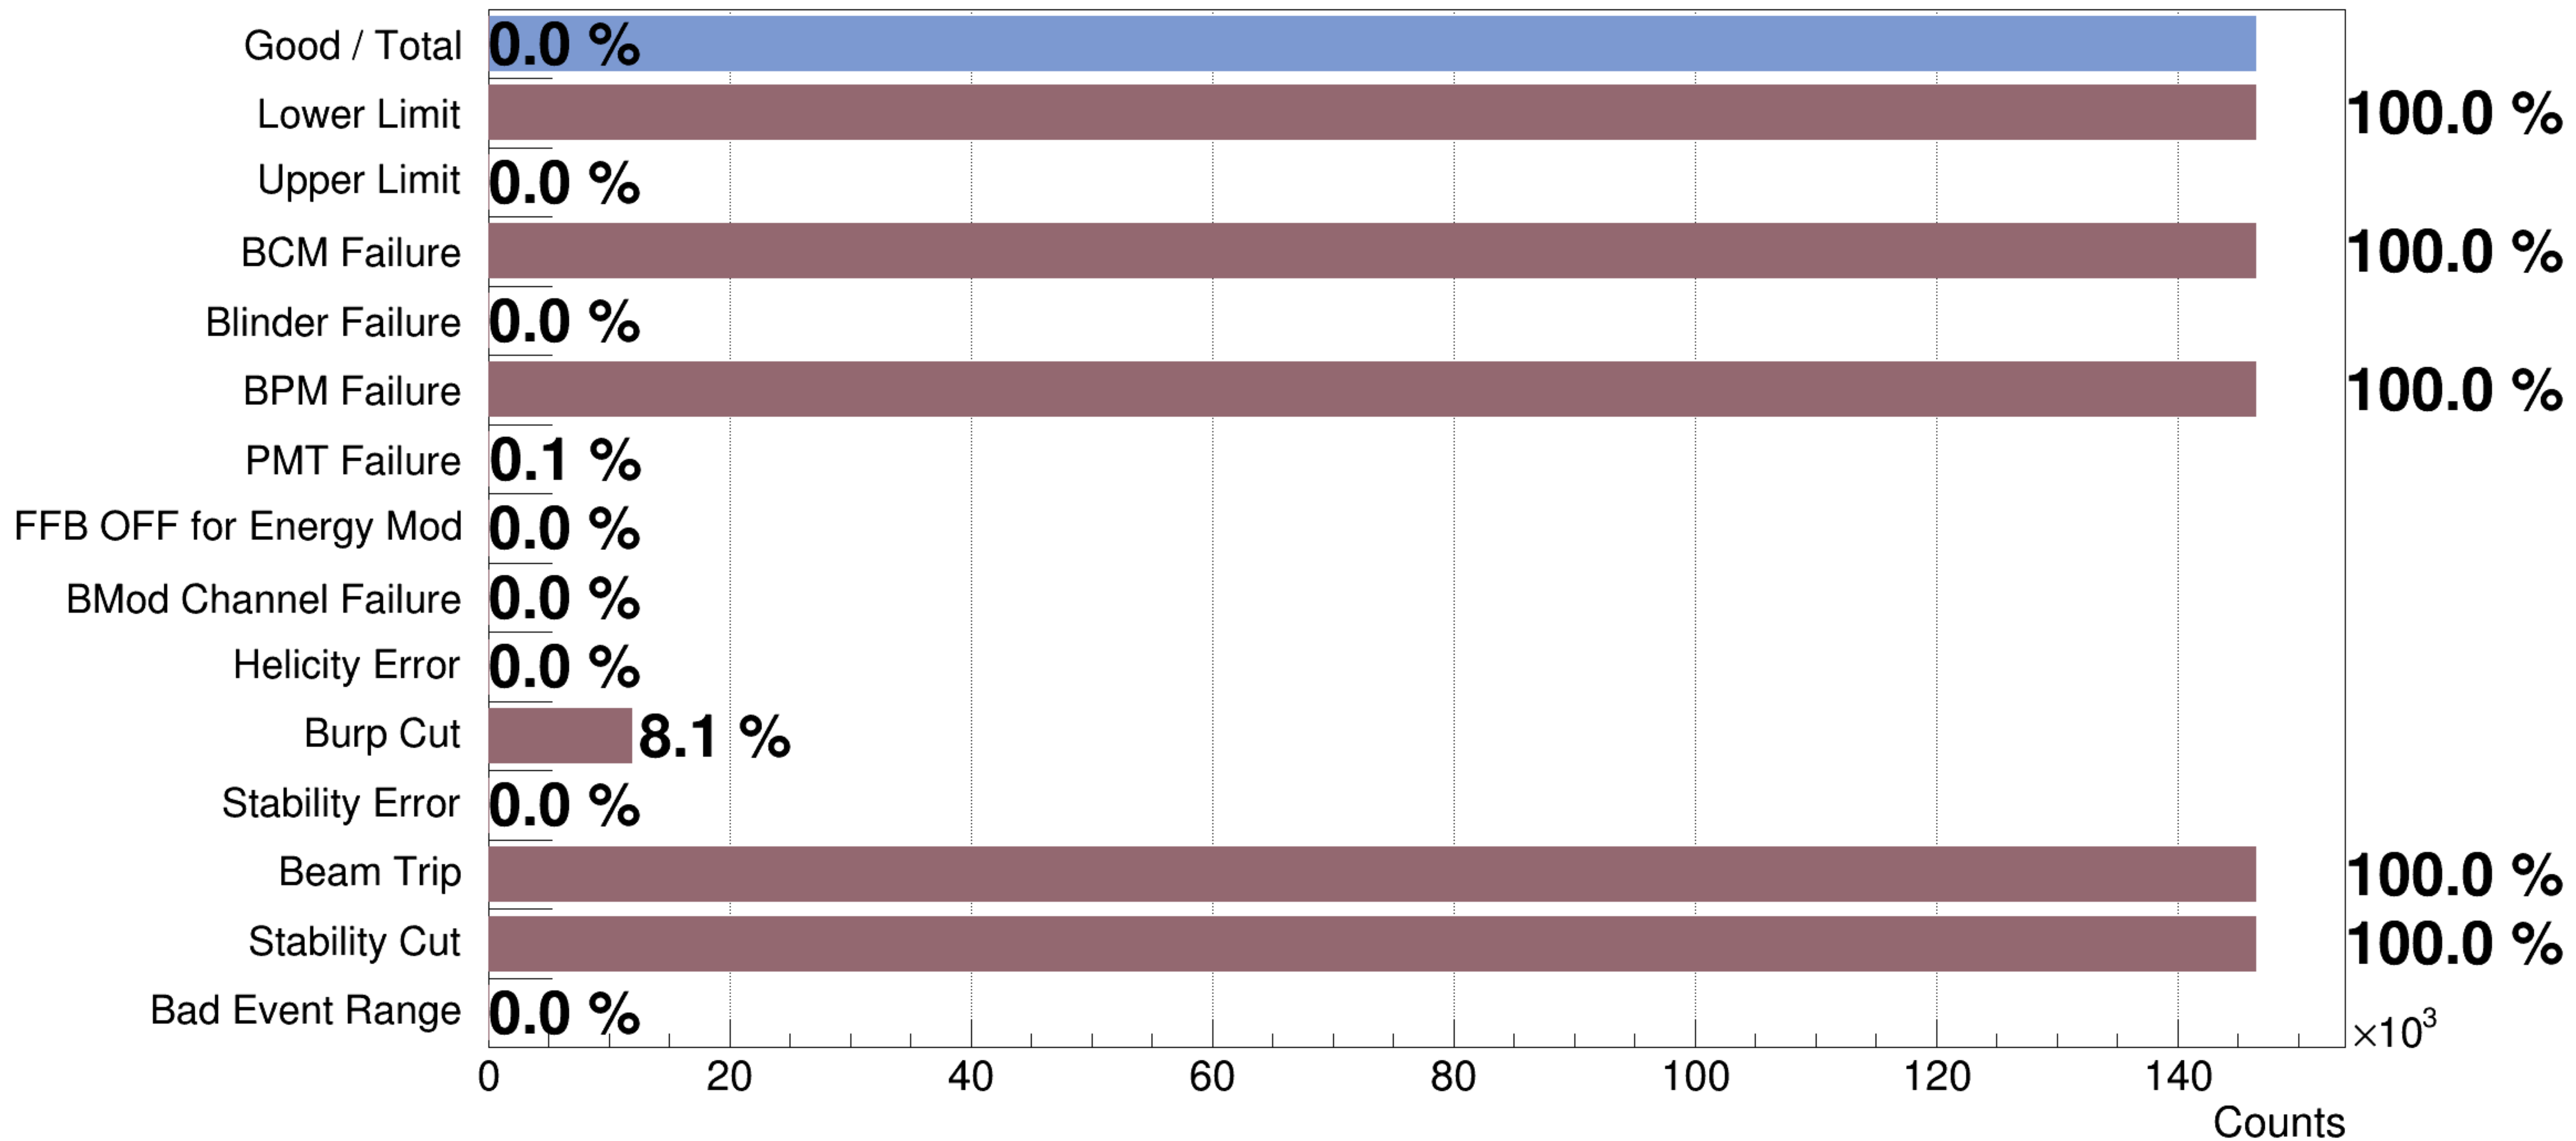


bcm_an_us Device Error Counter

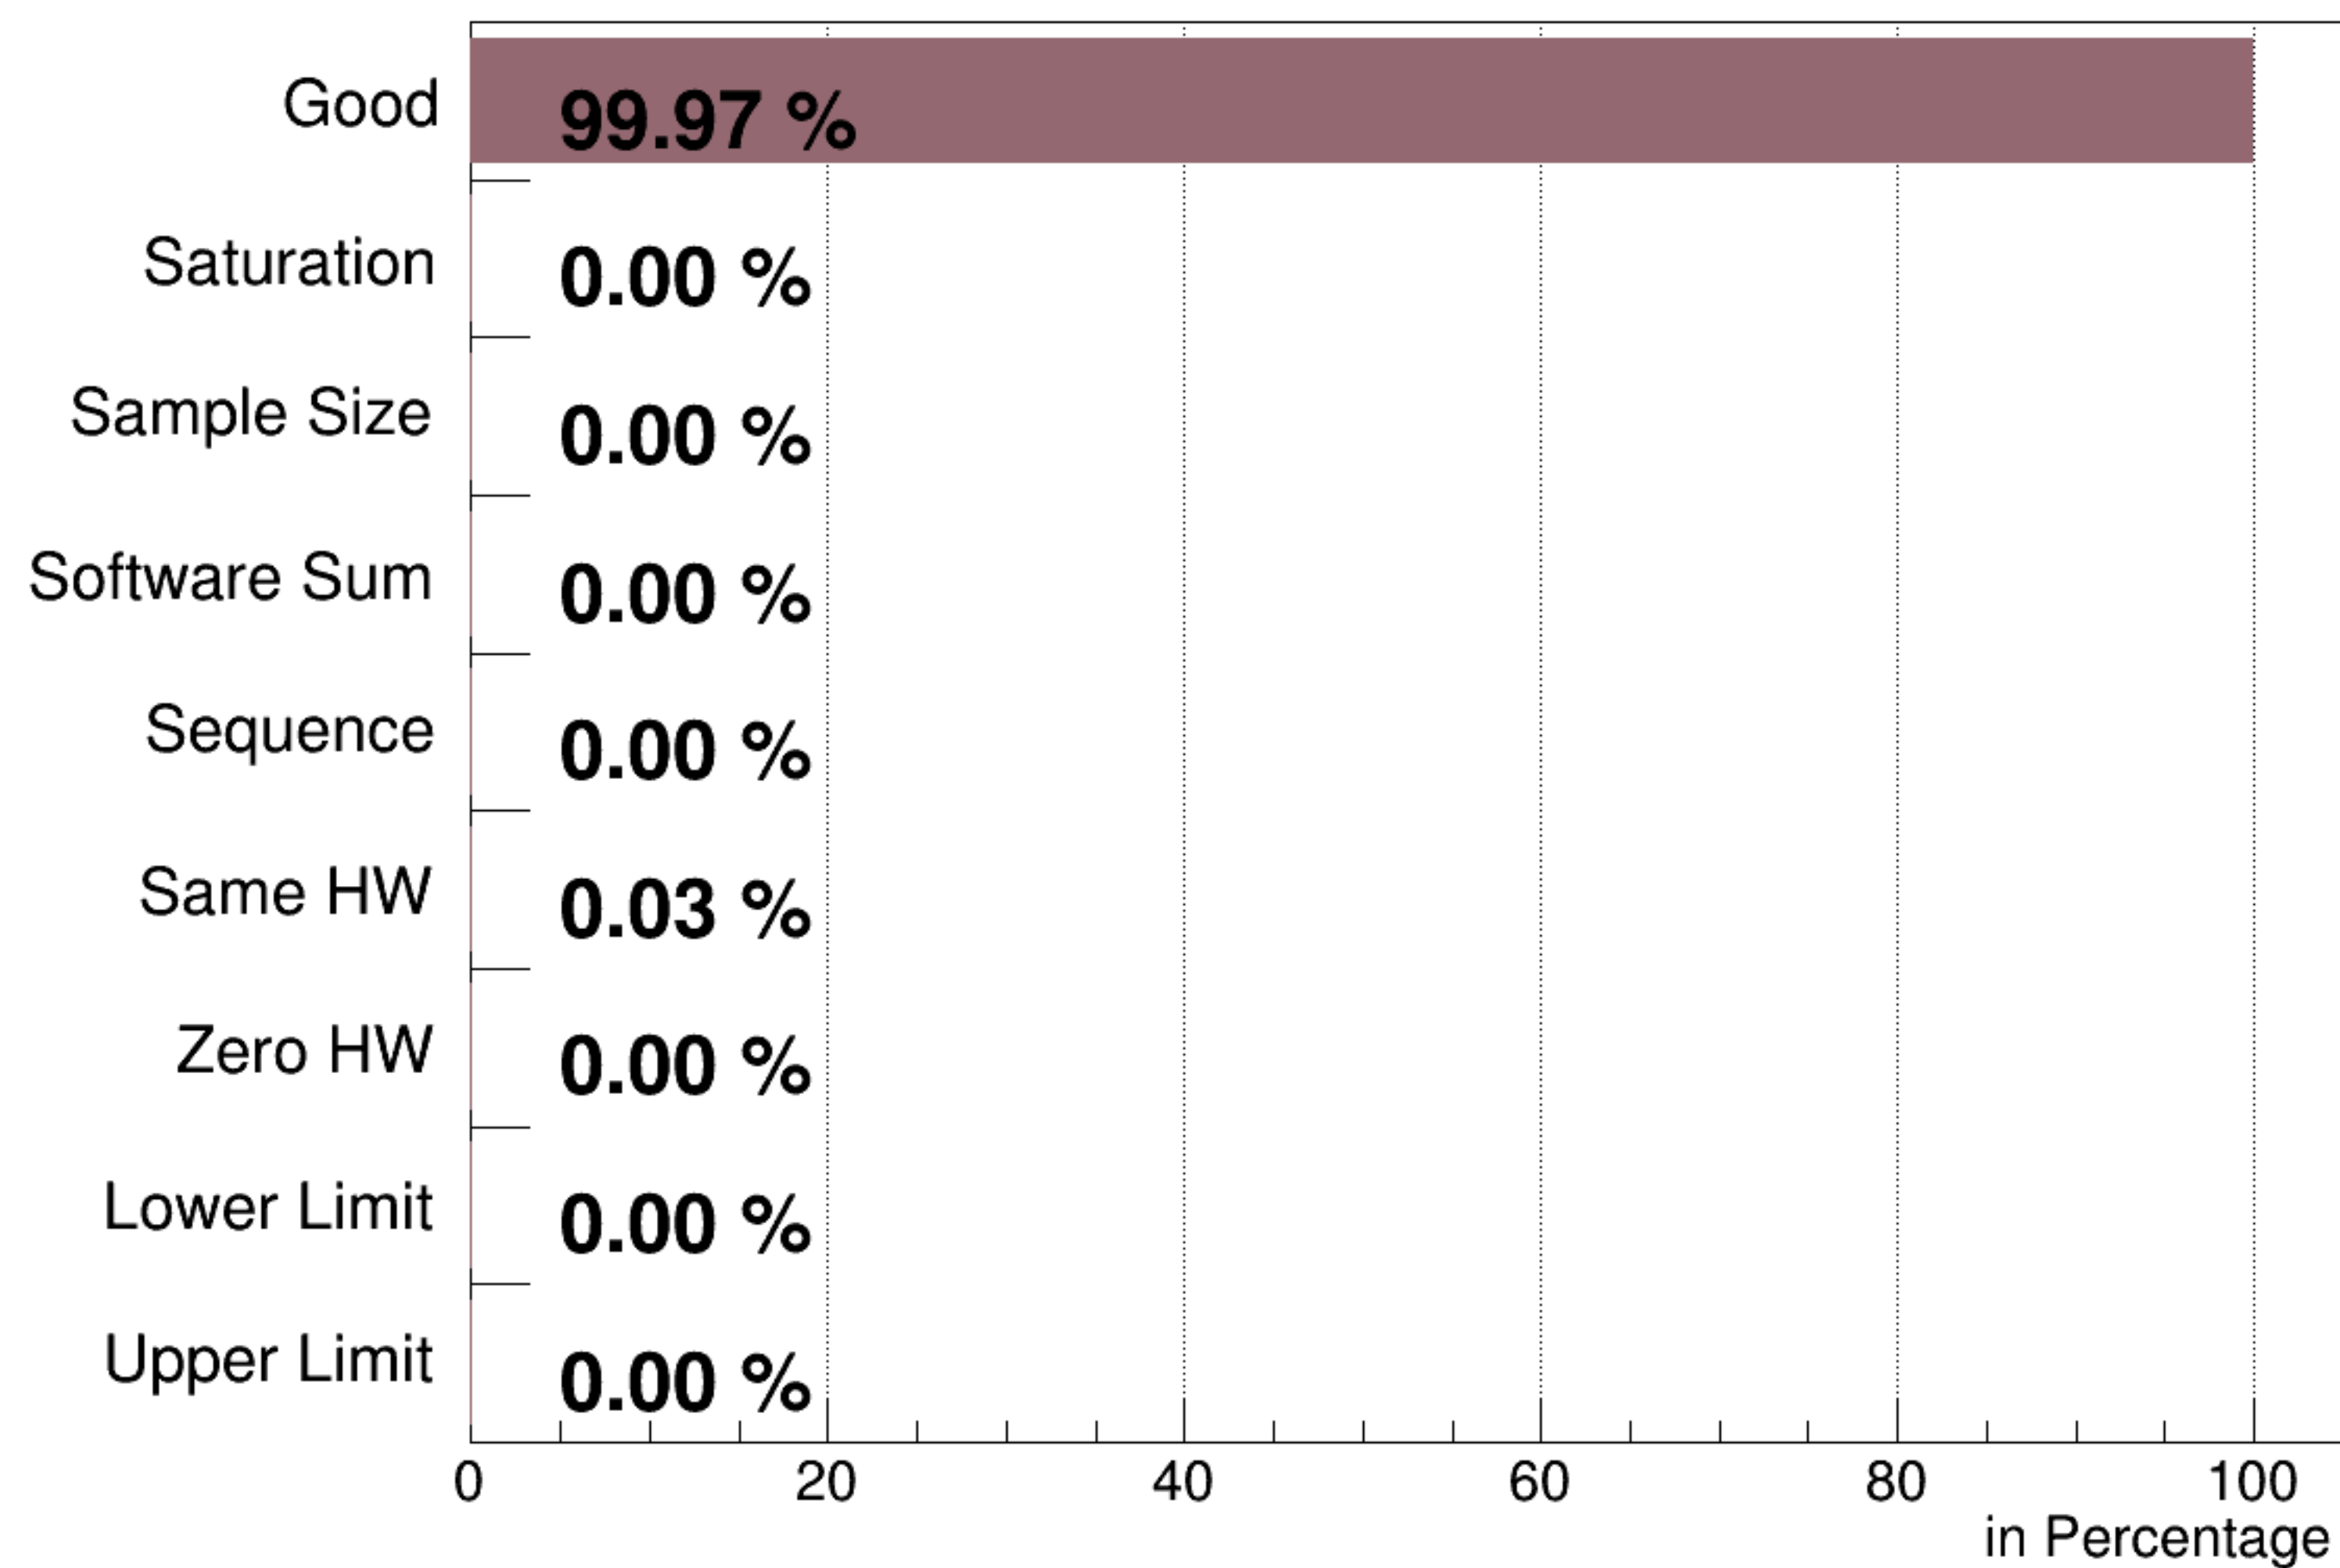

 
bcm_an_ds Device Error Counter

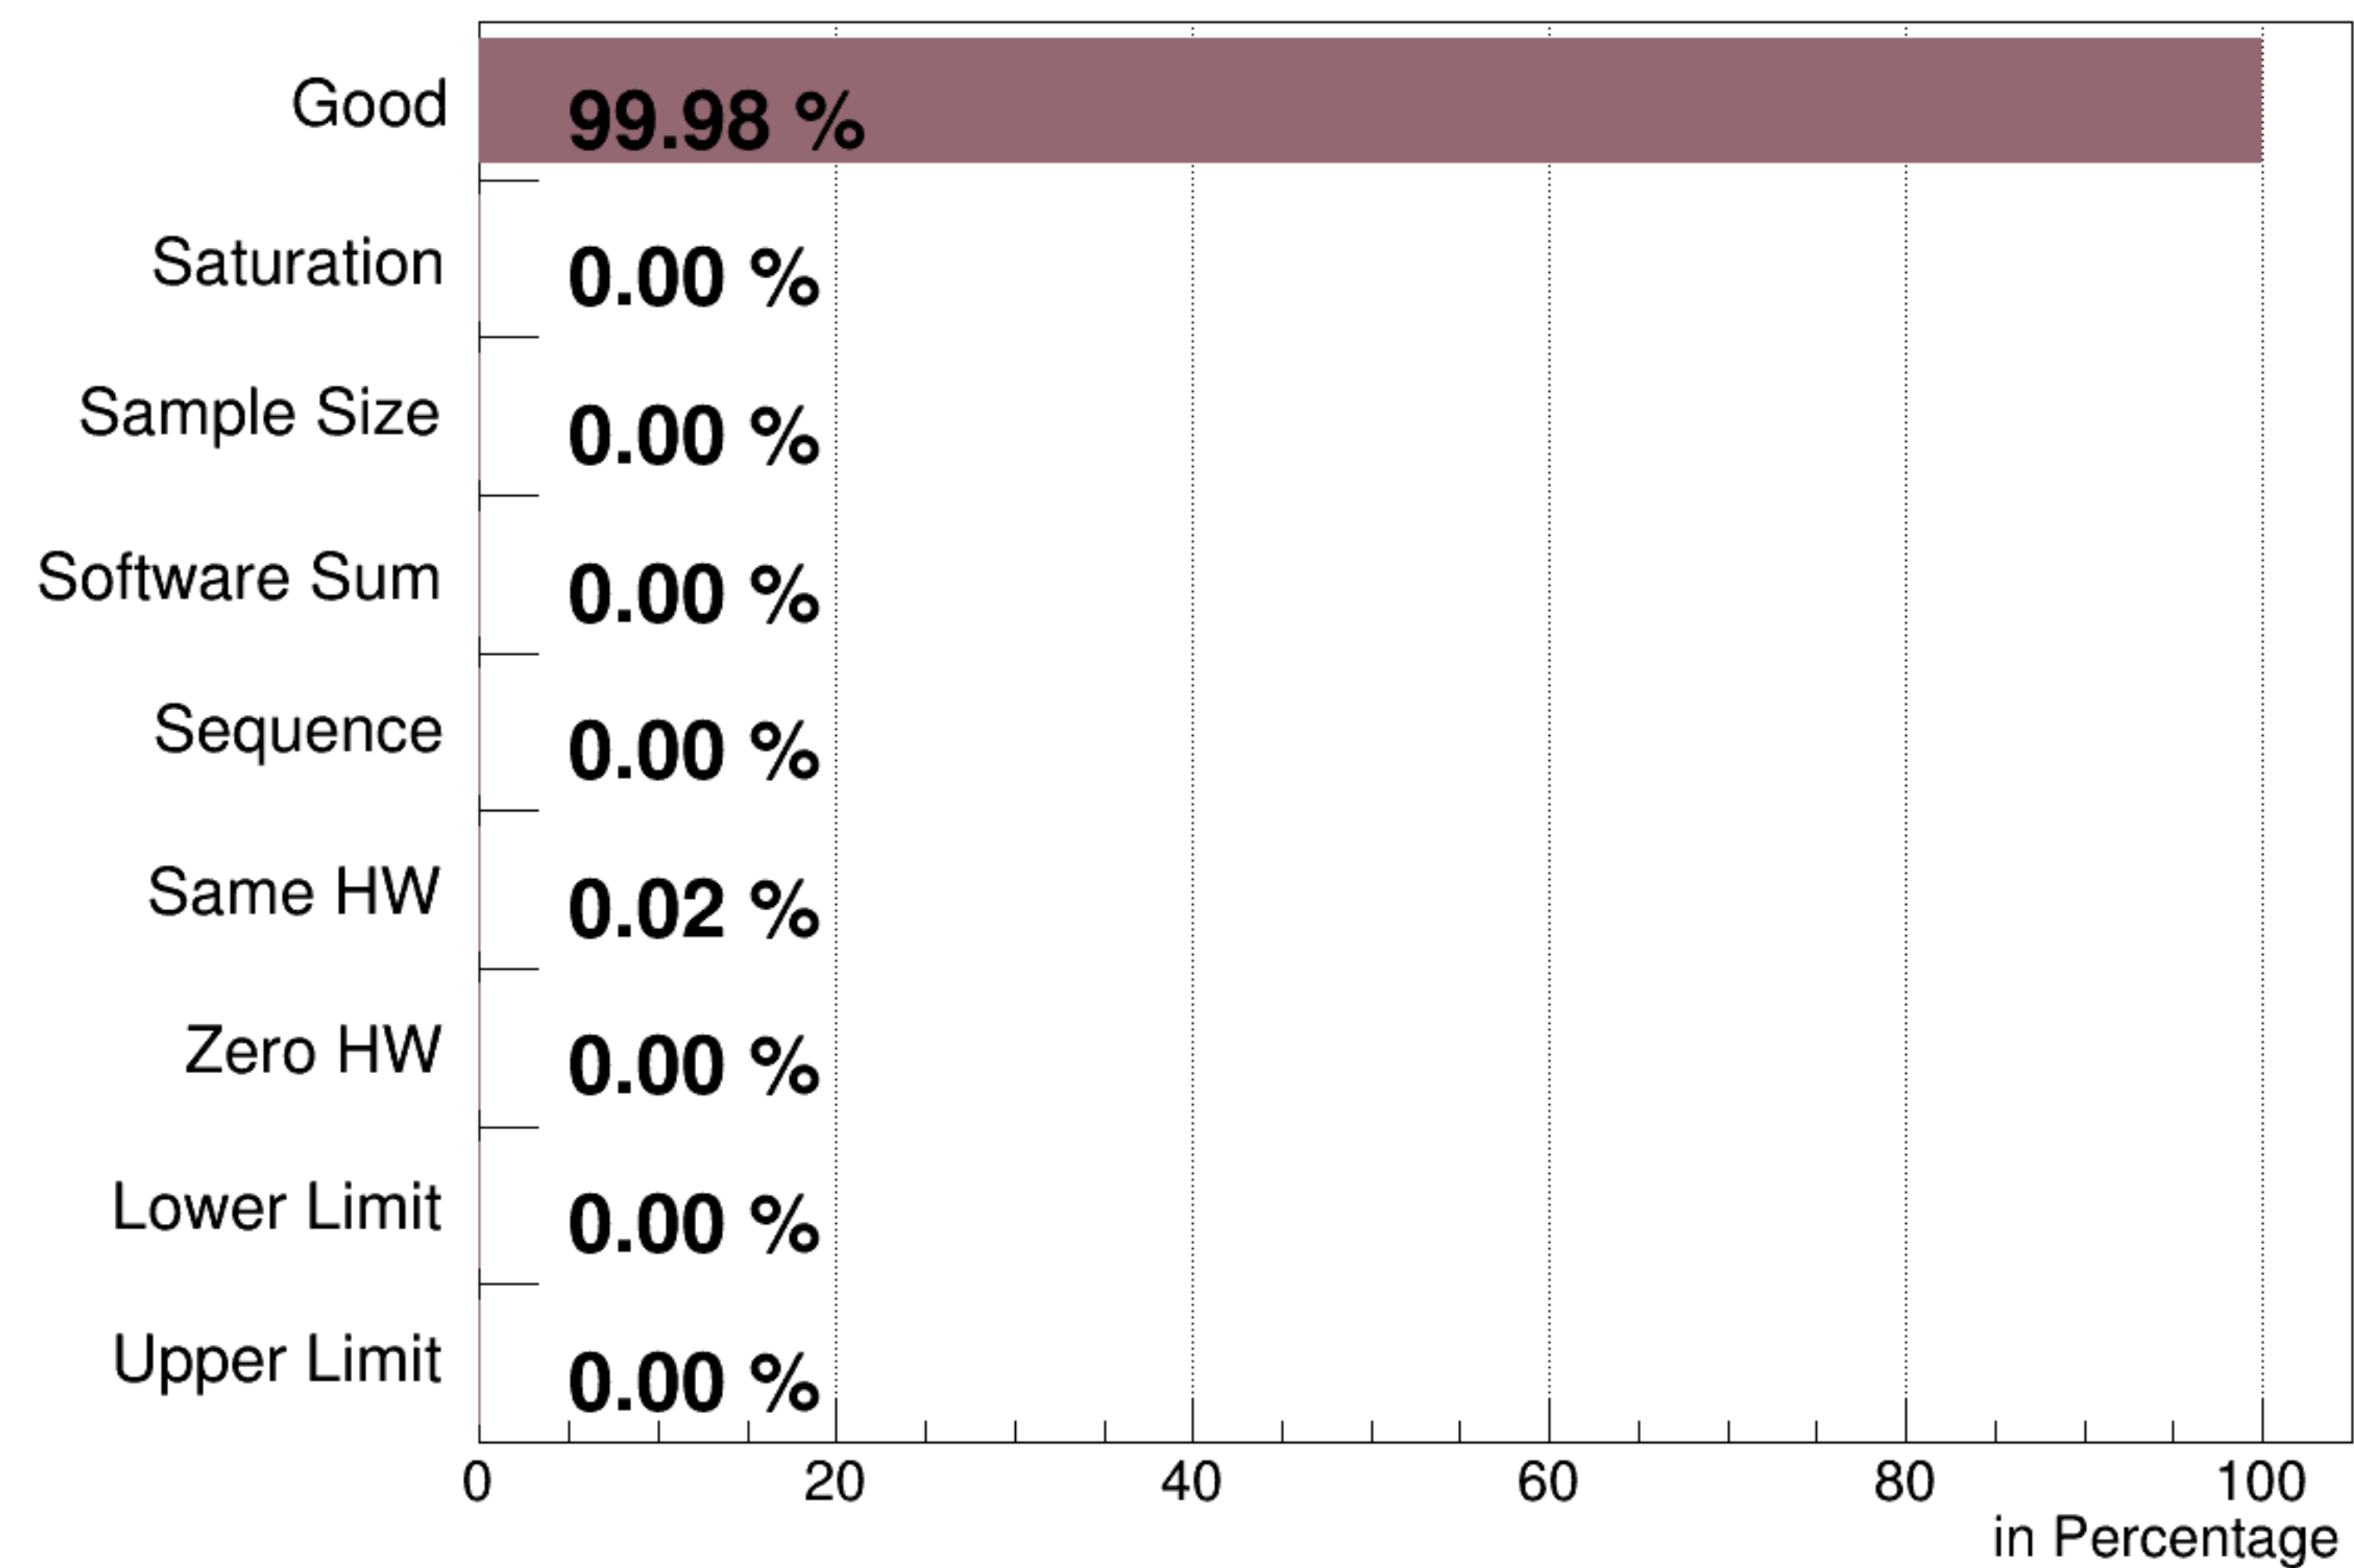


bcm_an_ds3 Device Error Counter

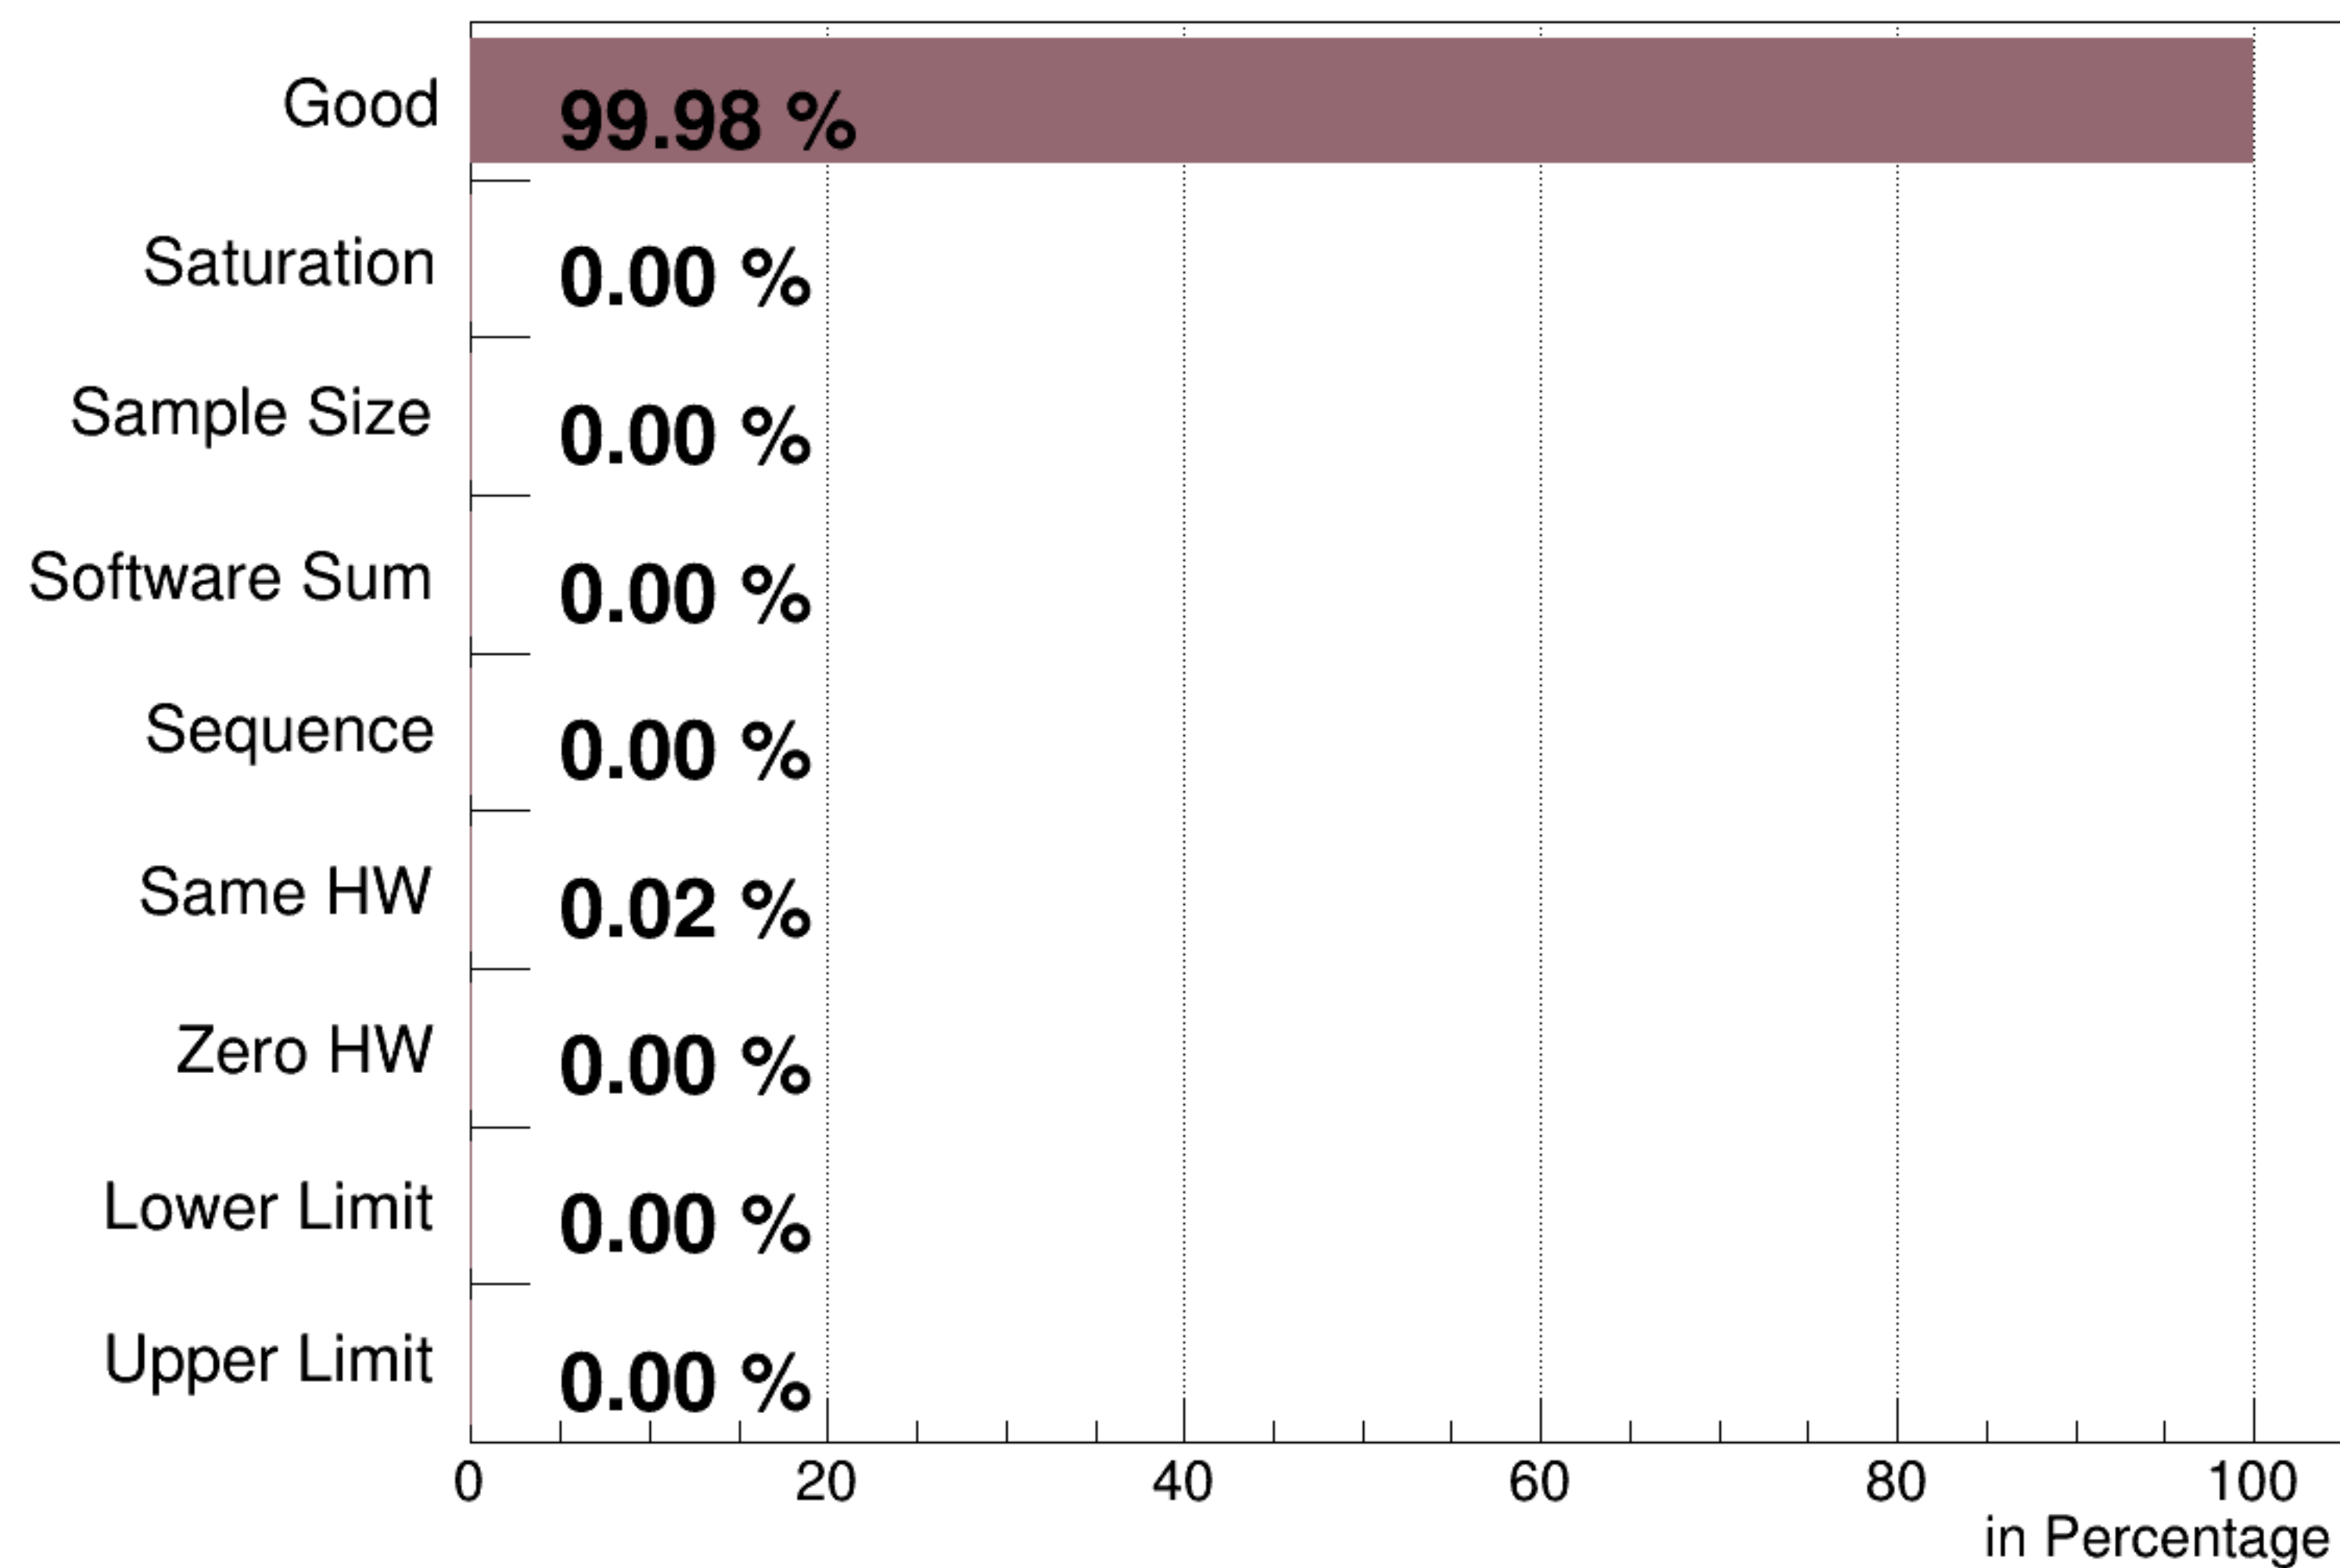 


bcm0l02 Device Error Counter

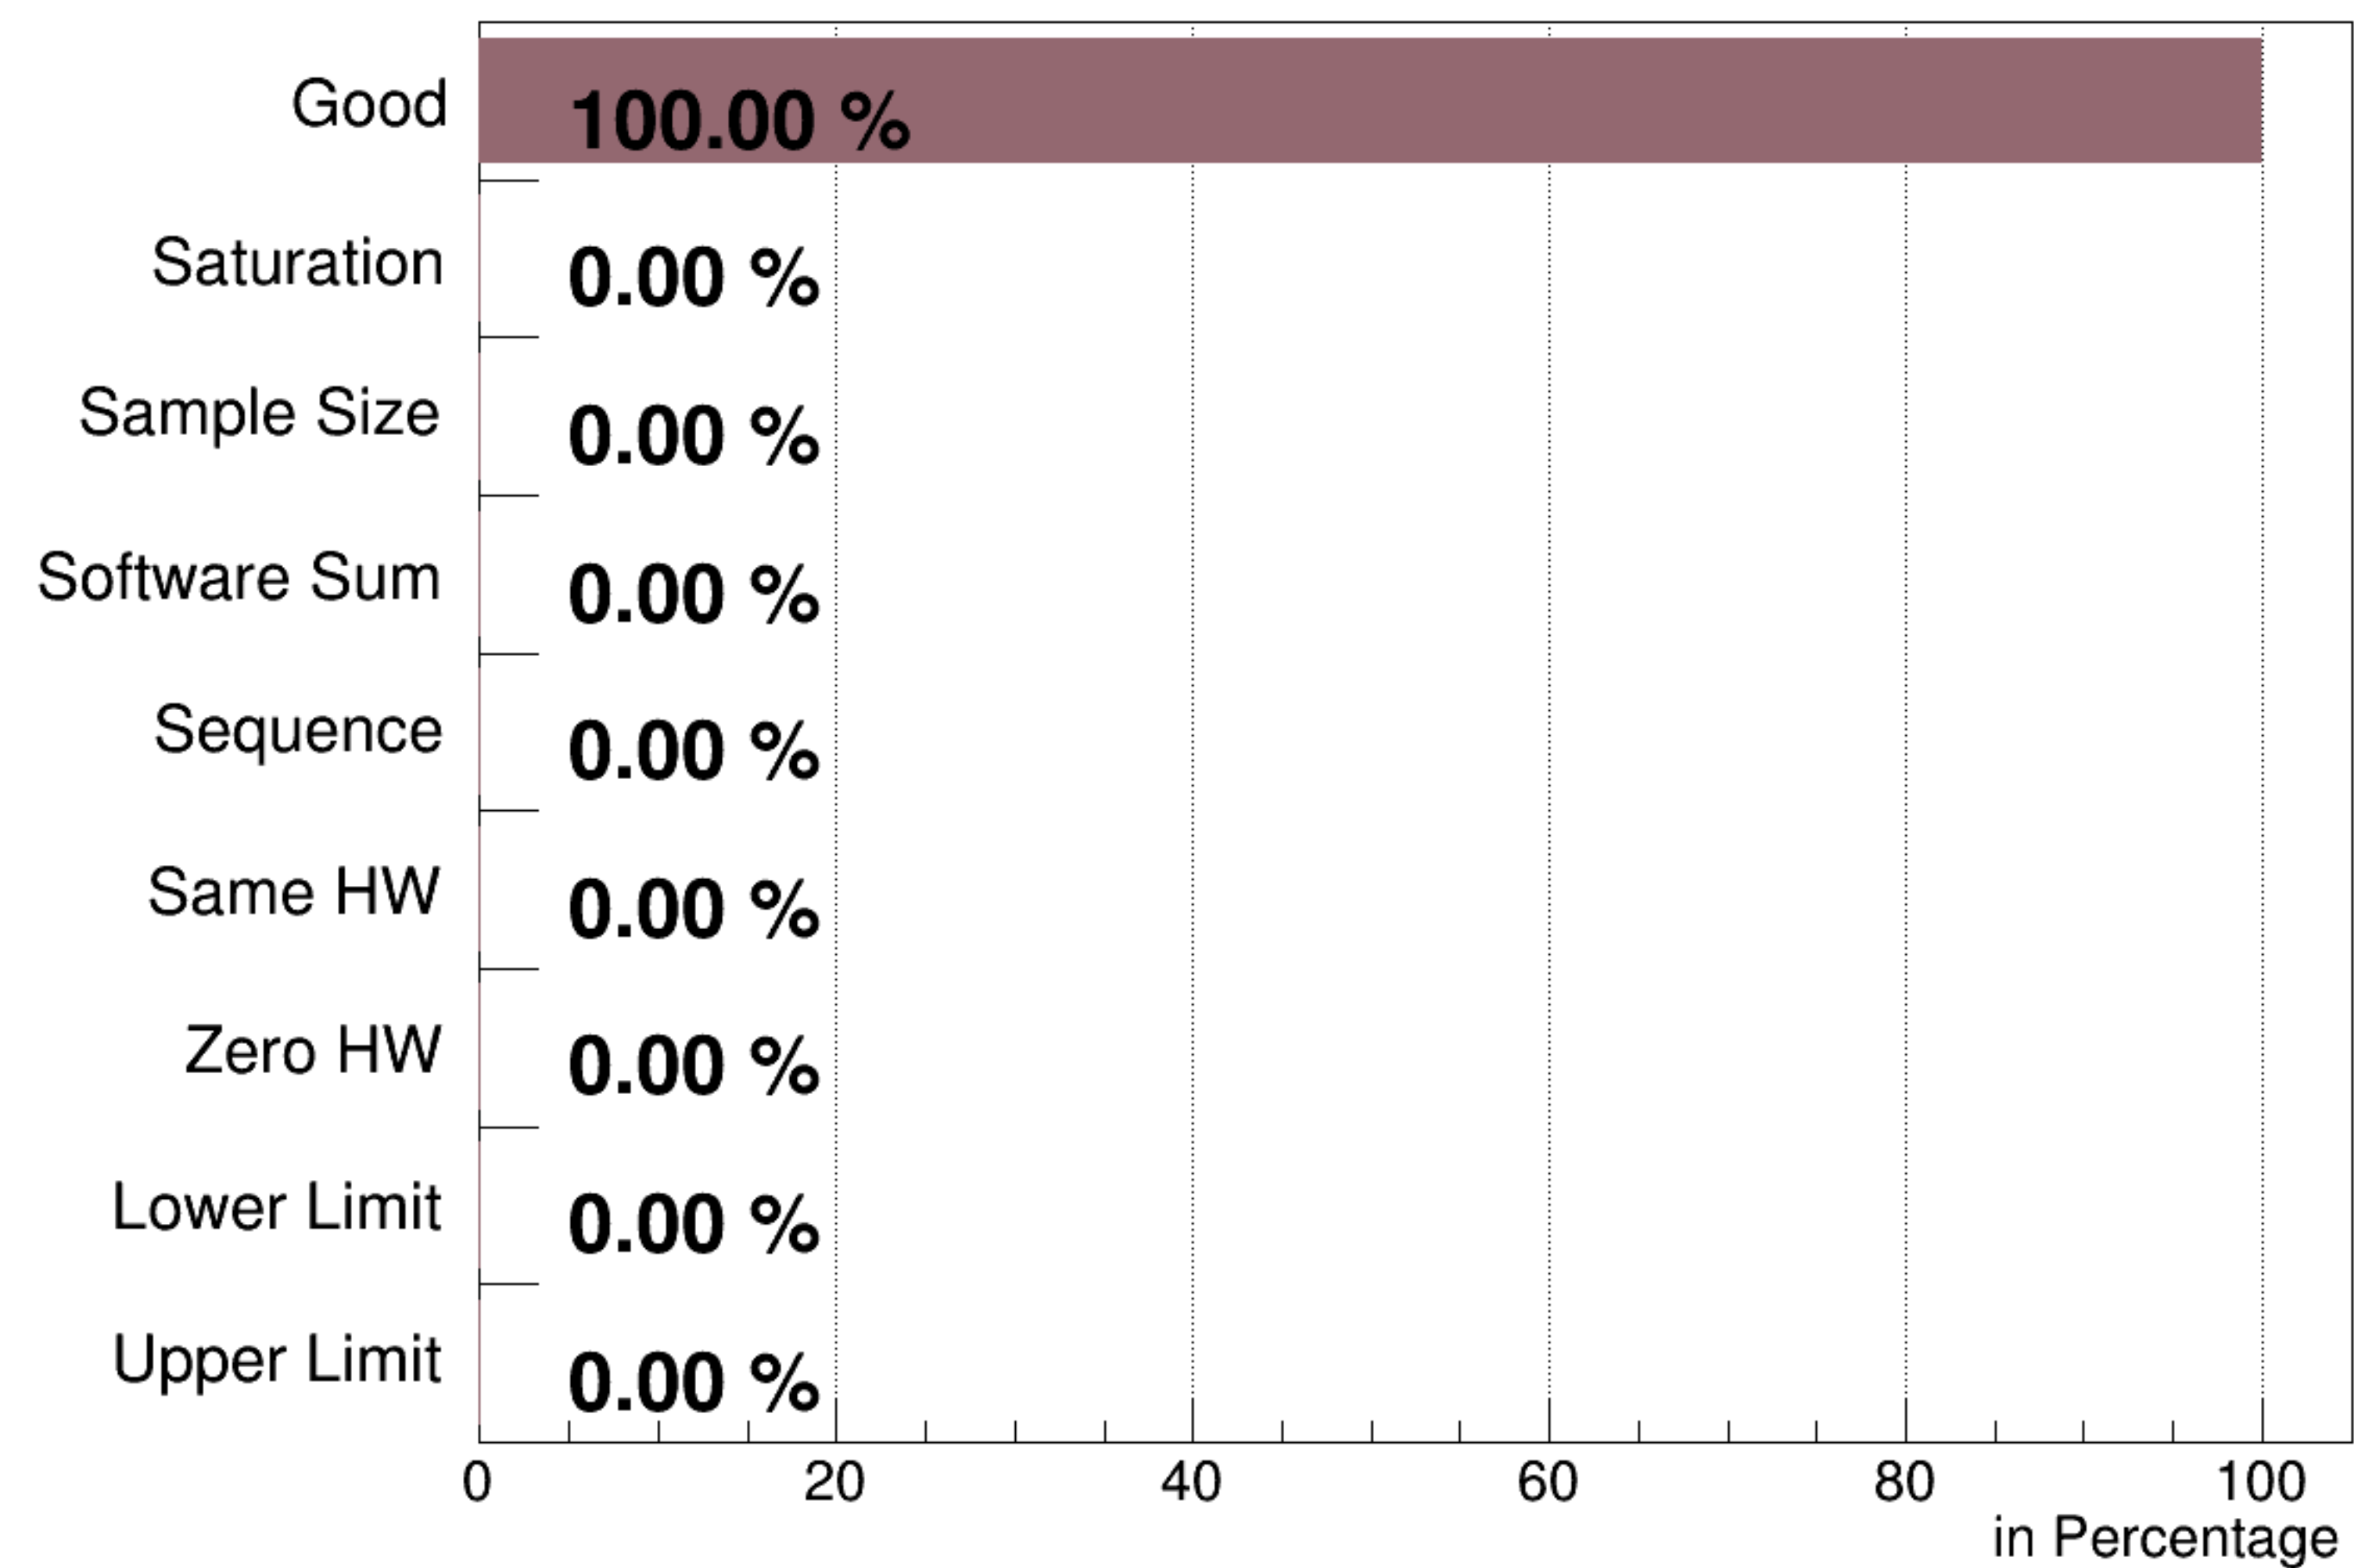 


usl Device Error Counter

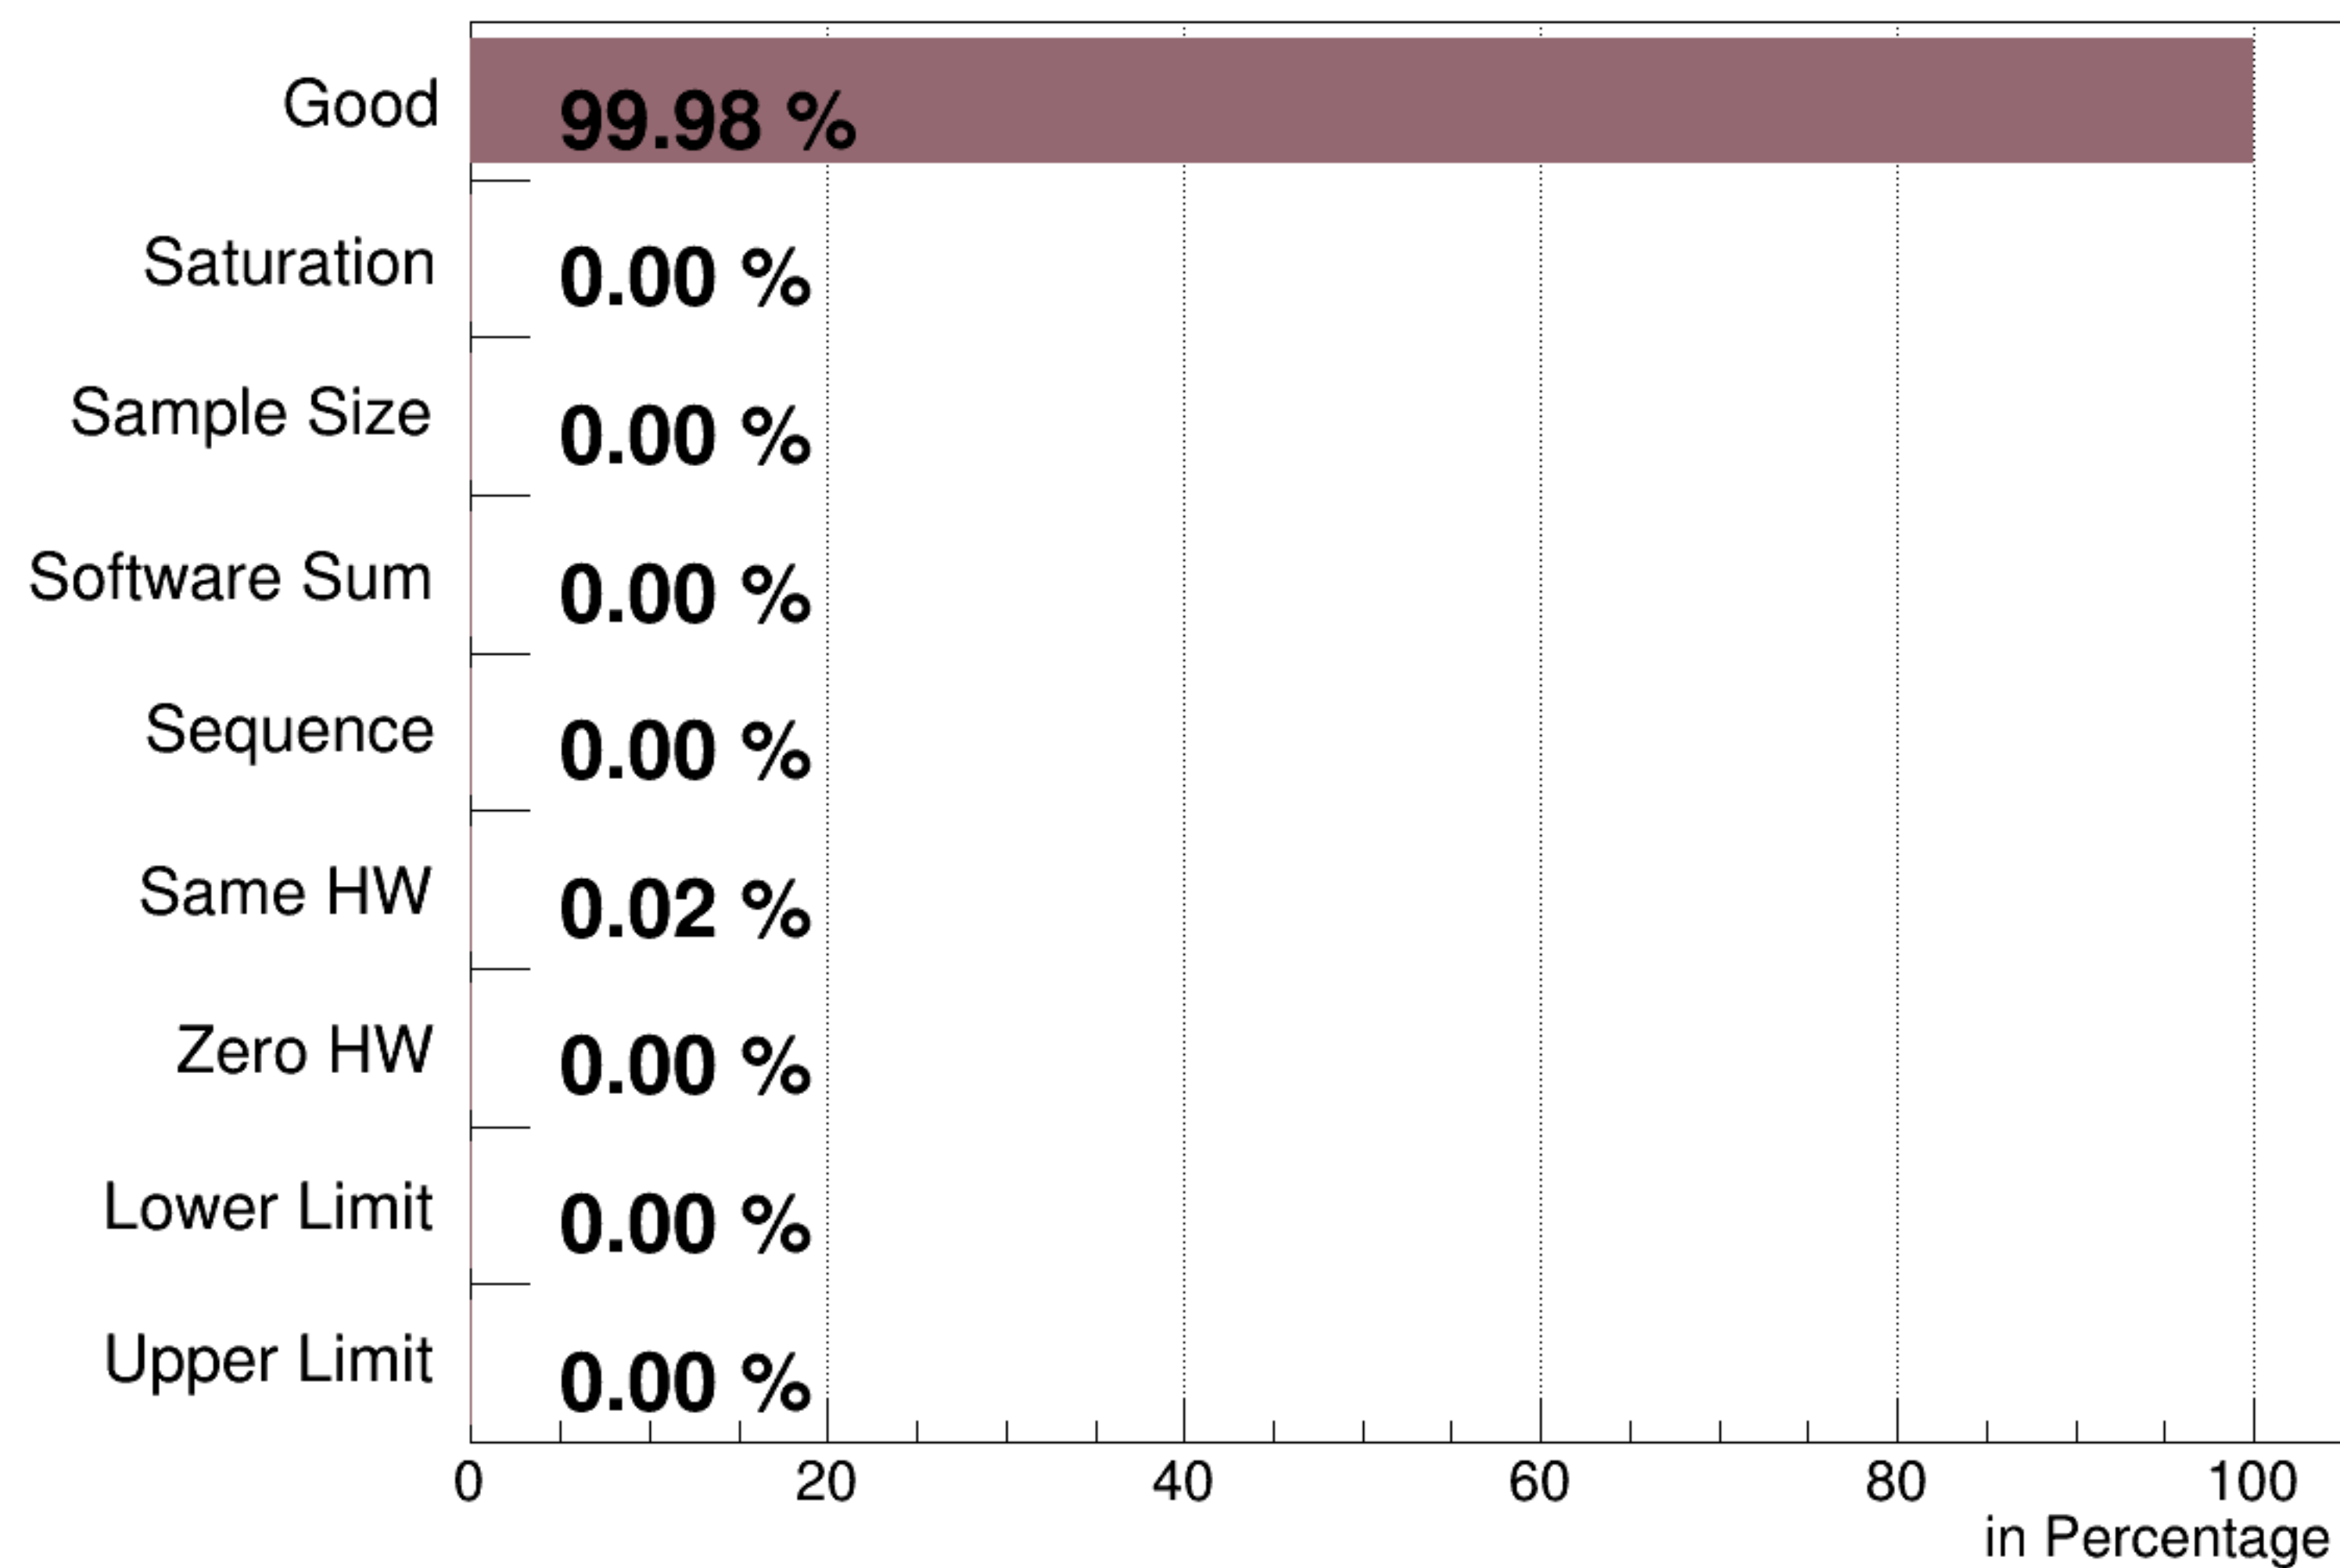 


usr Device Error Counter

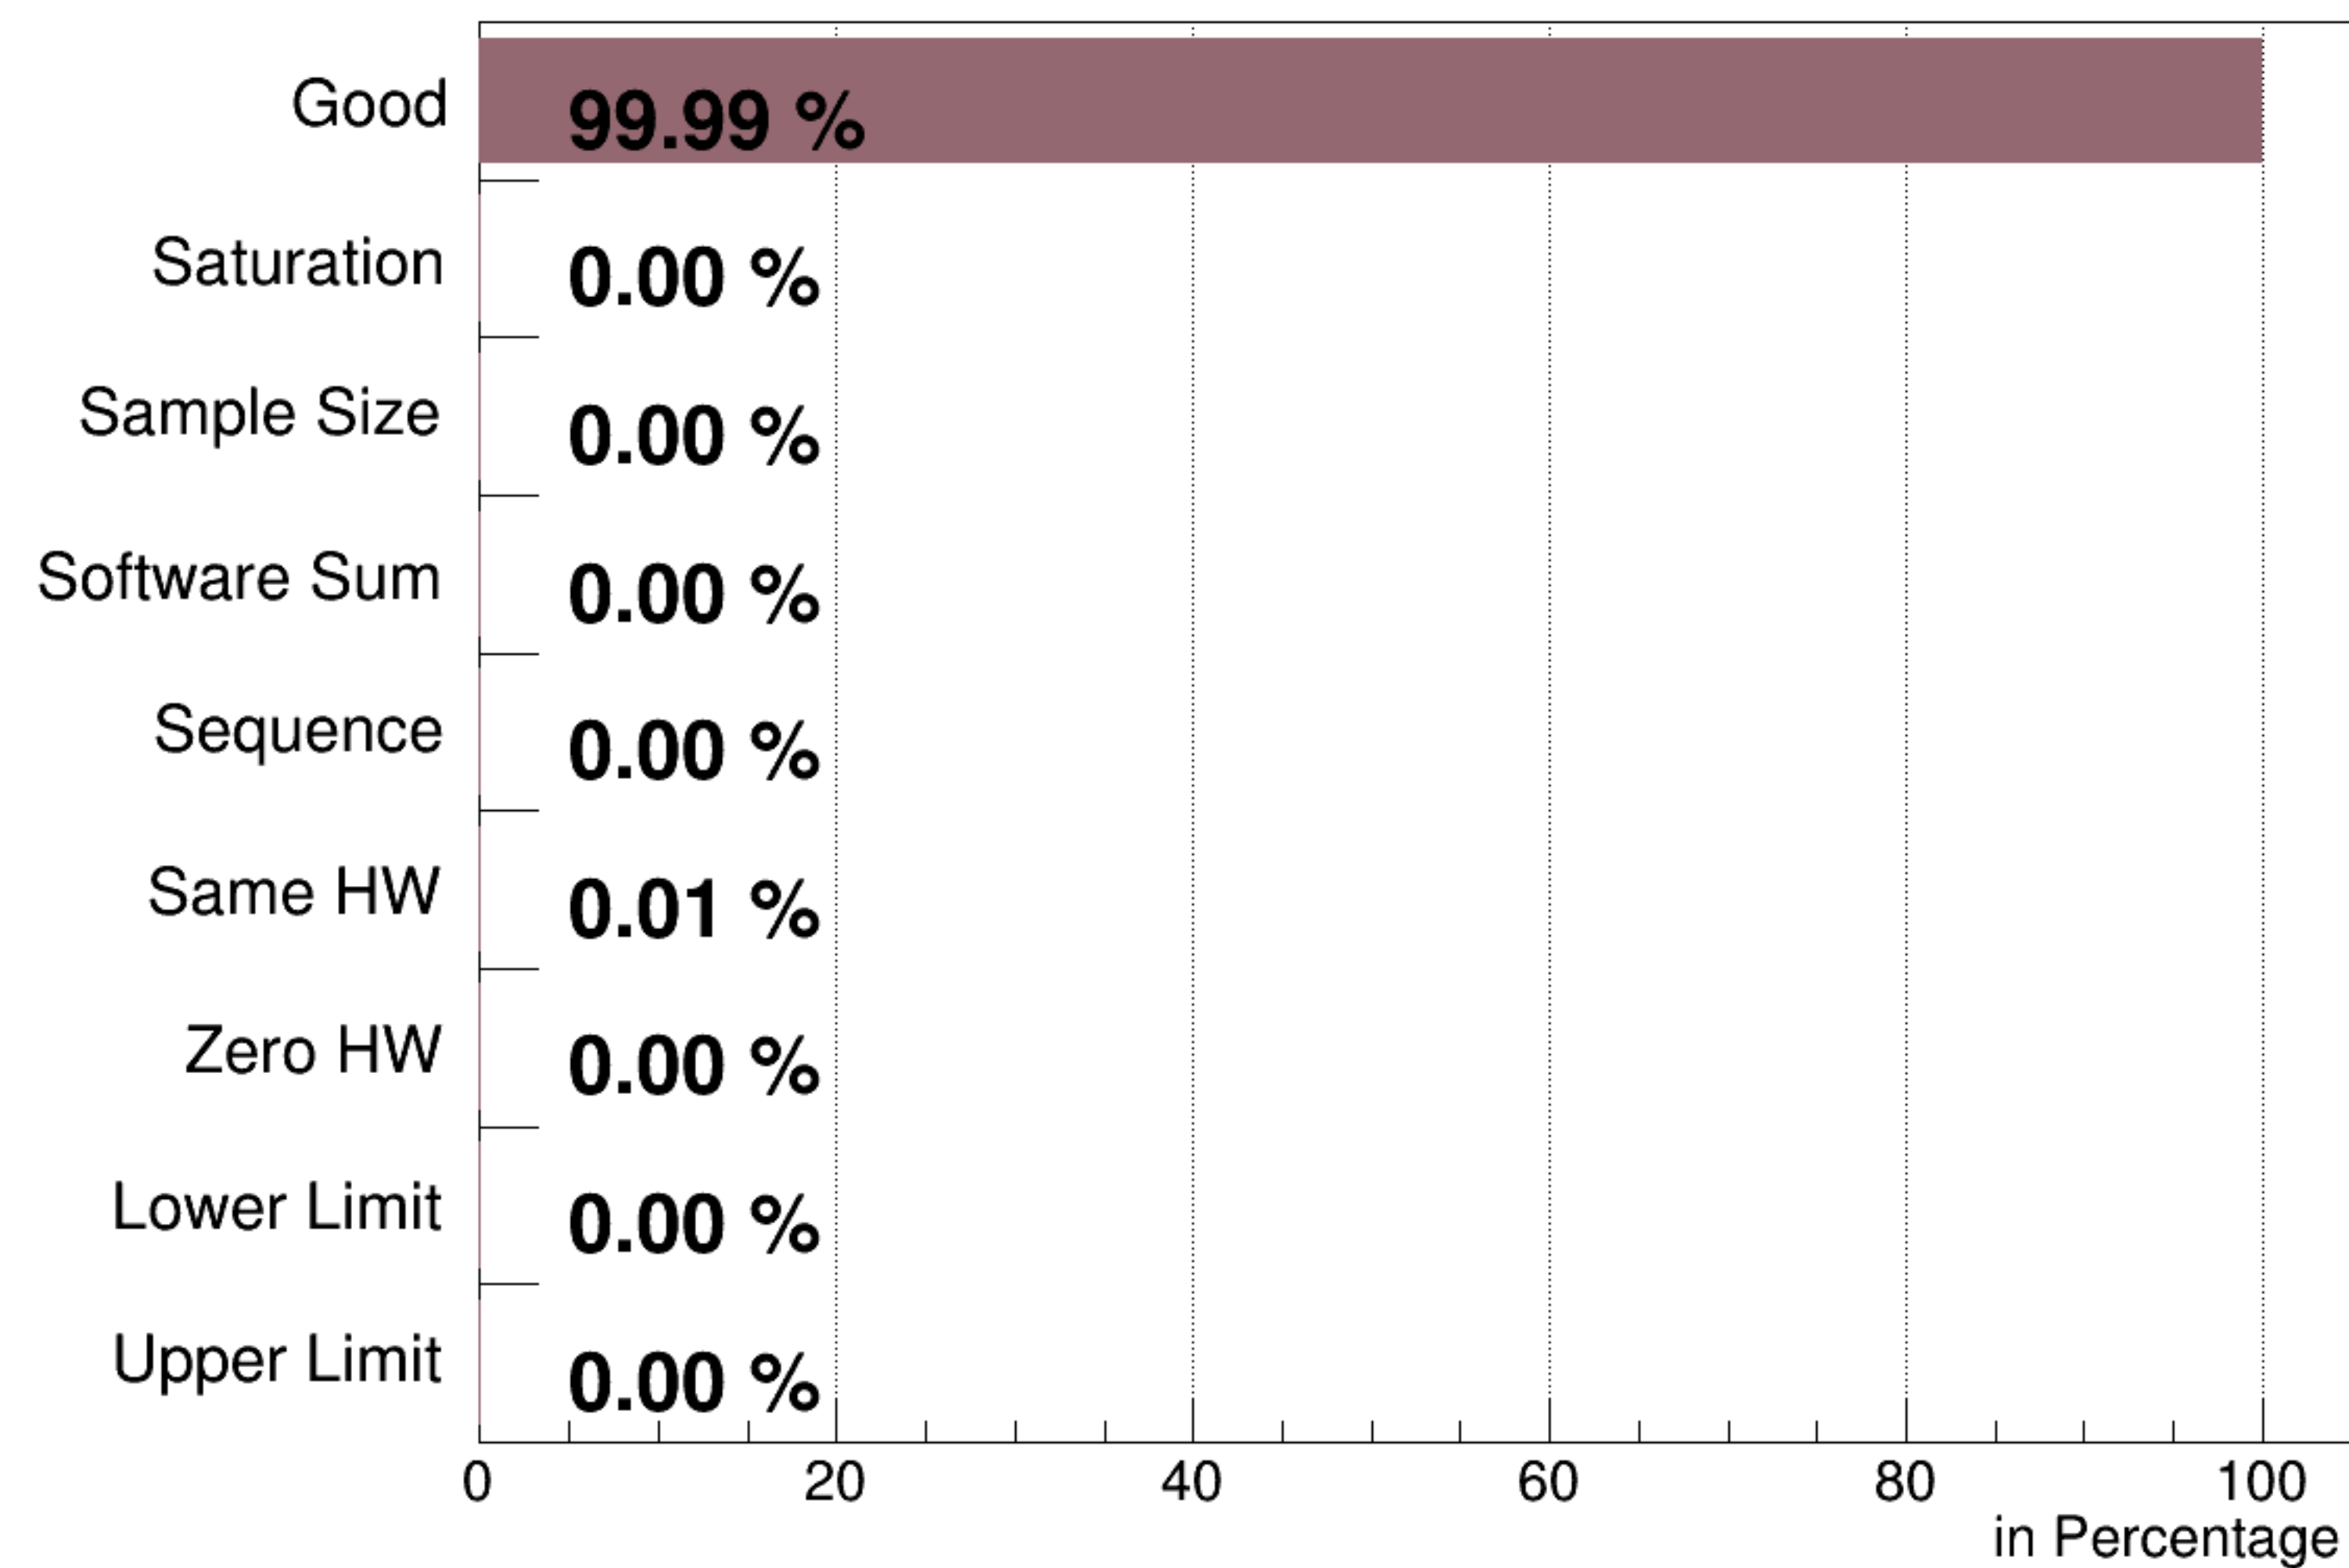 


dsl Device Error Counter

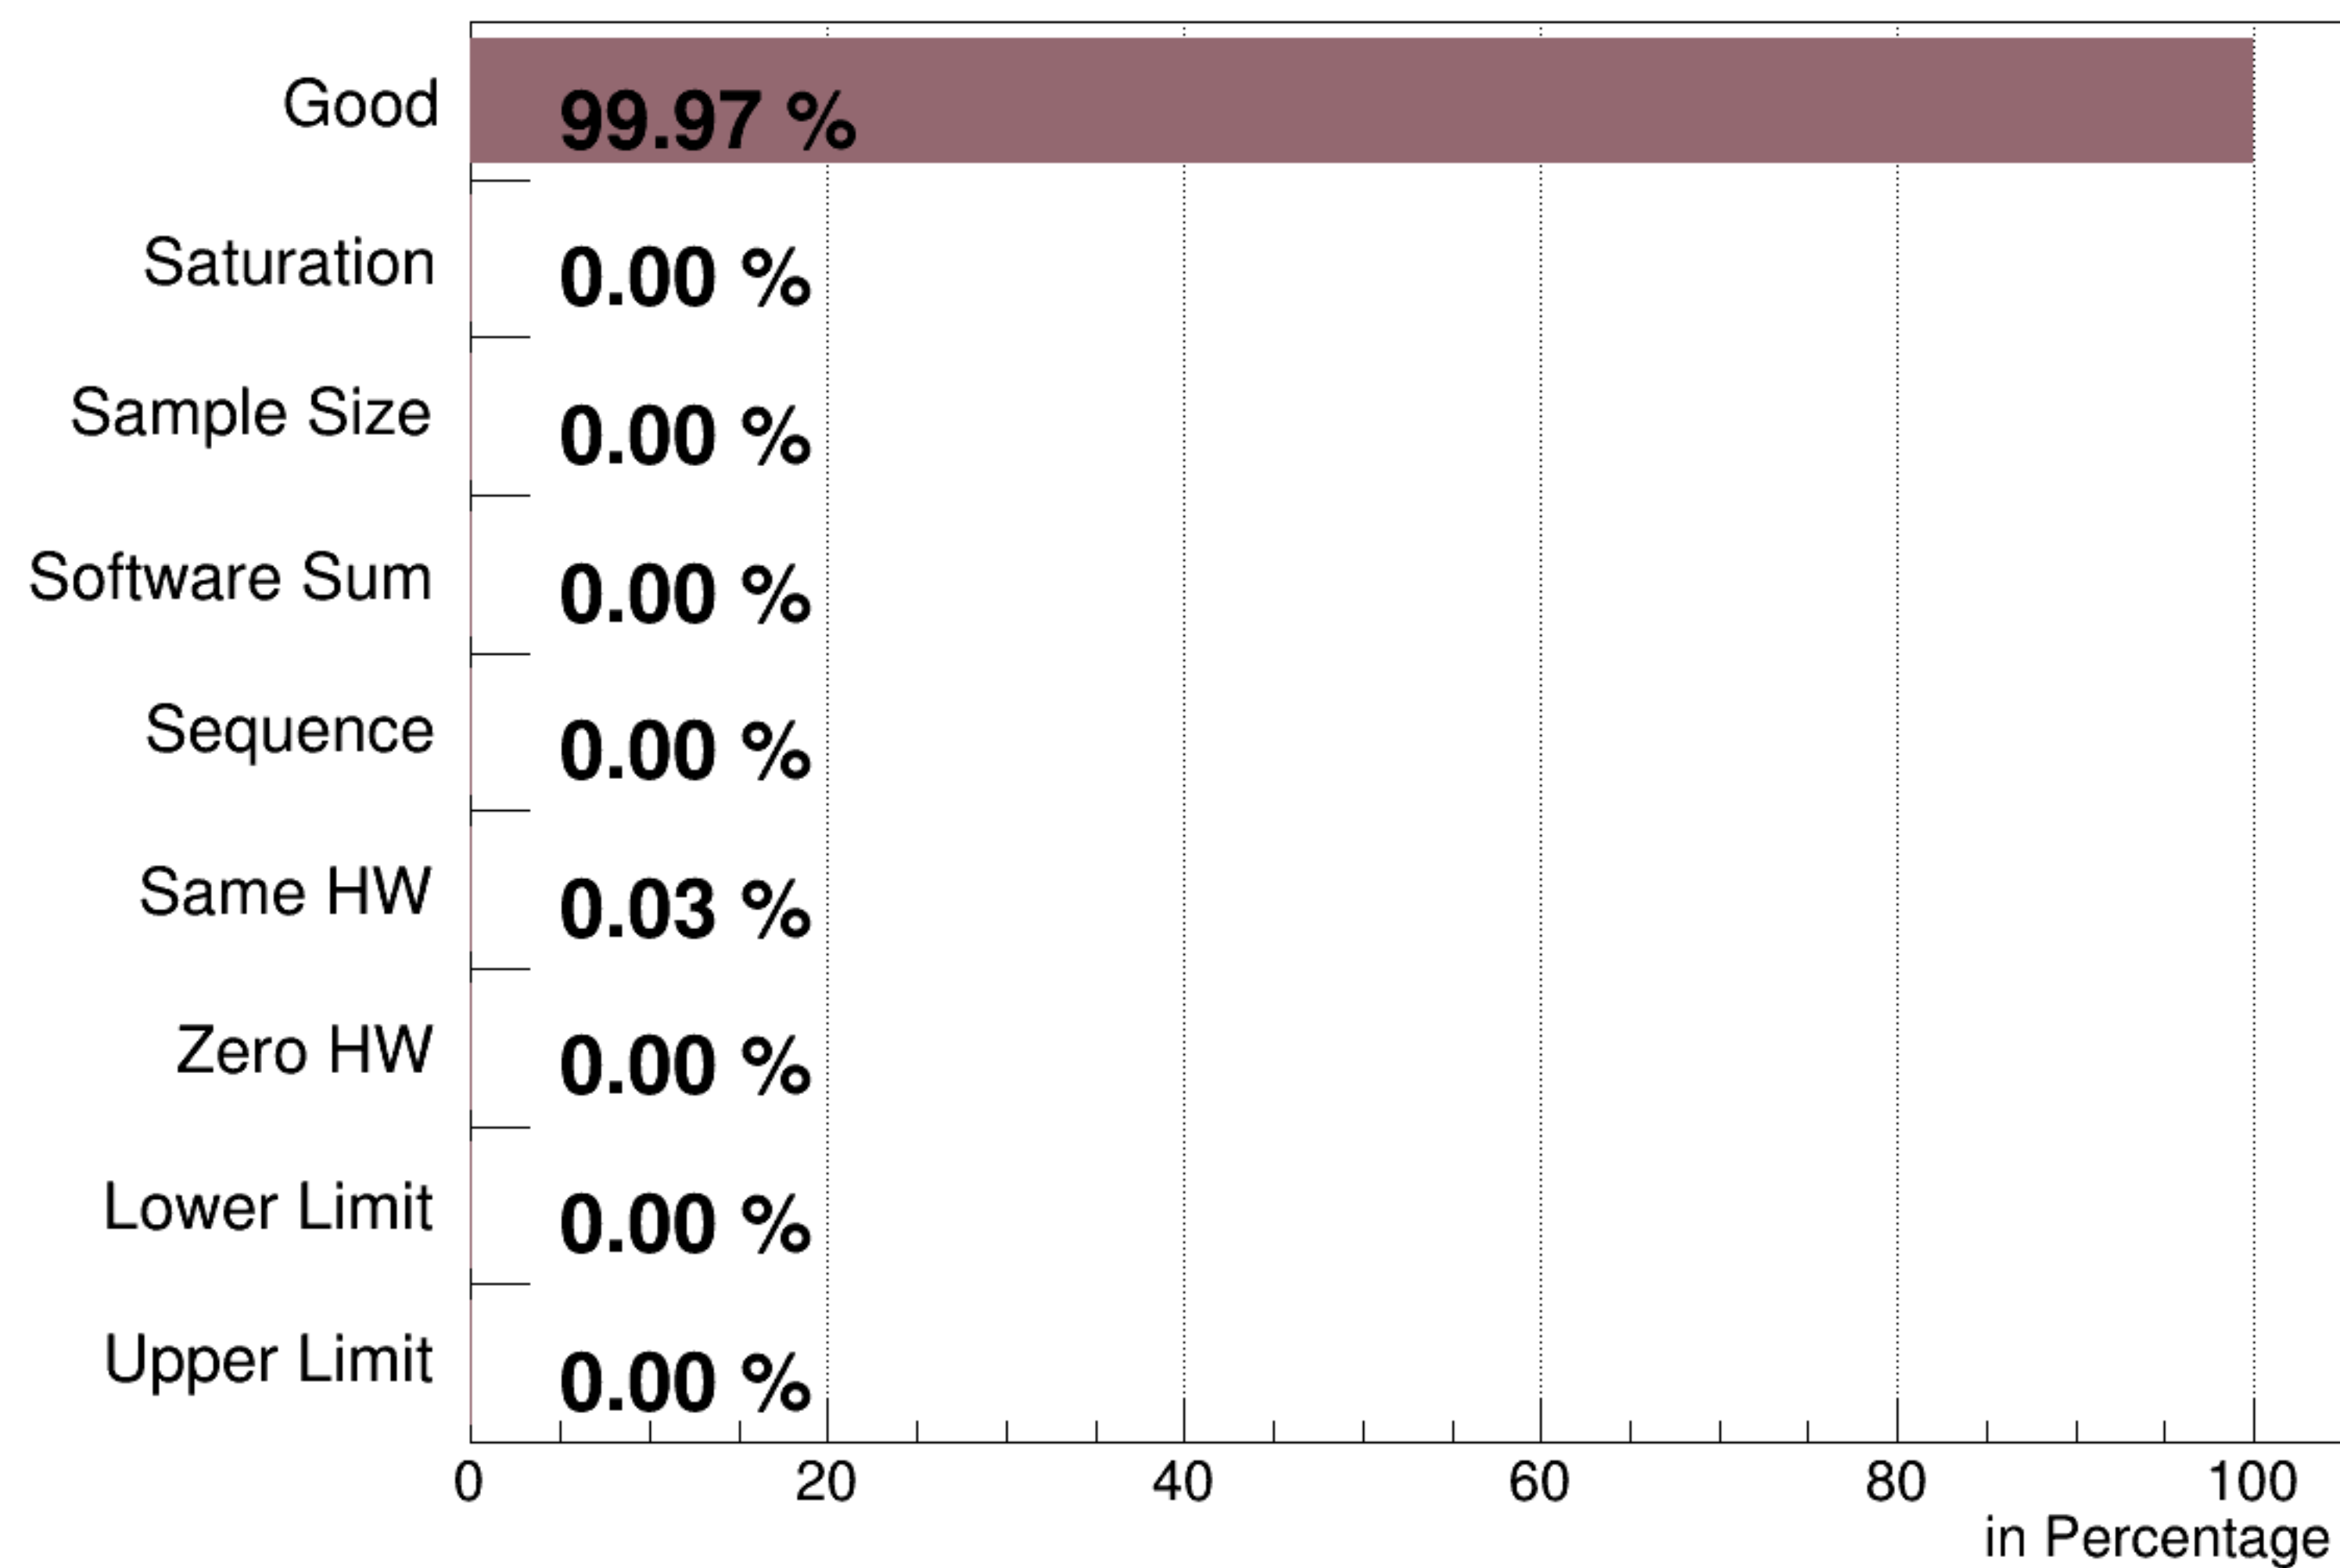 


dsr Device Error Counter

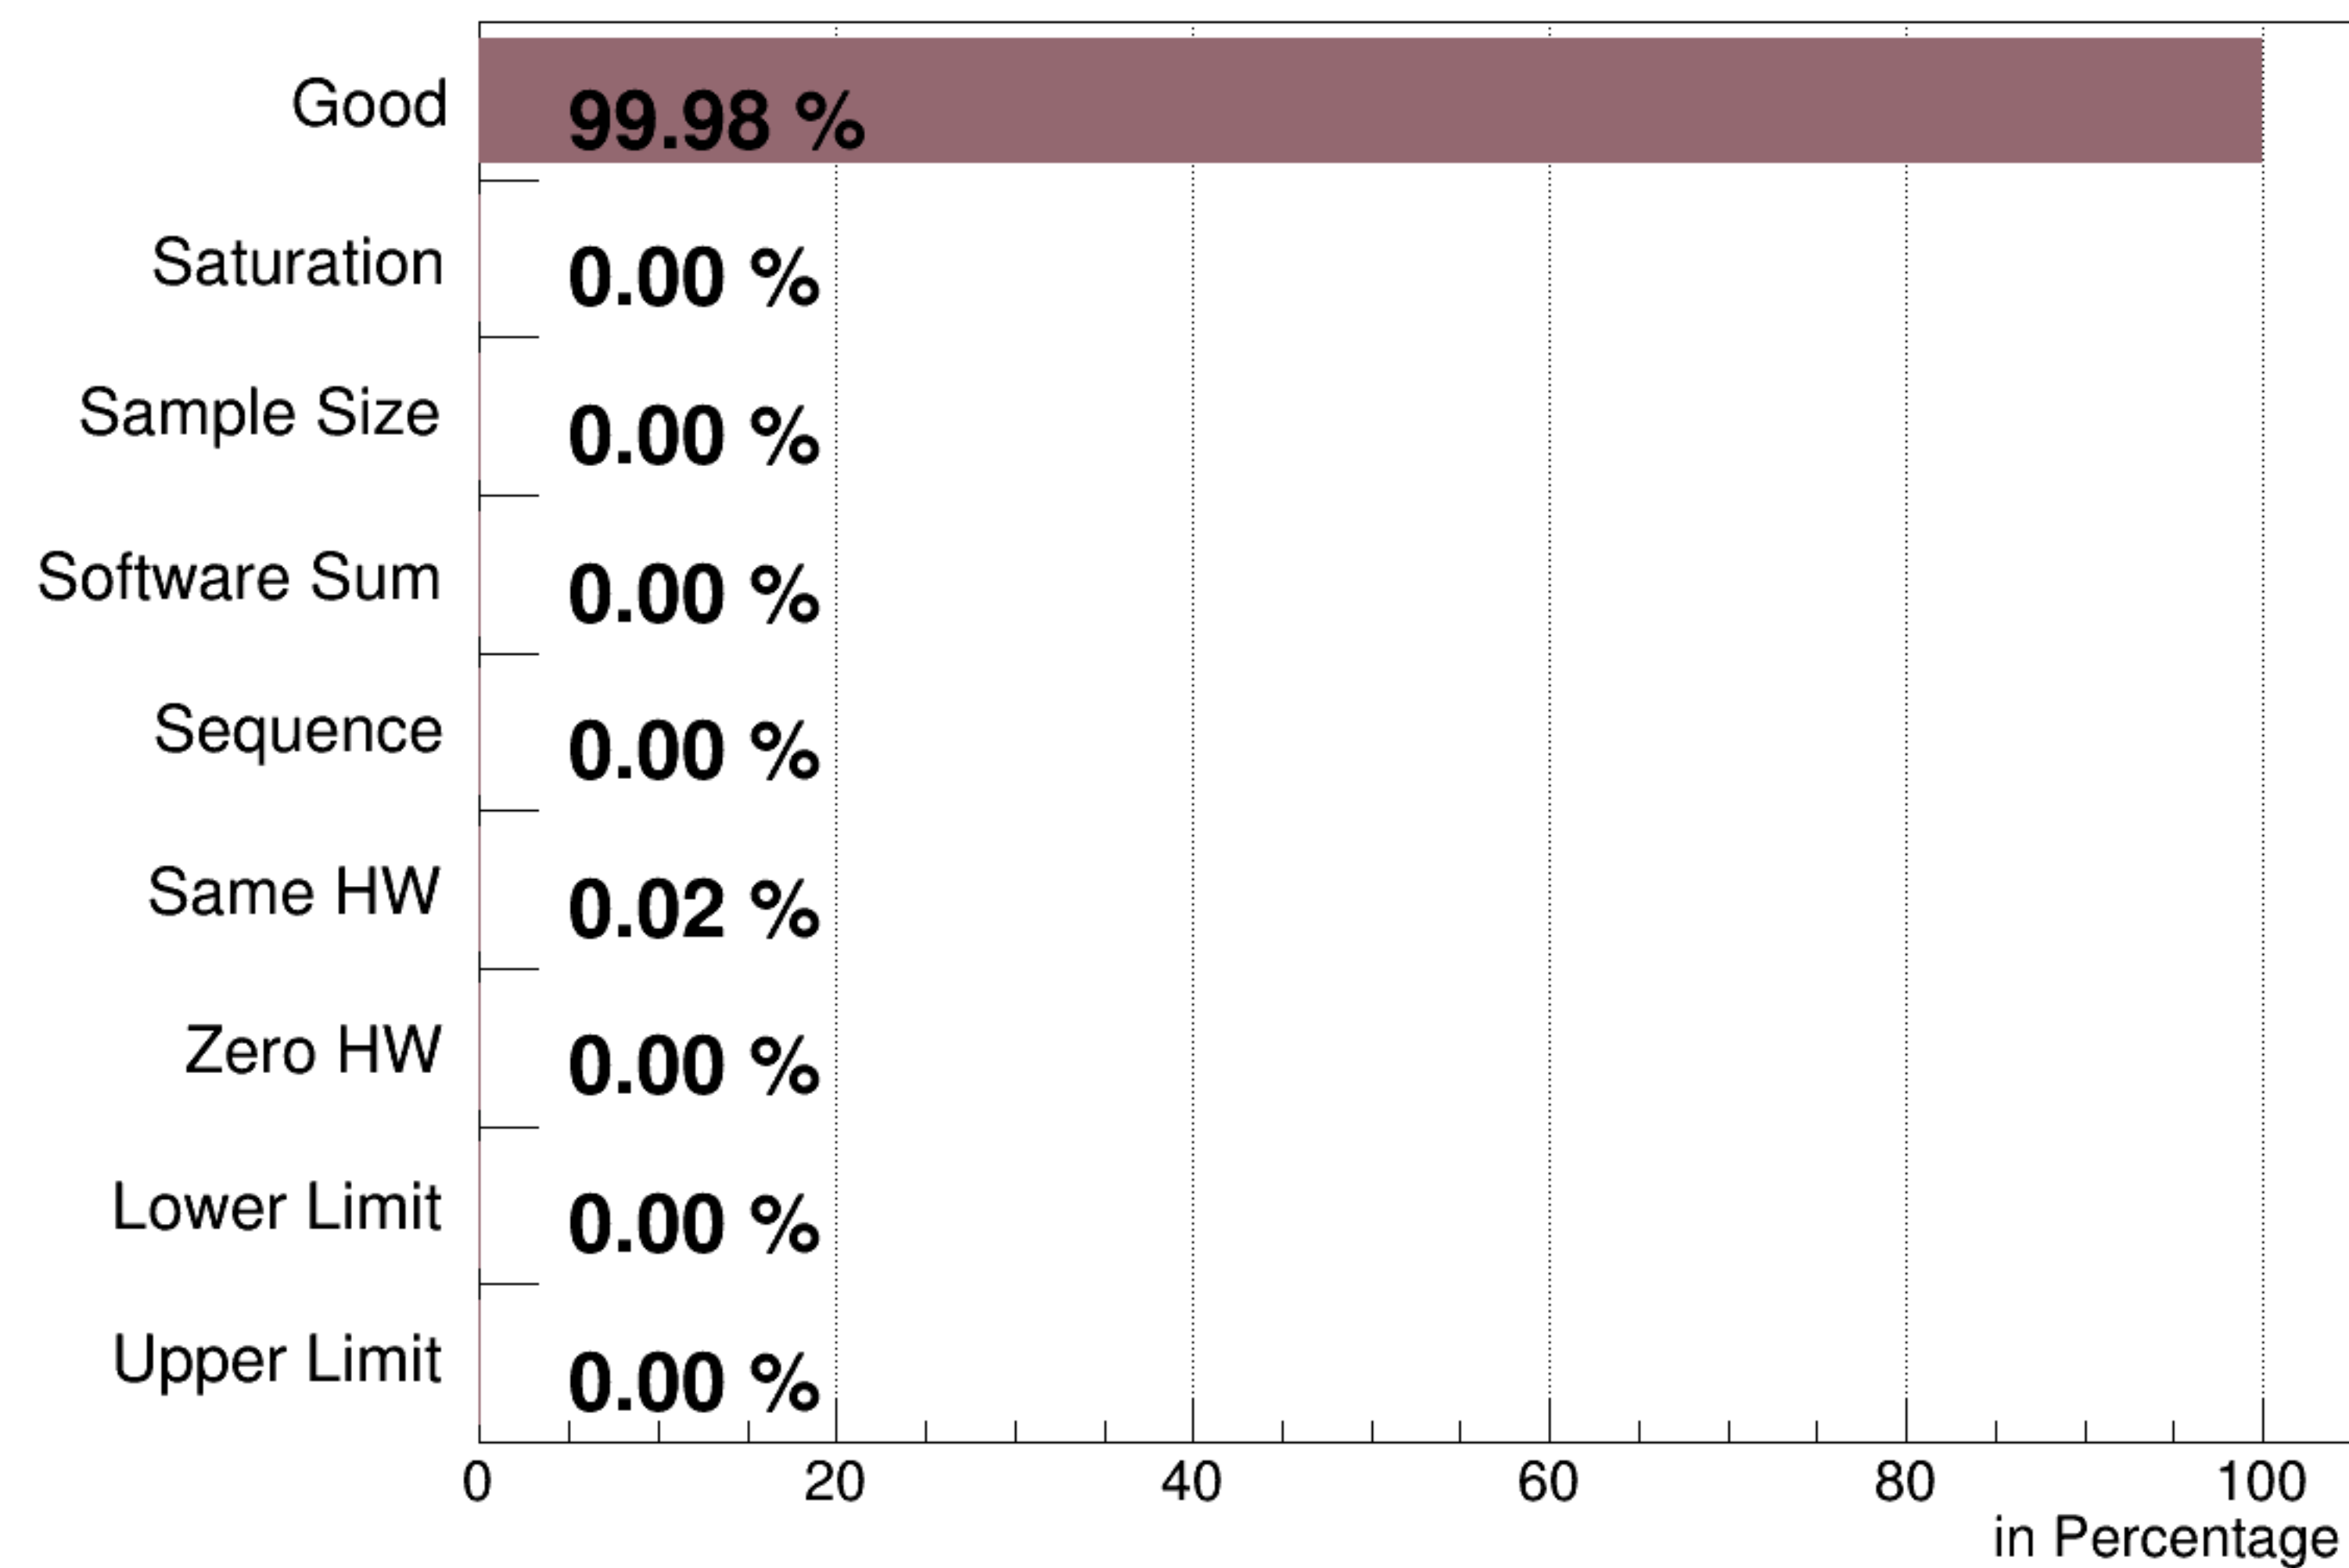 


sam1 Device Error Counter

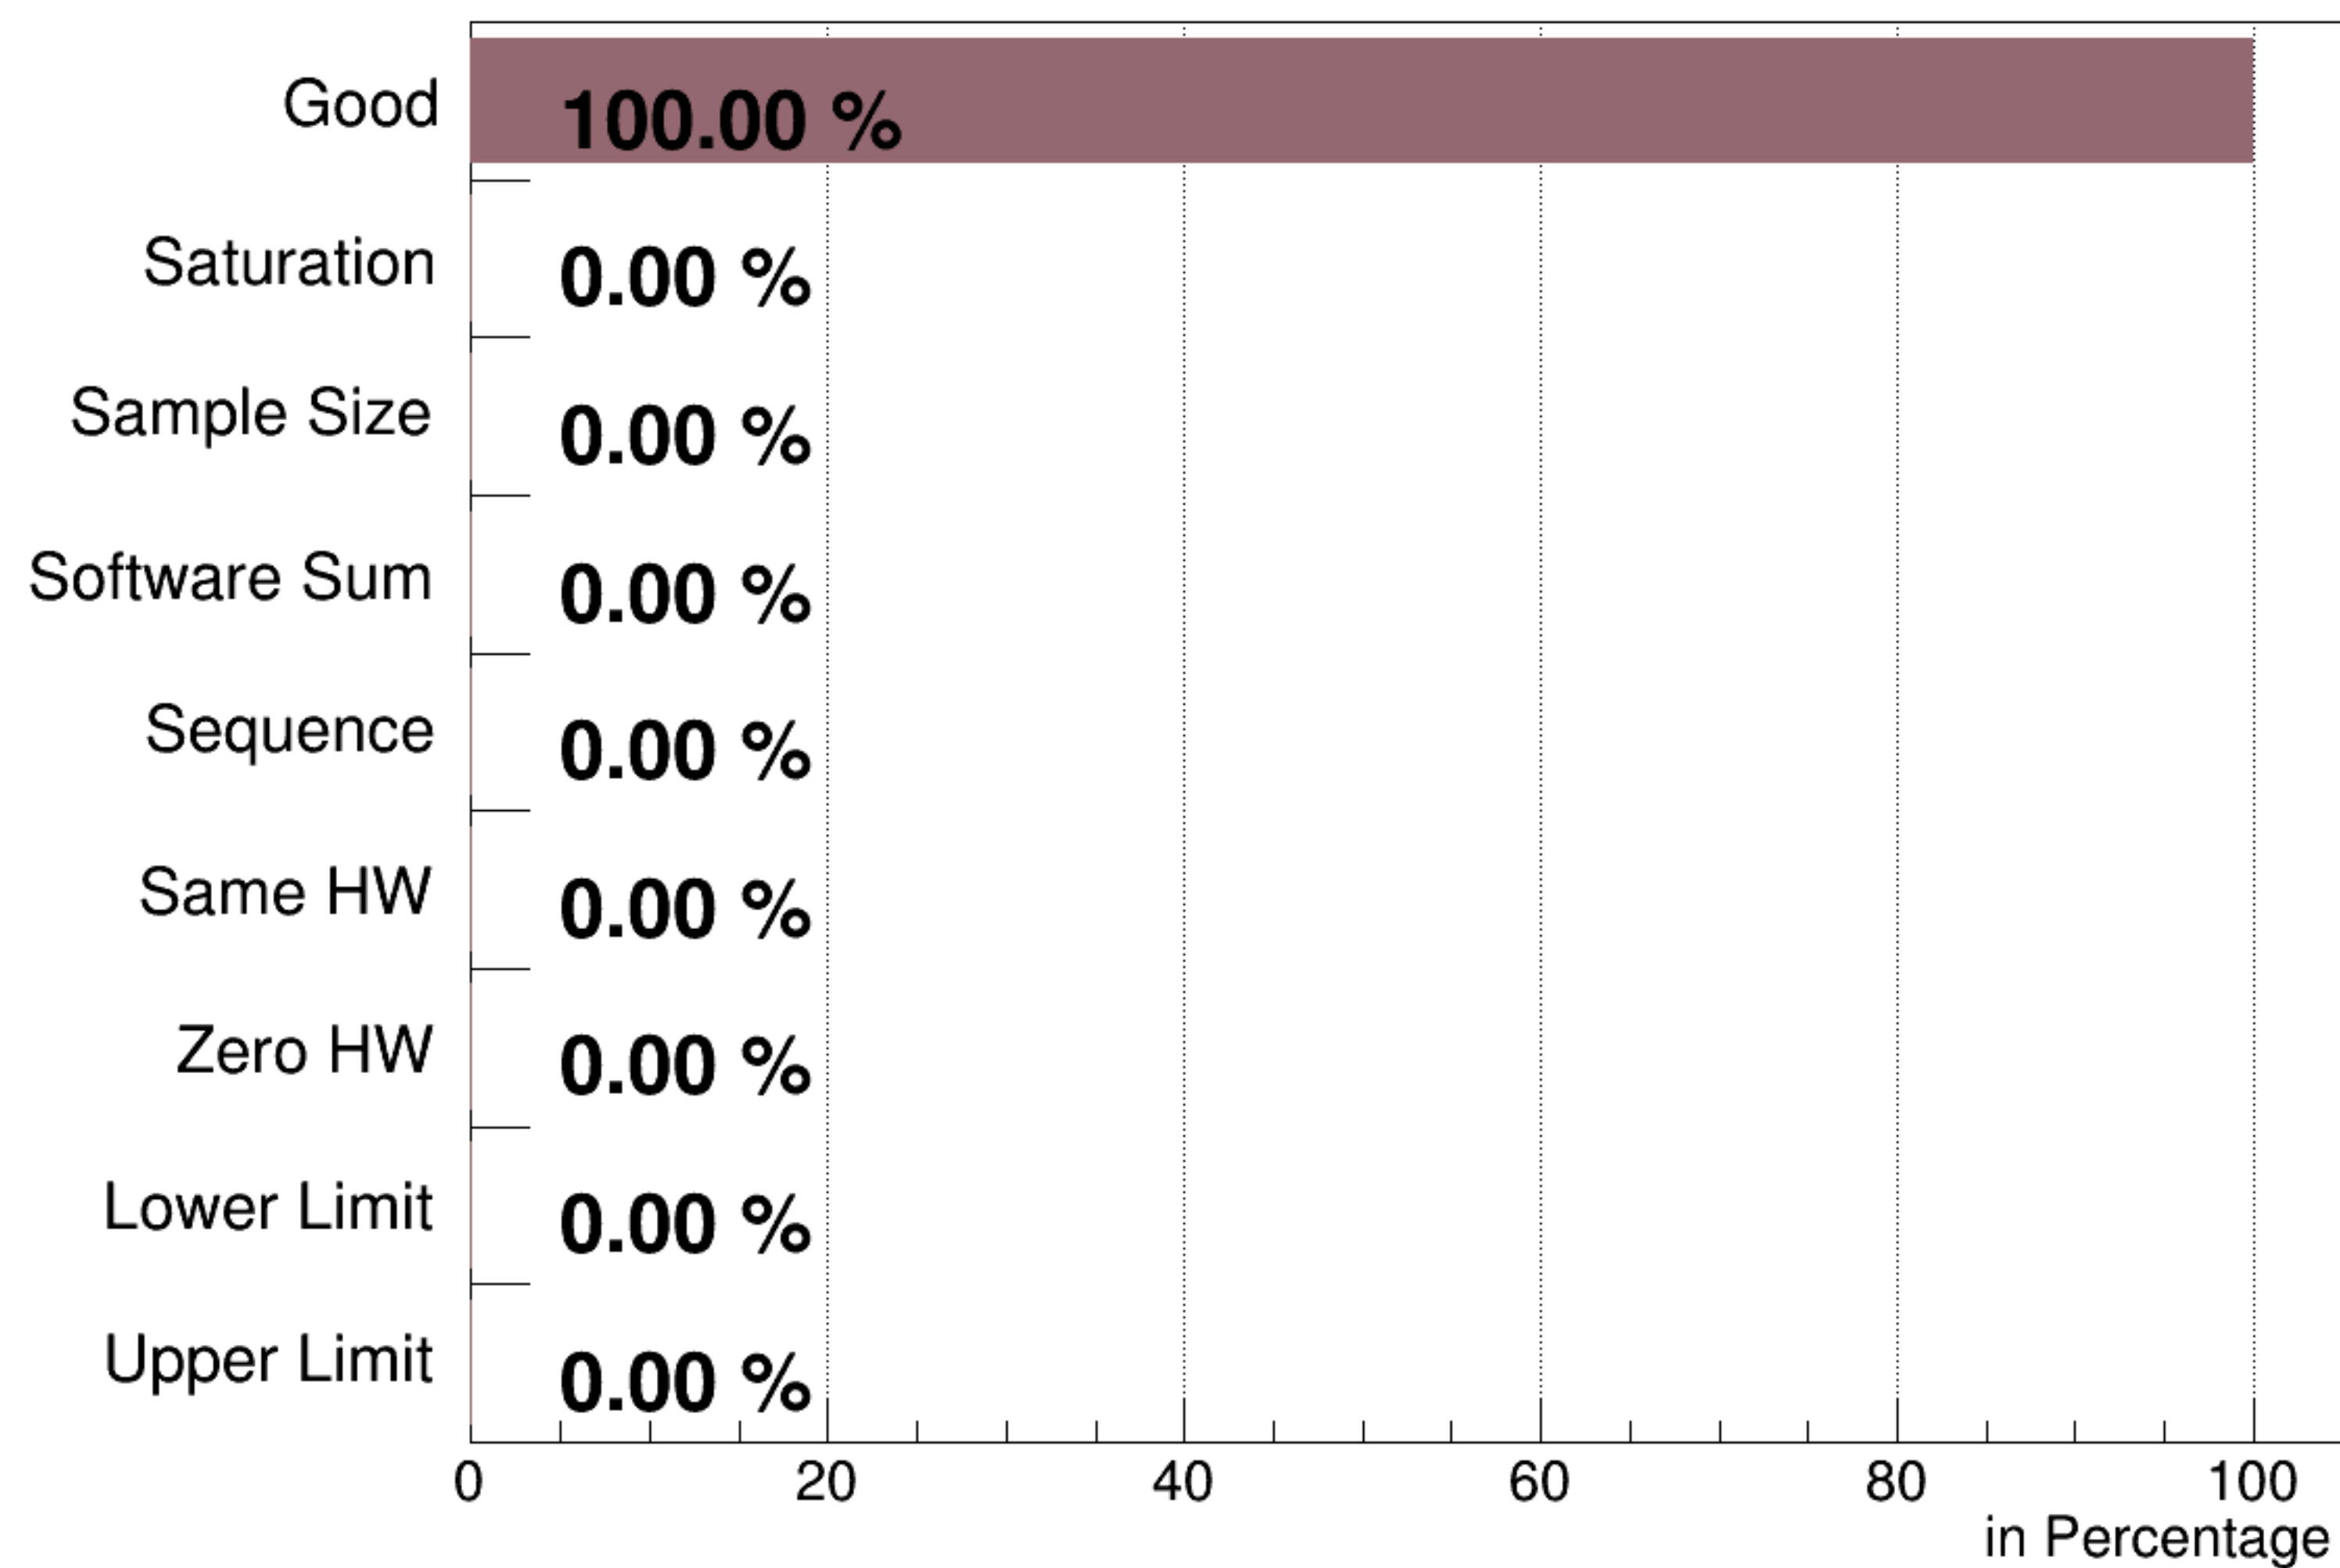 


sam2 Device Error Counter

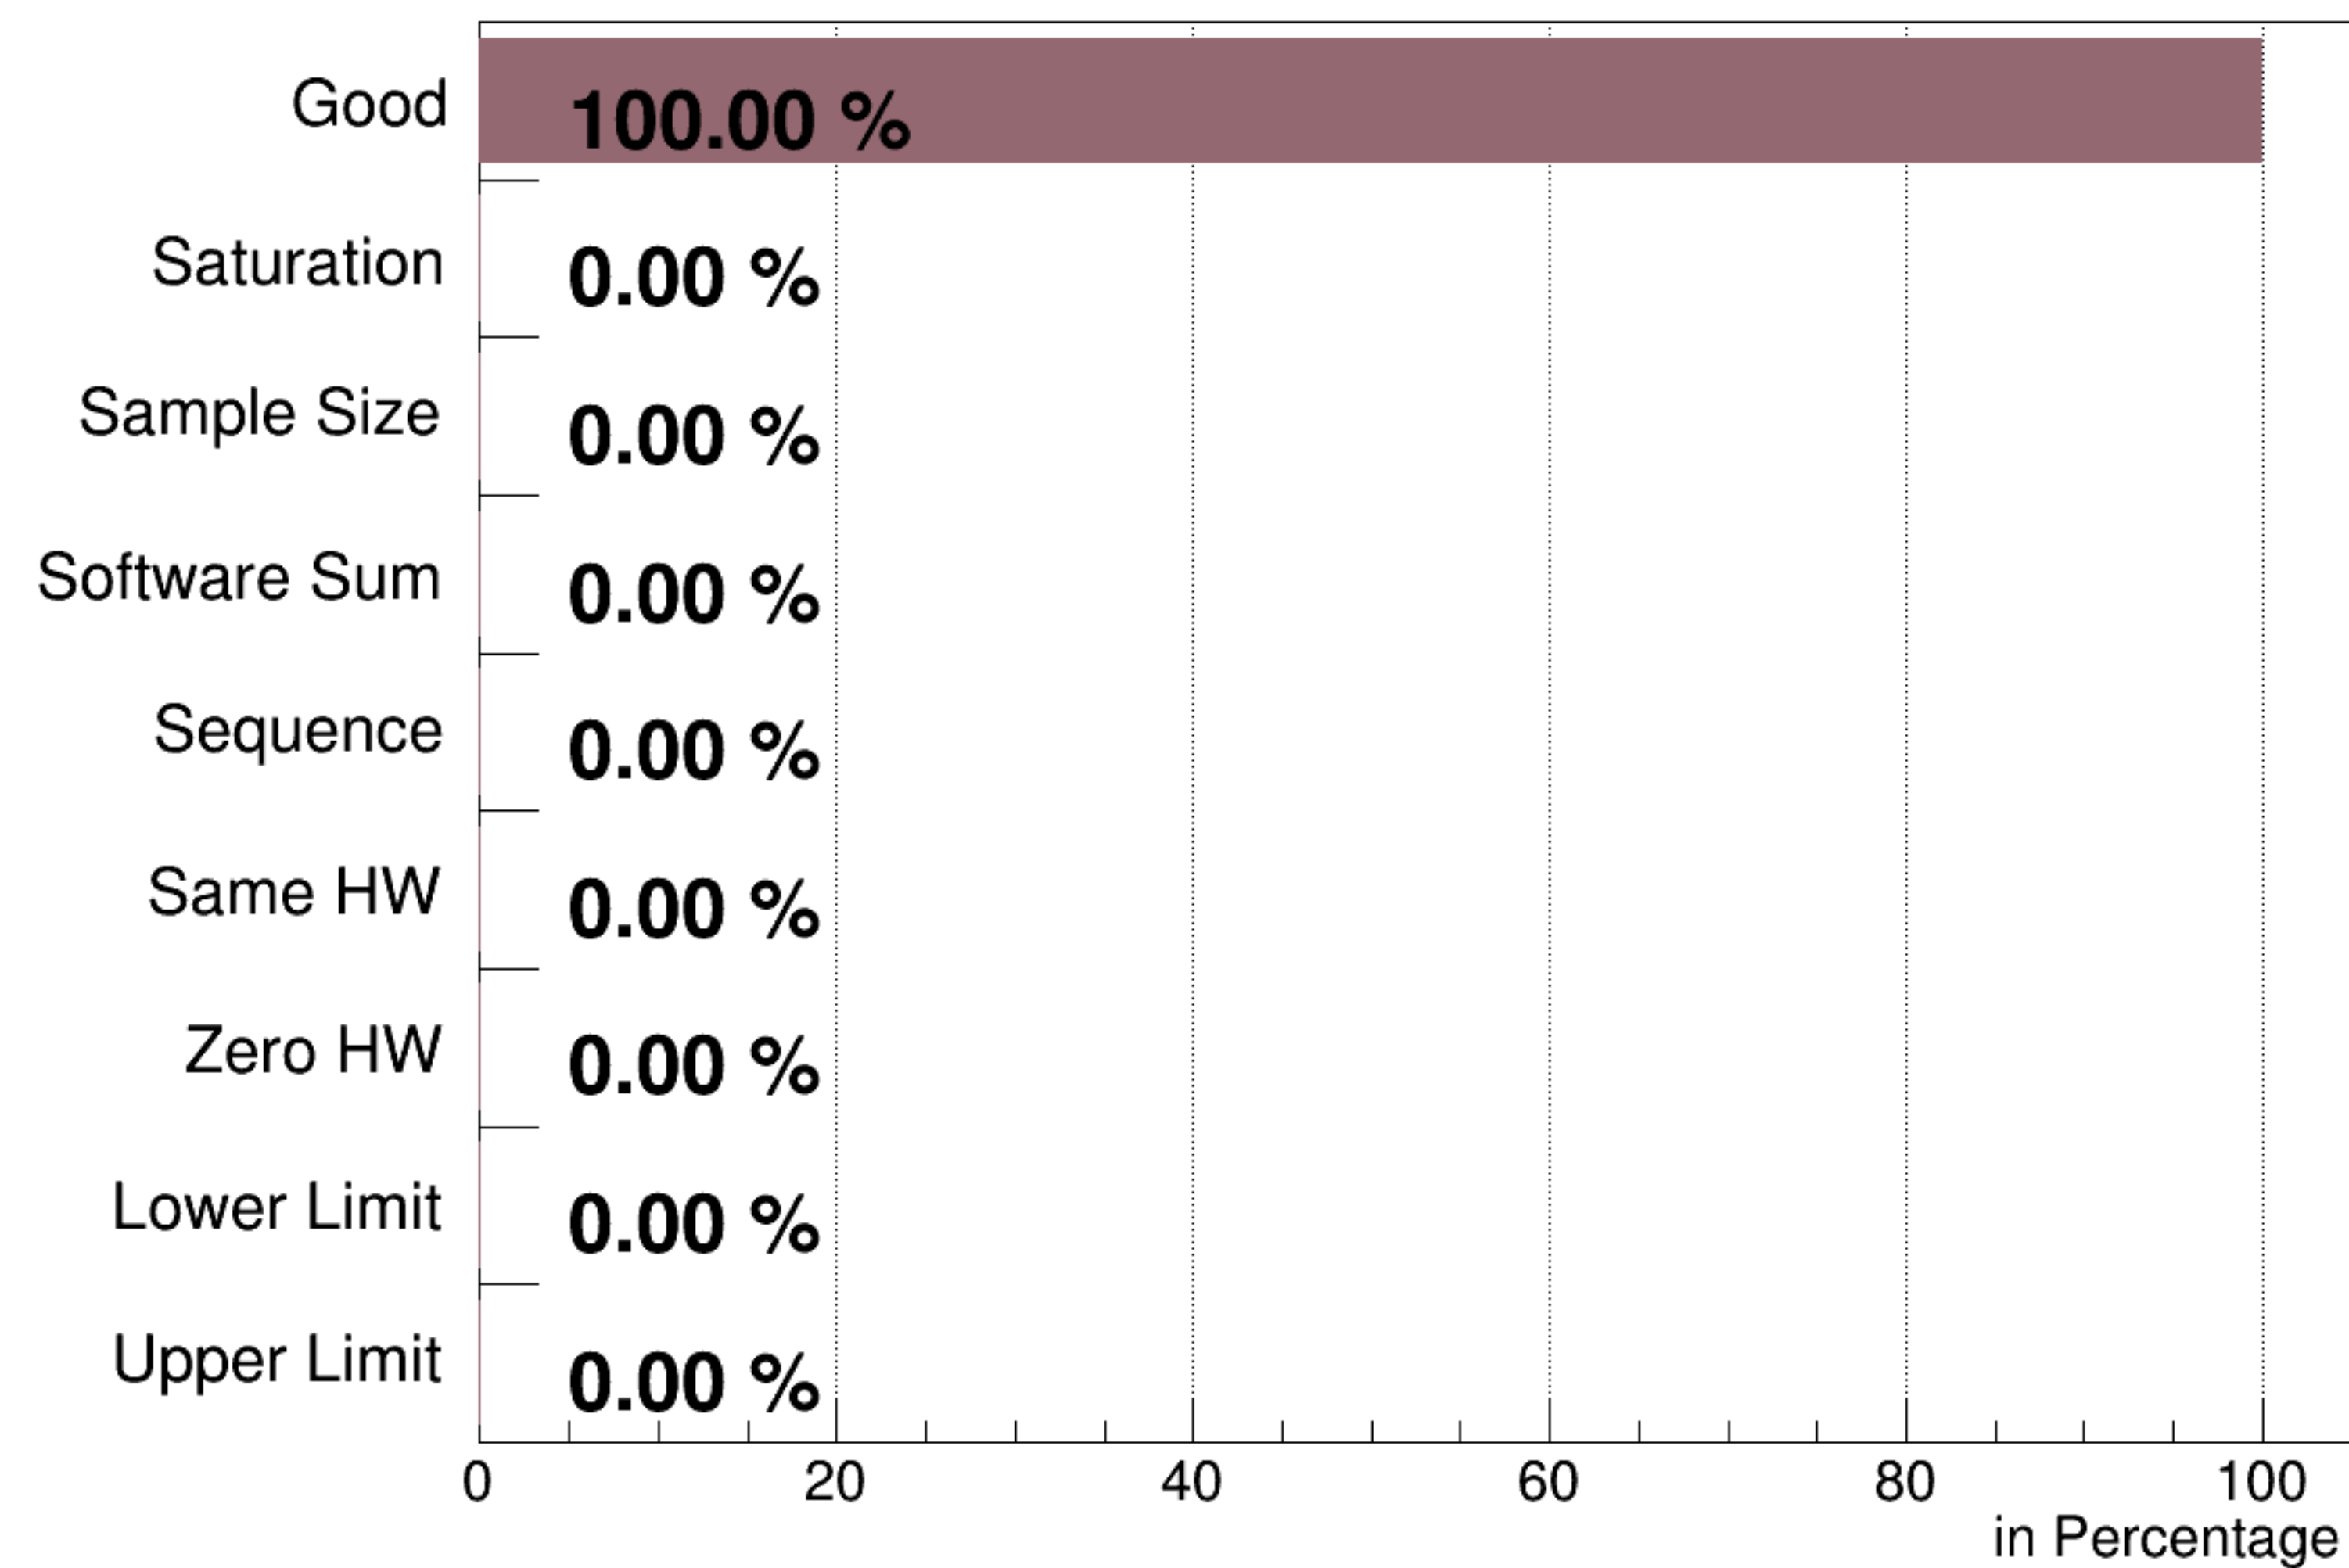 


sam3 Device Error Counter

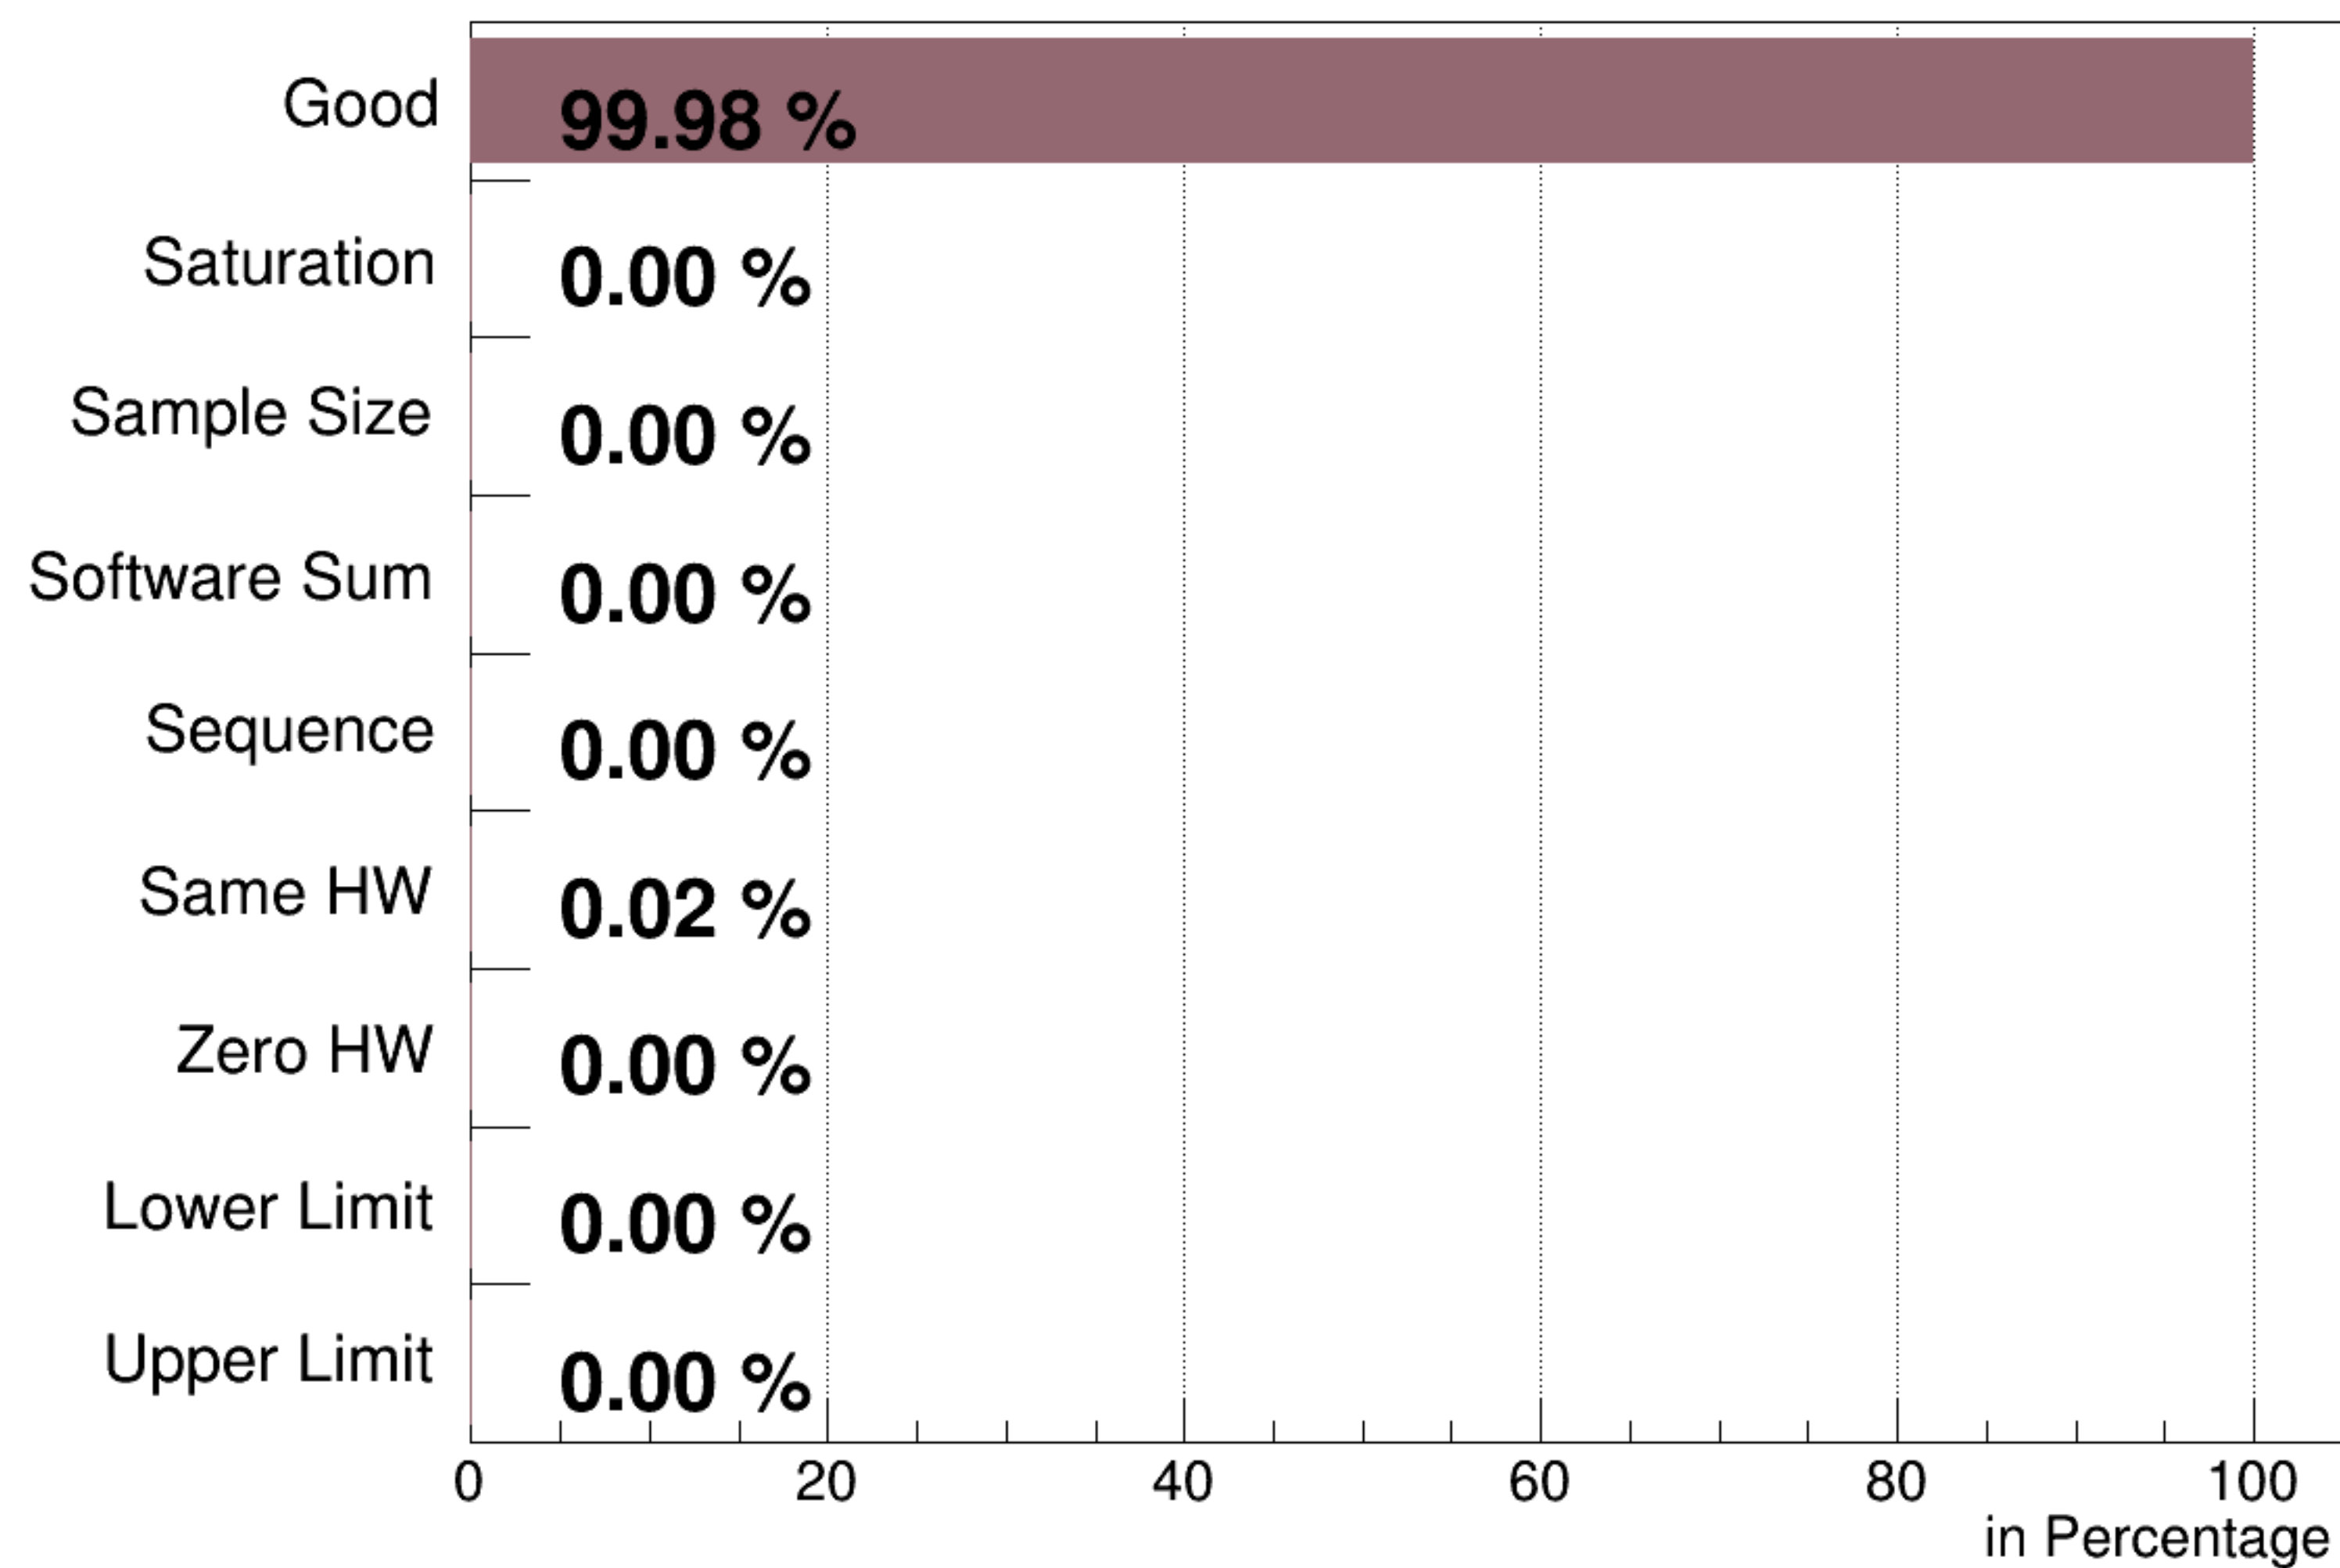 


sam4 Device Error Counter

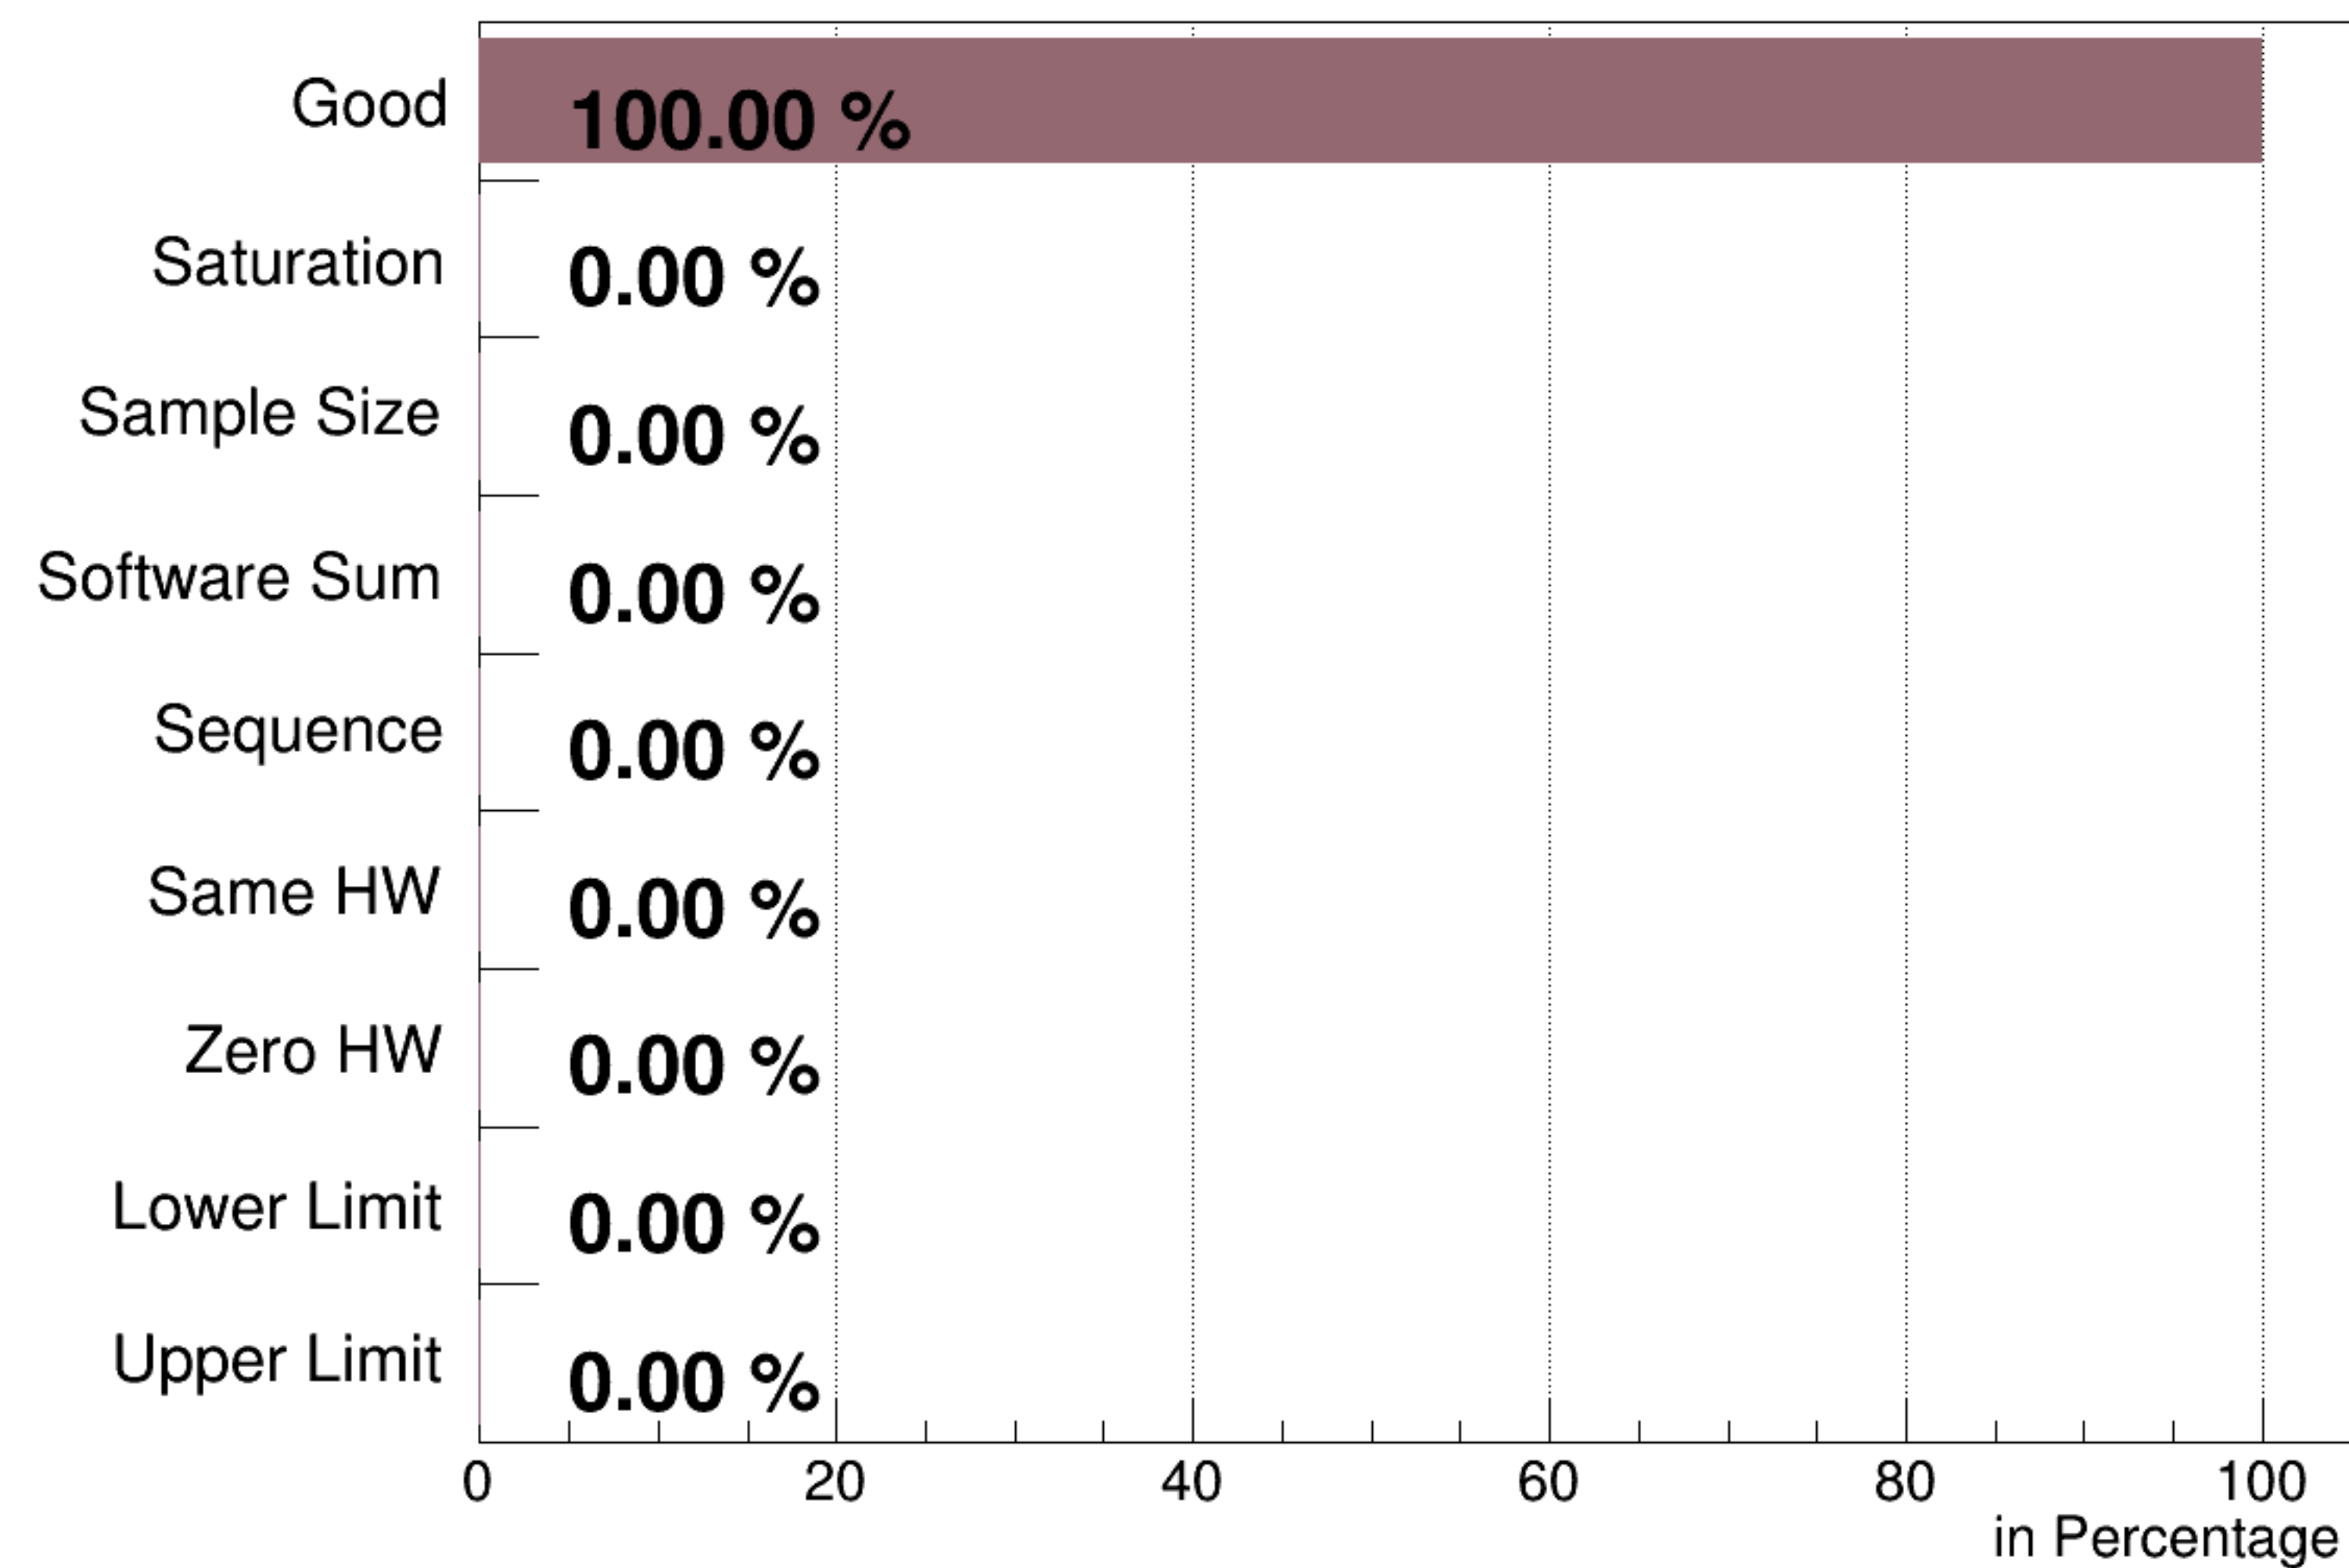 


sam5 Device Error Counter

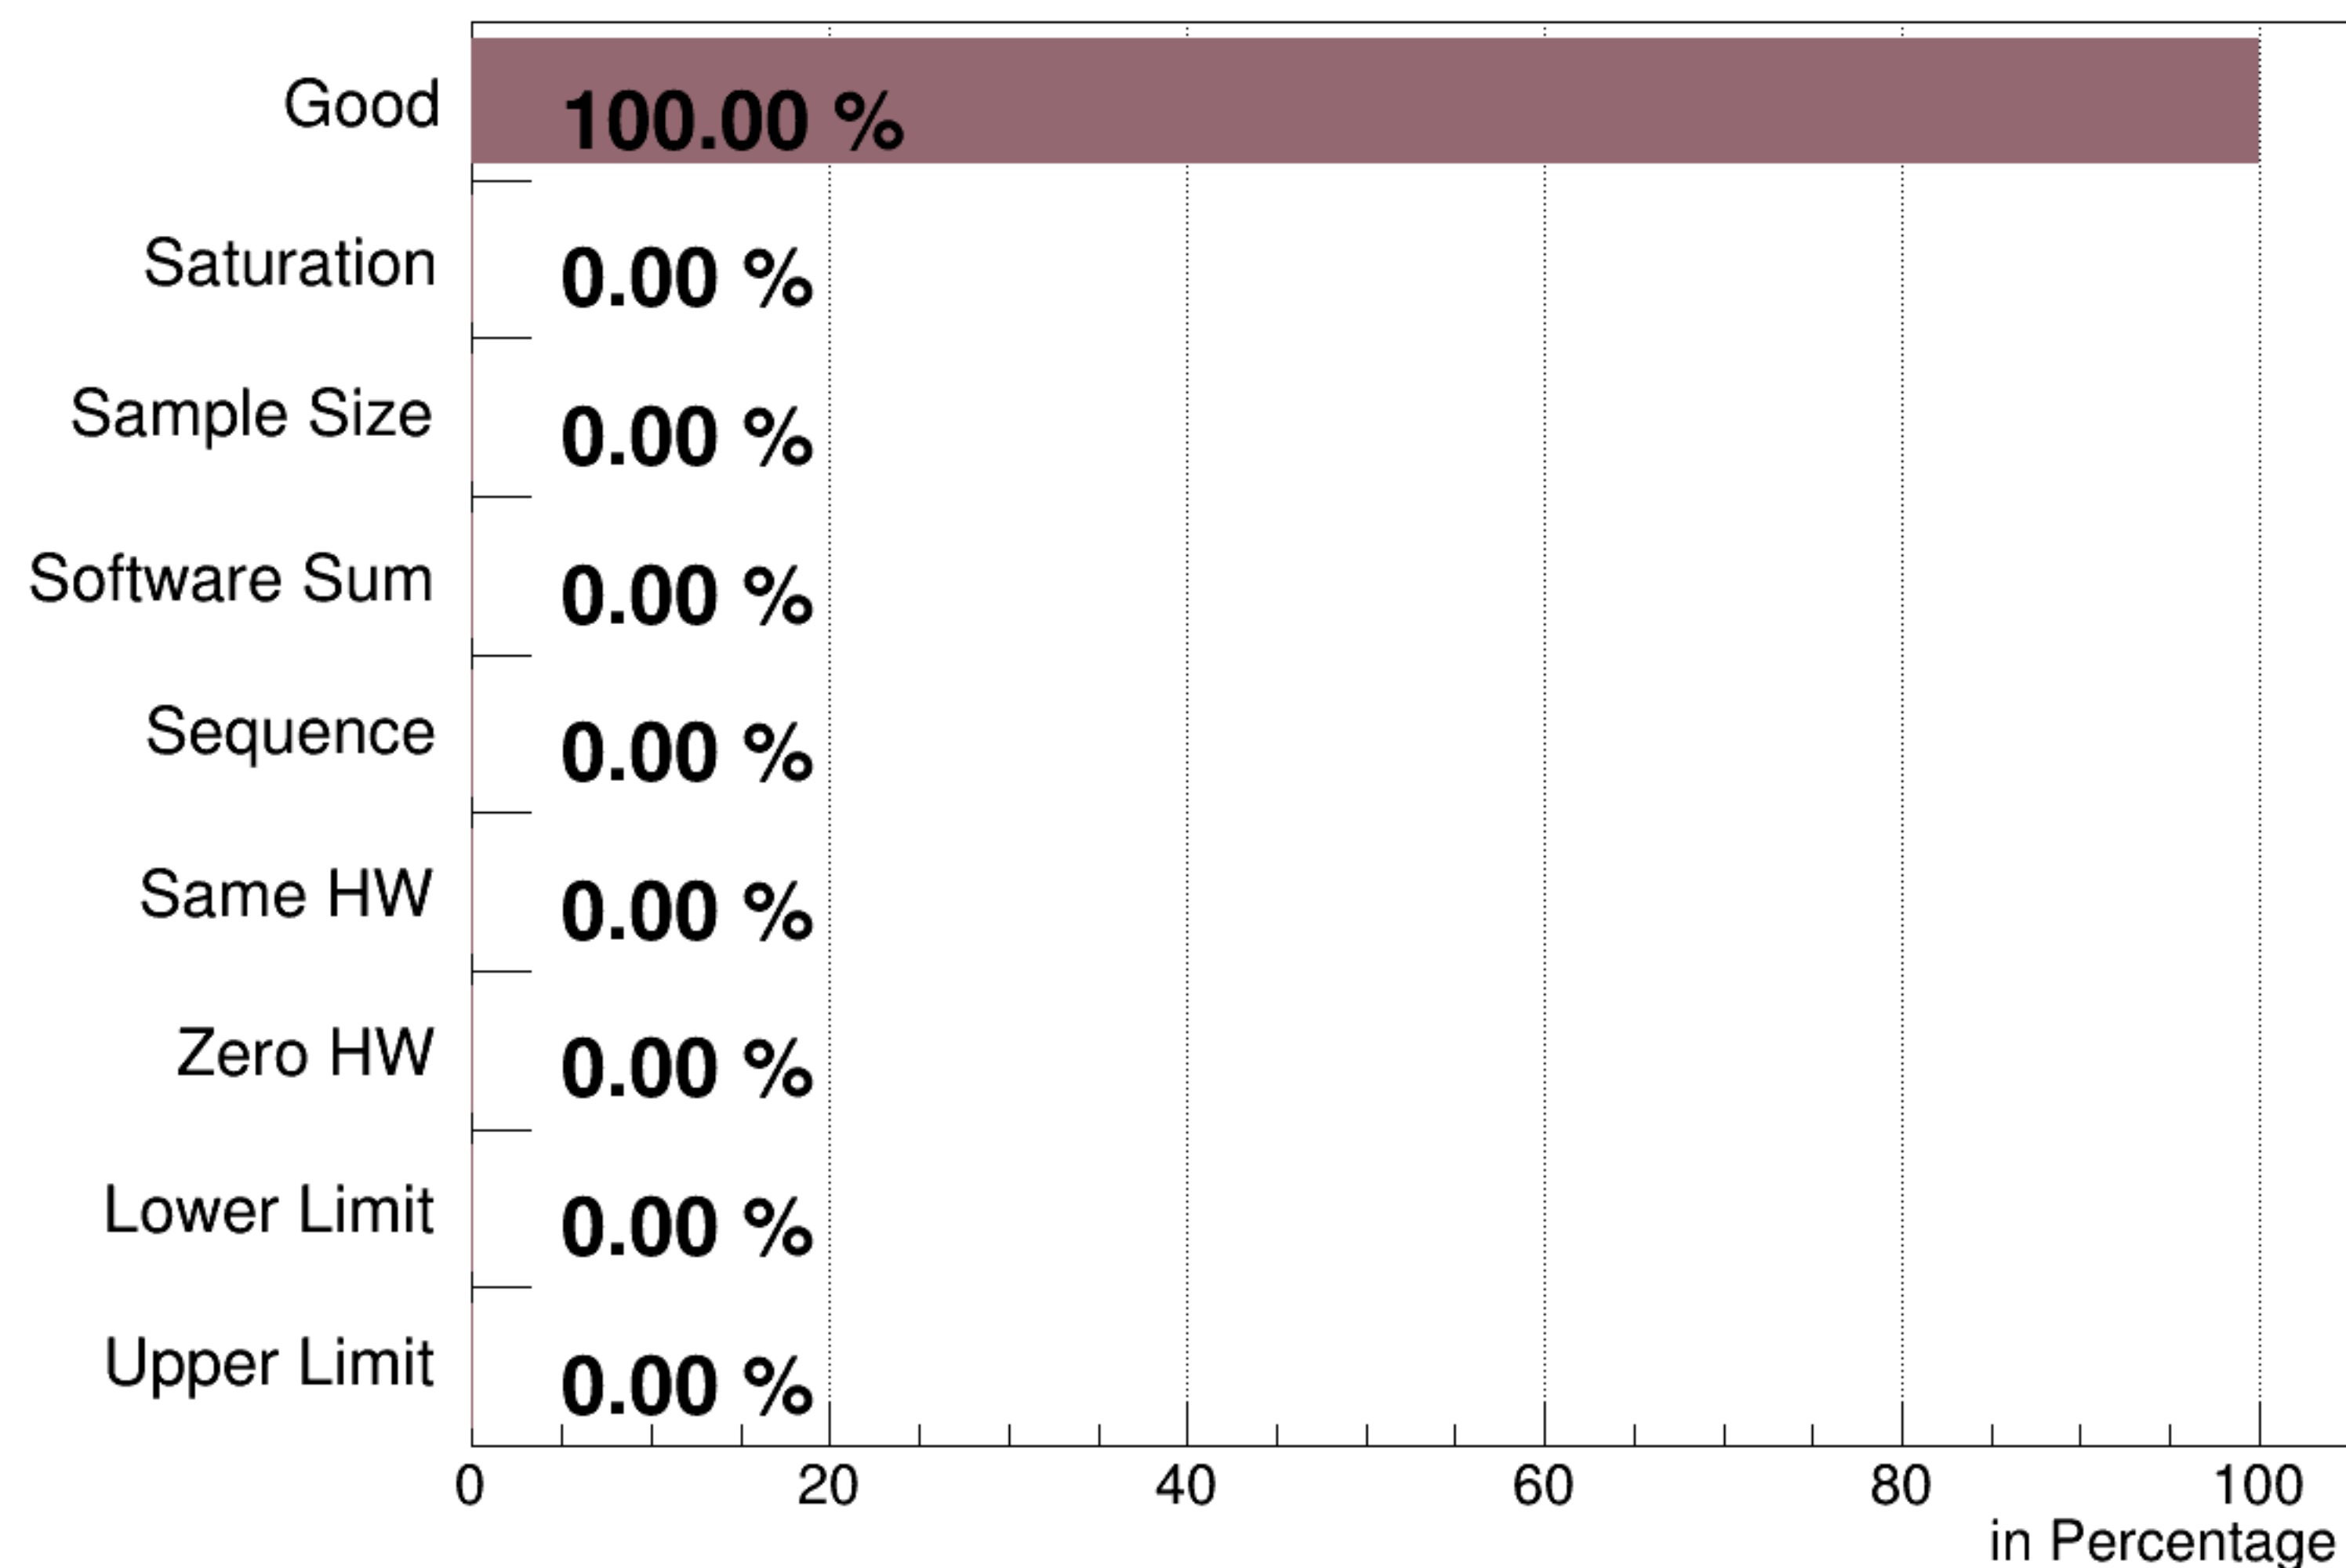 


sam6 Device Error Counter

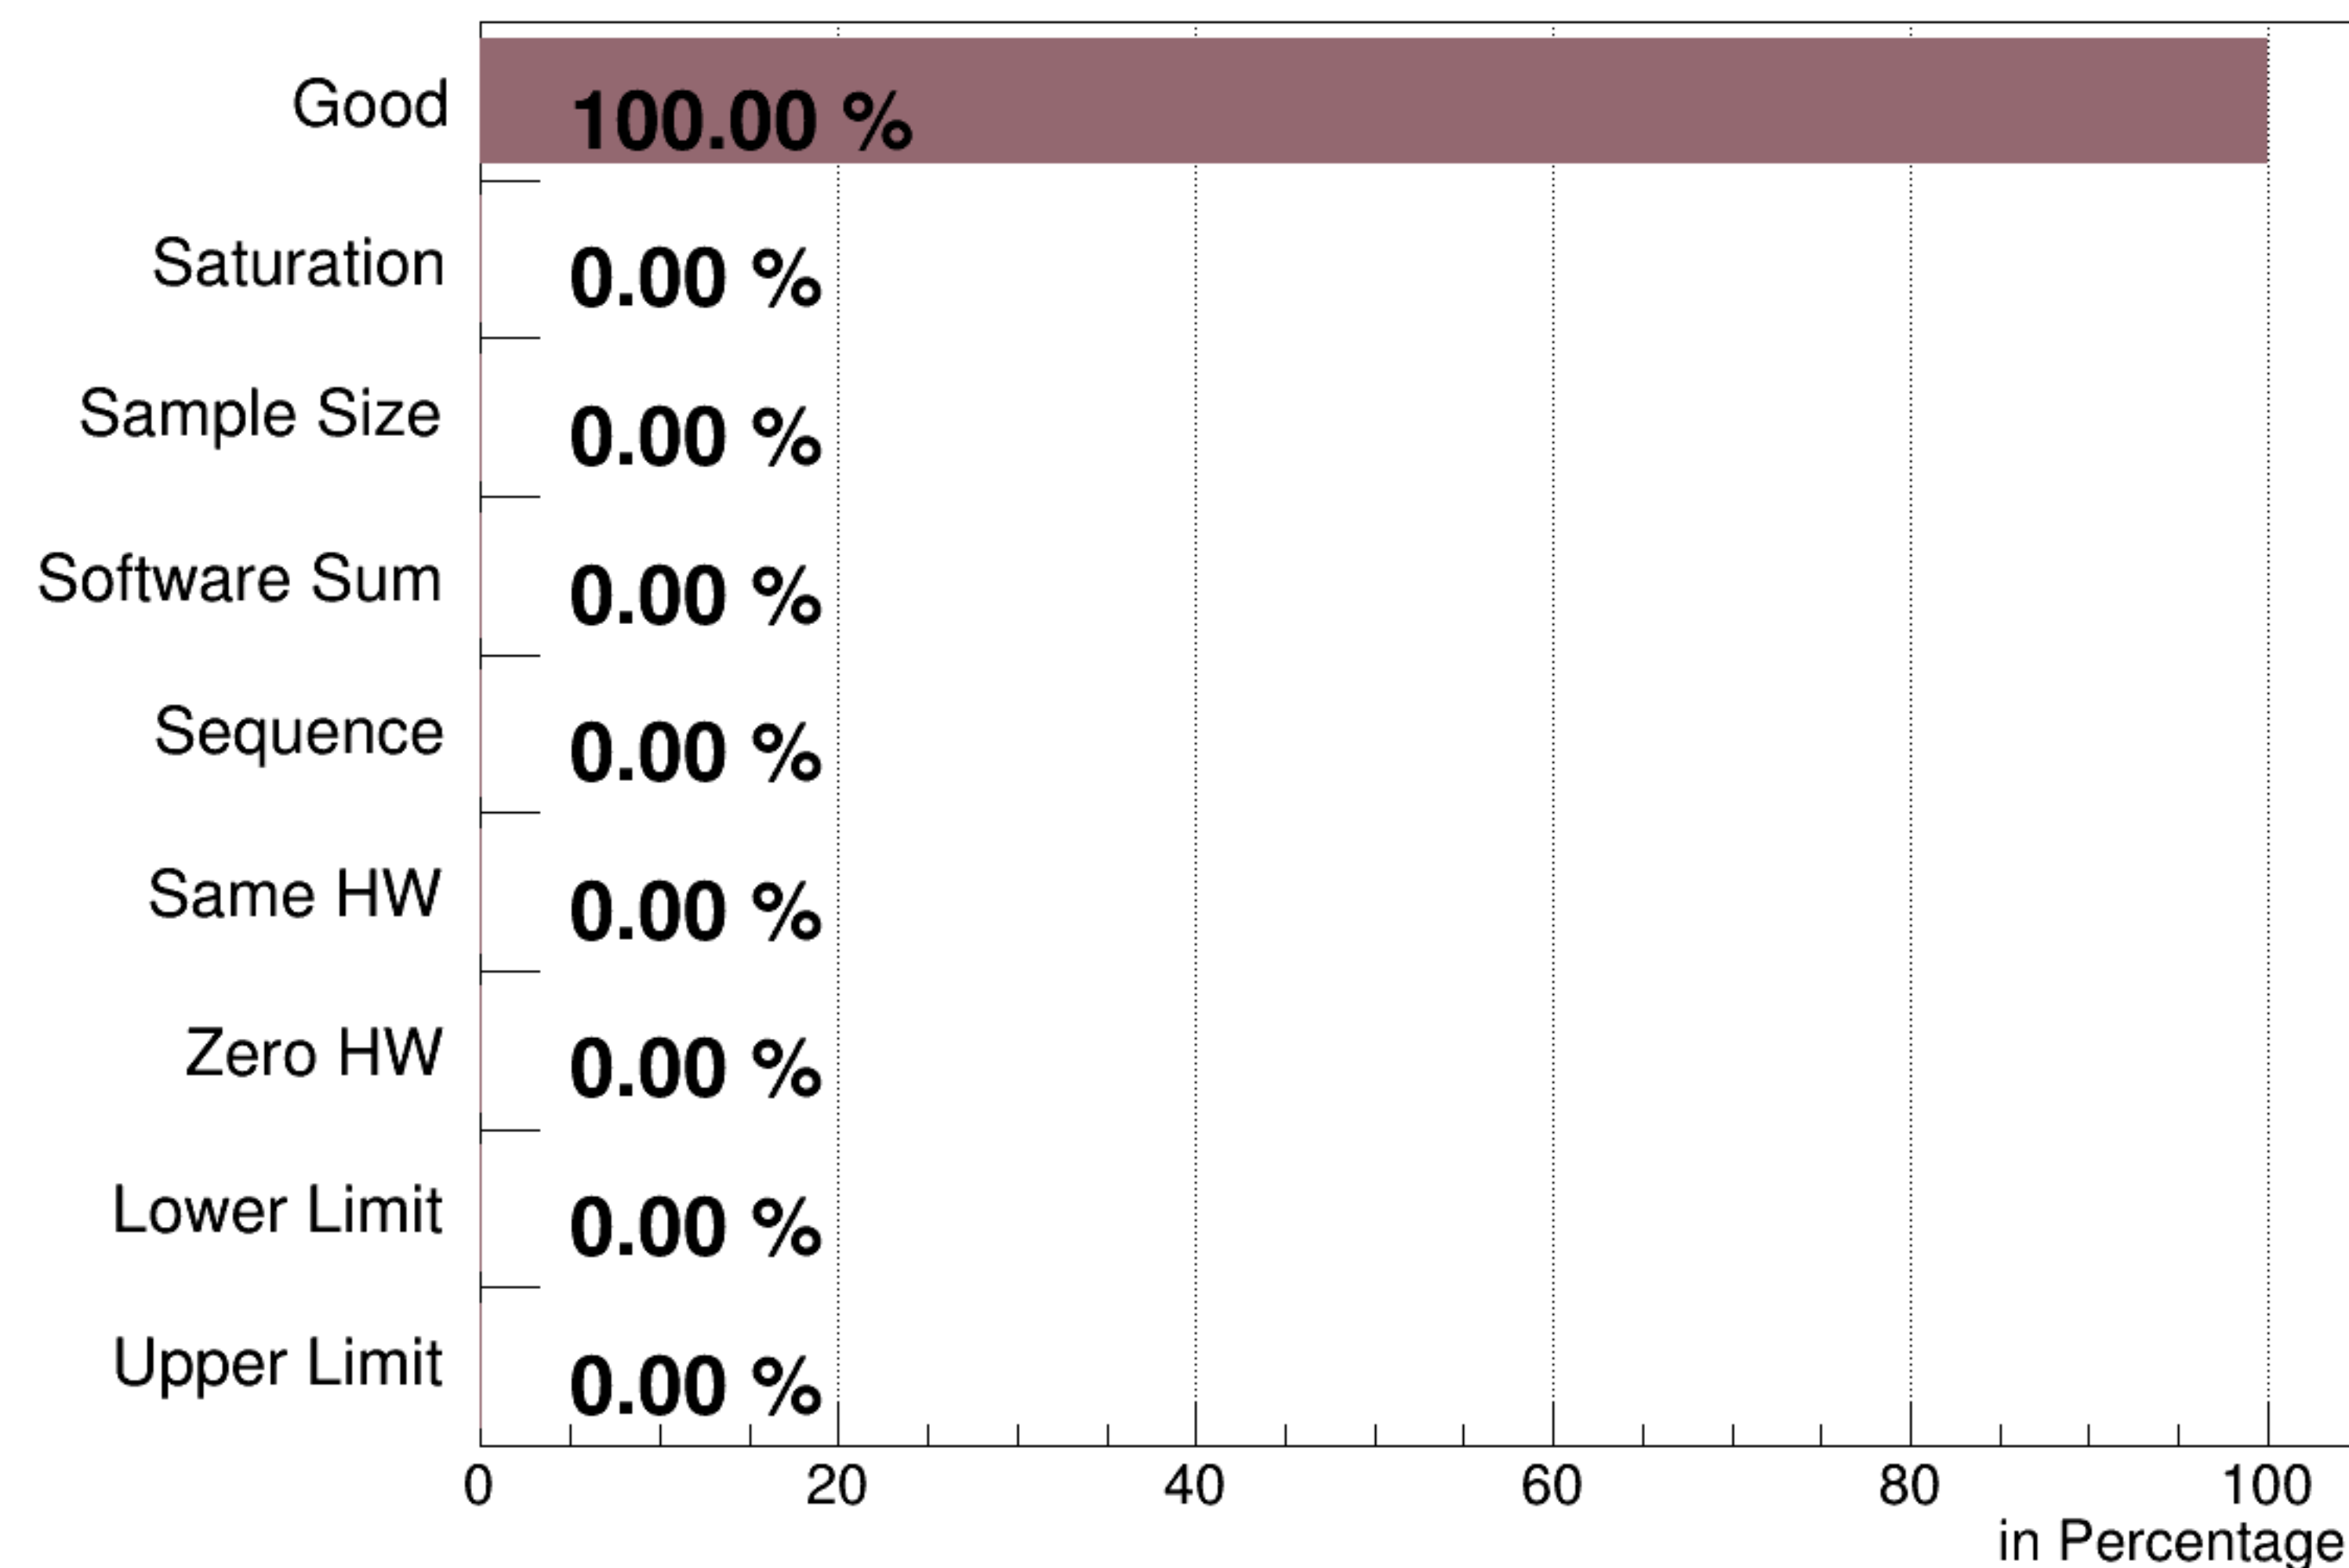 


sam7 Device Error Counter

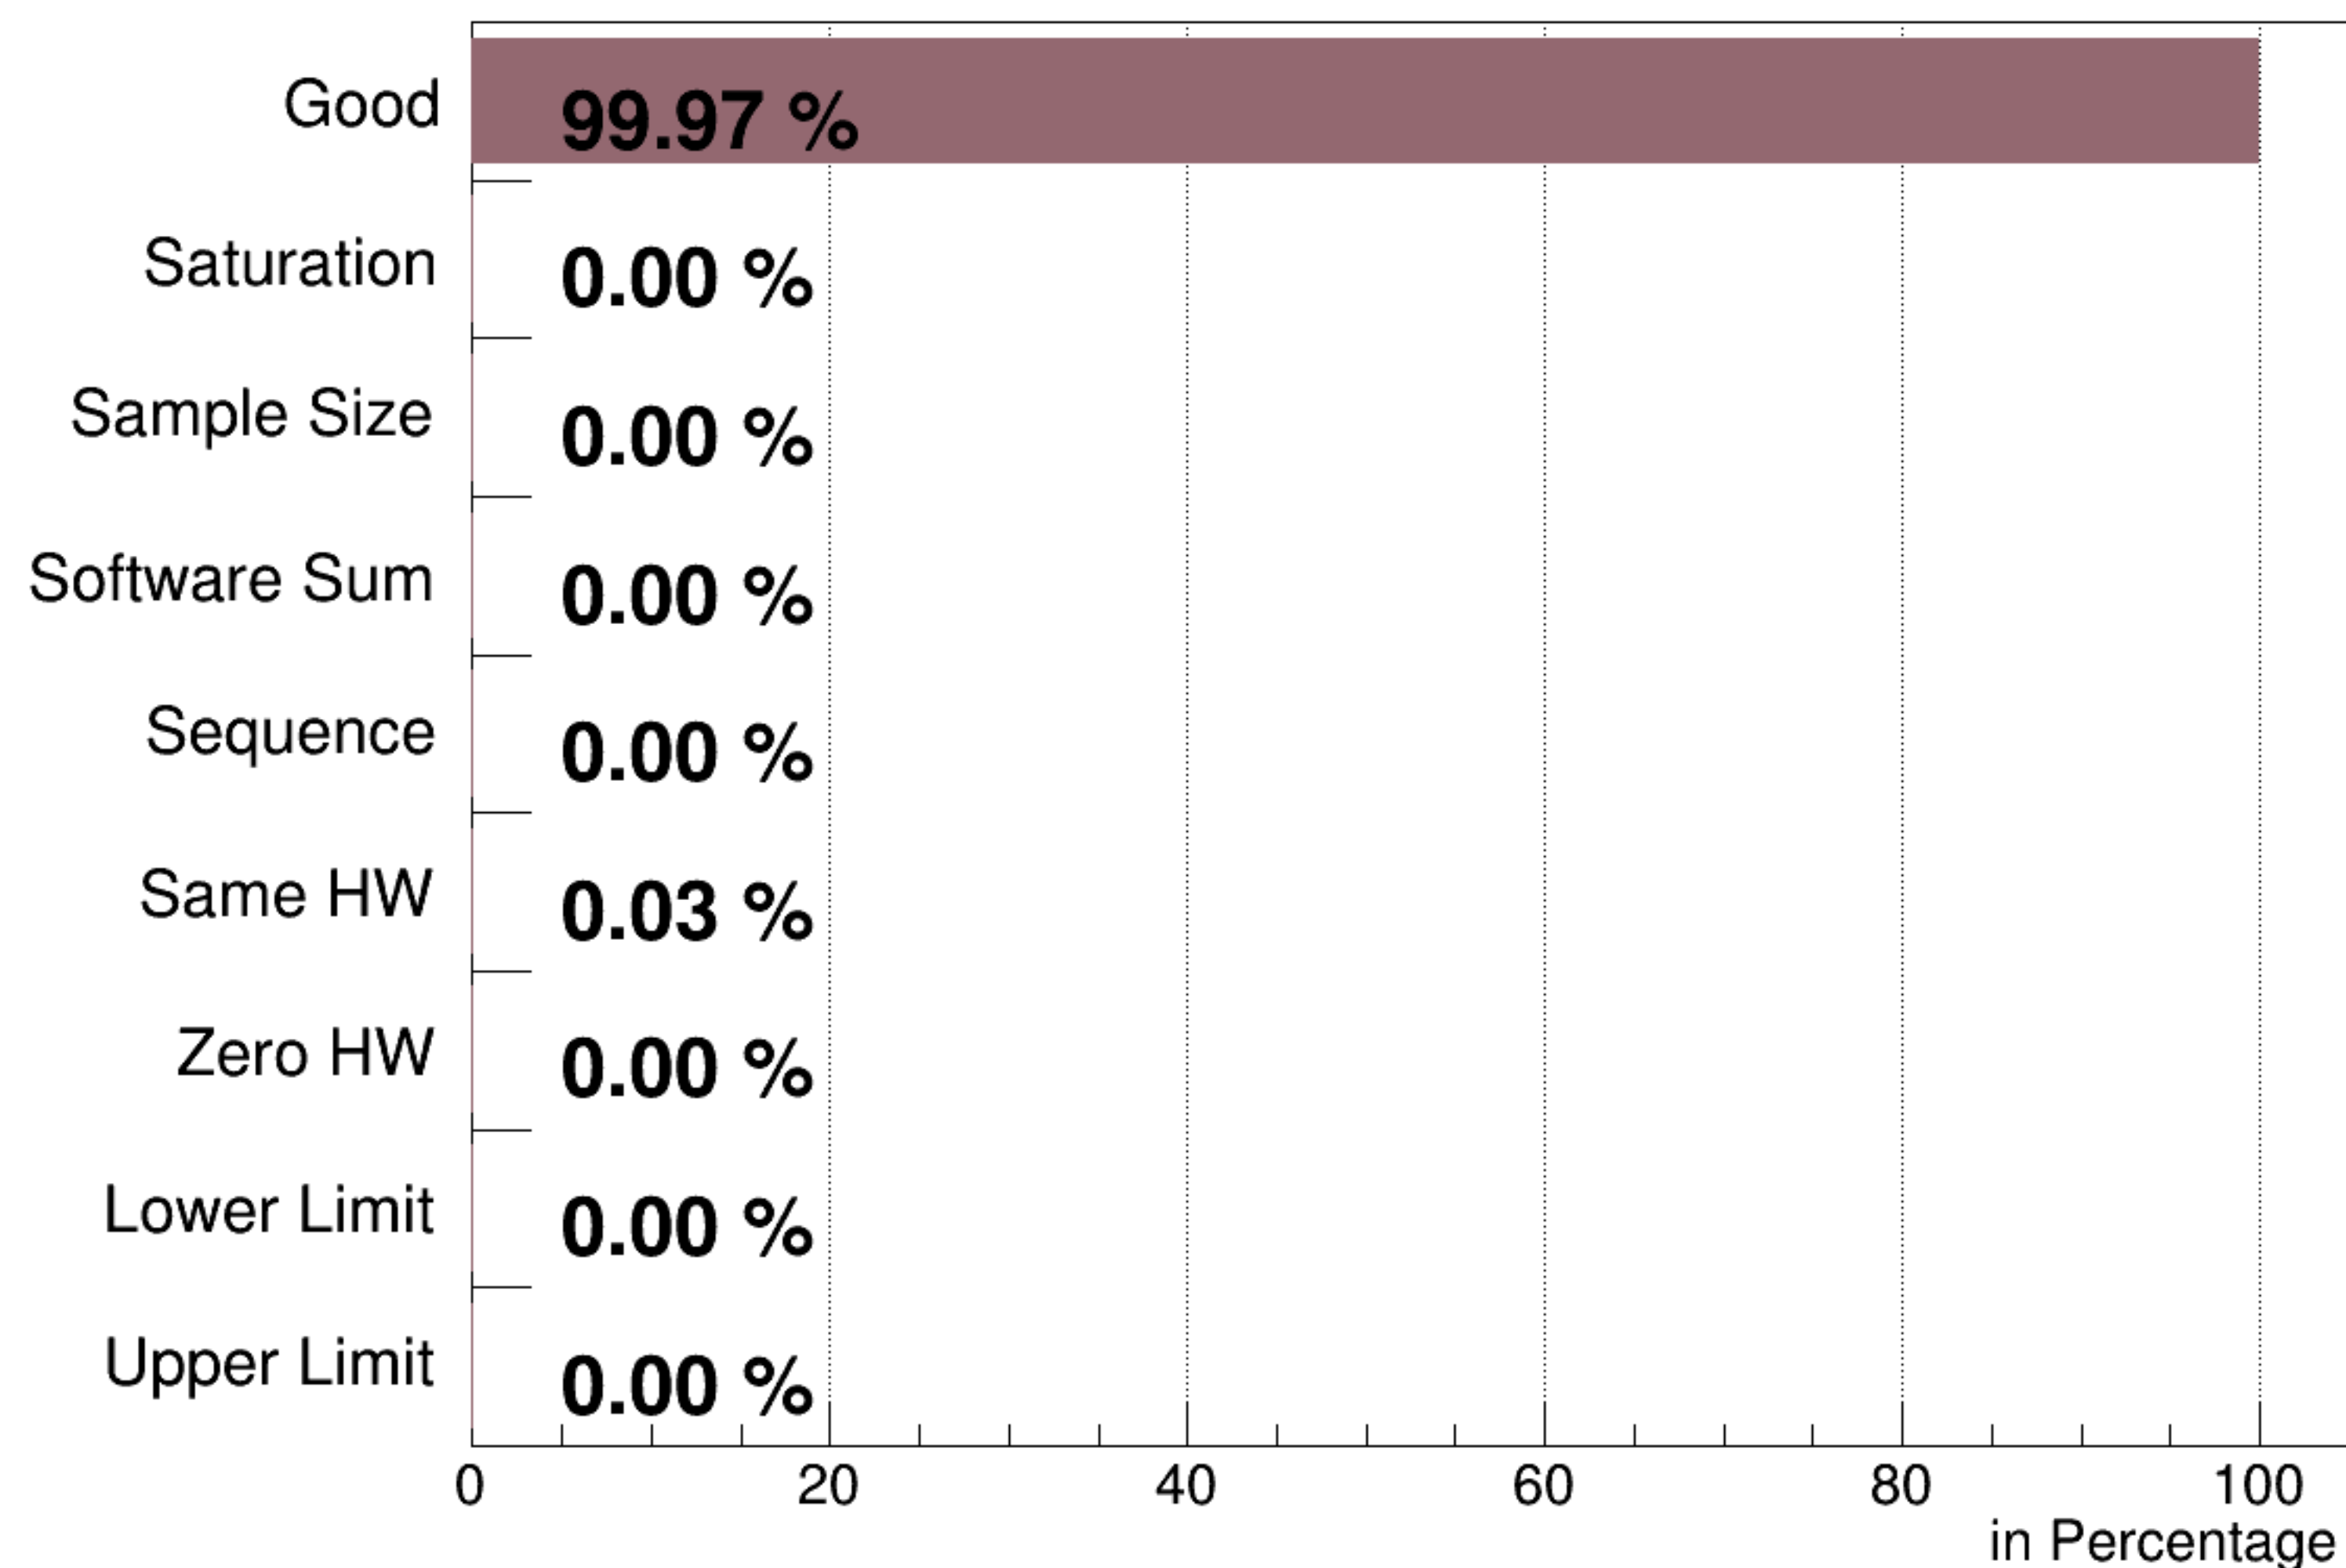 


sam8 Device Error Counter

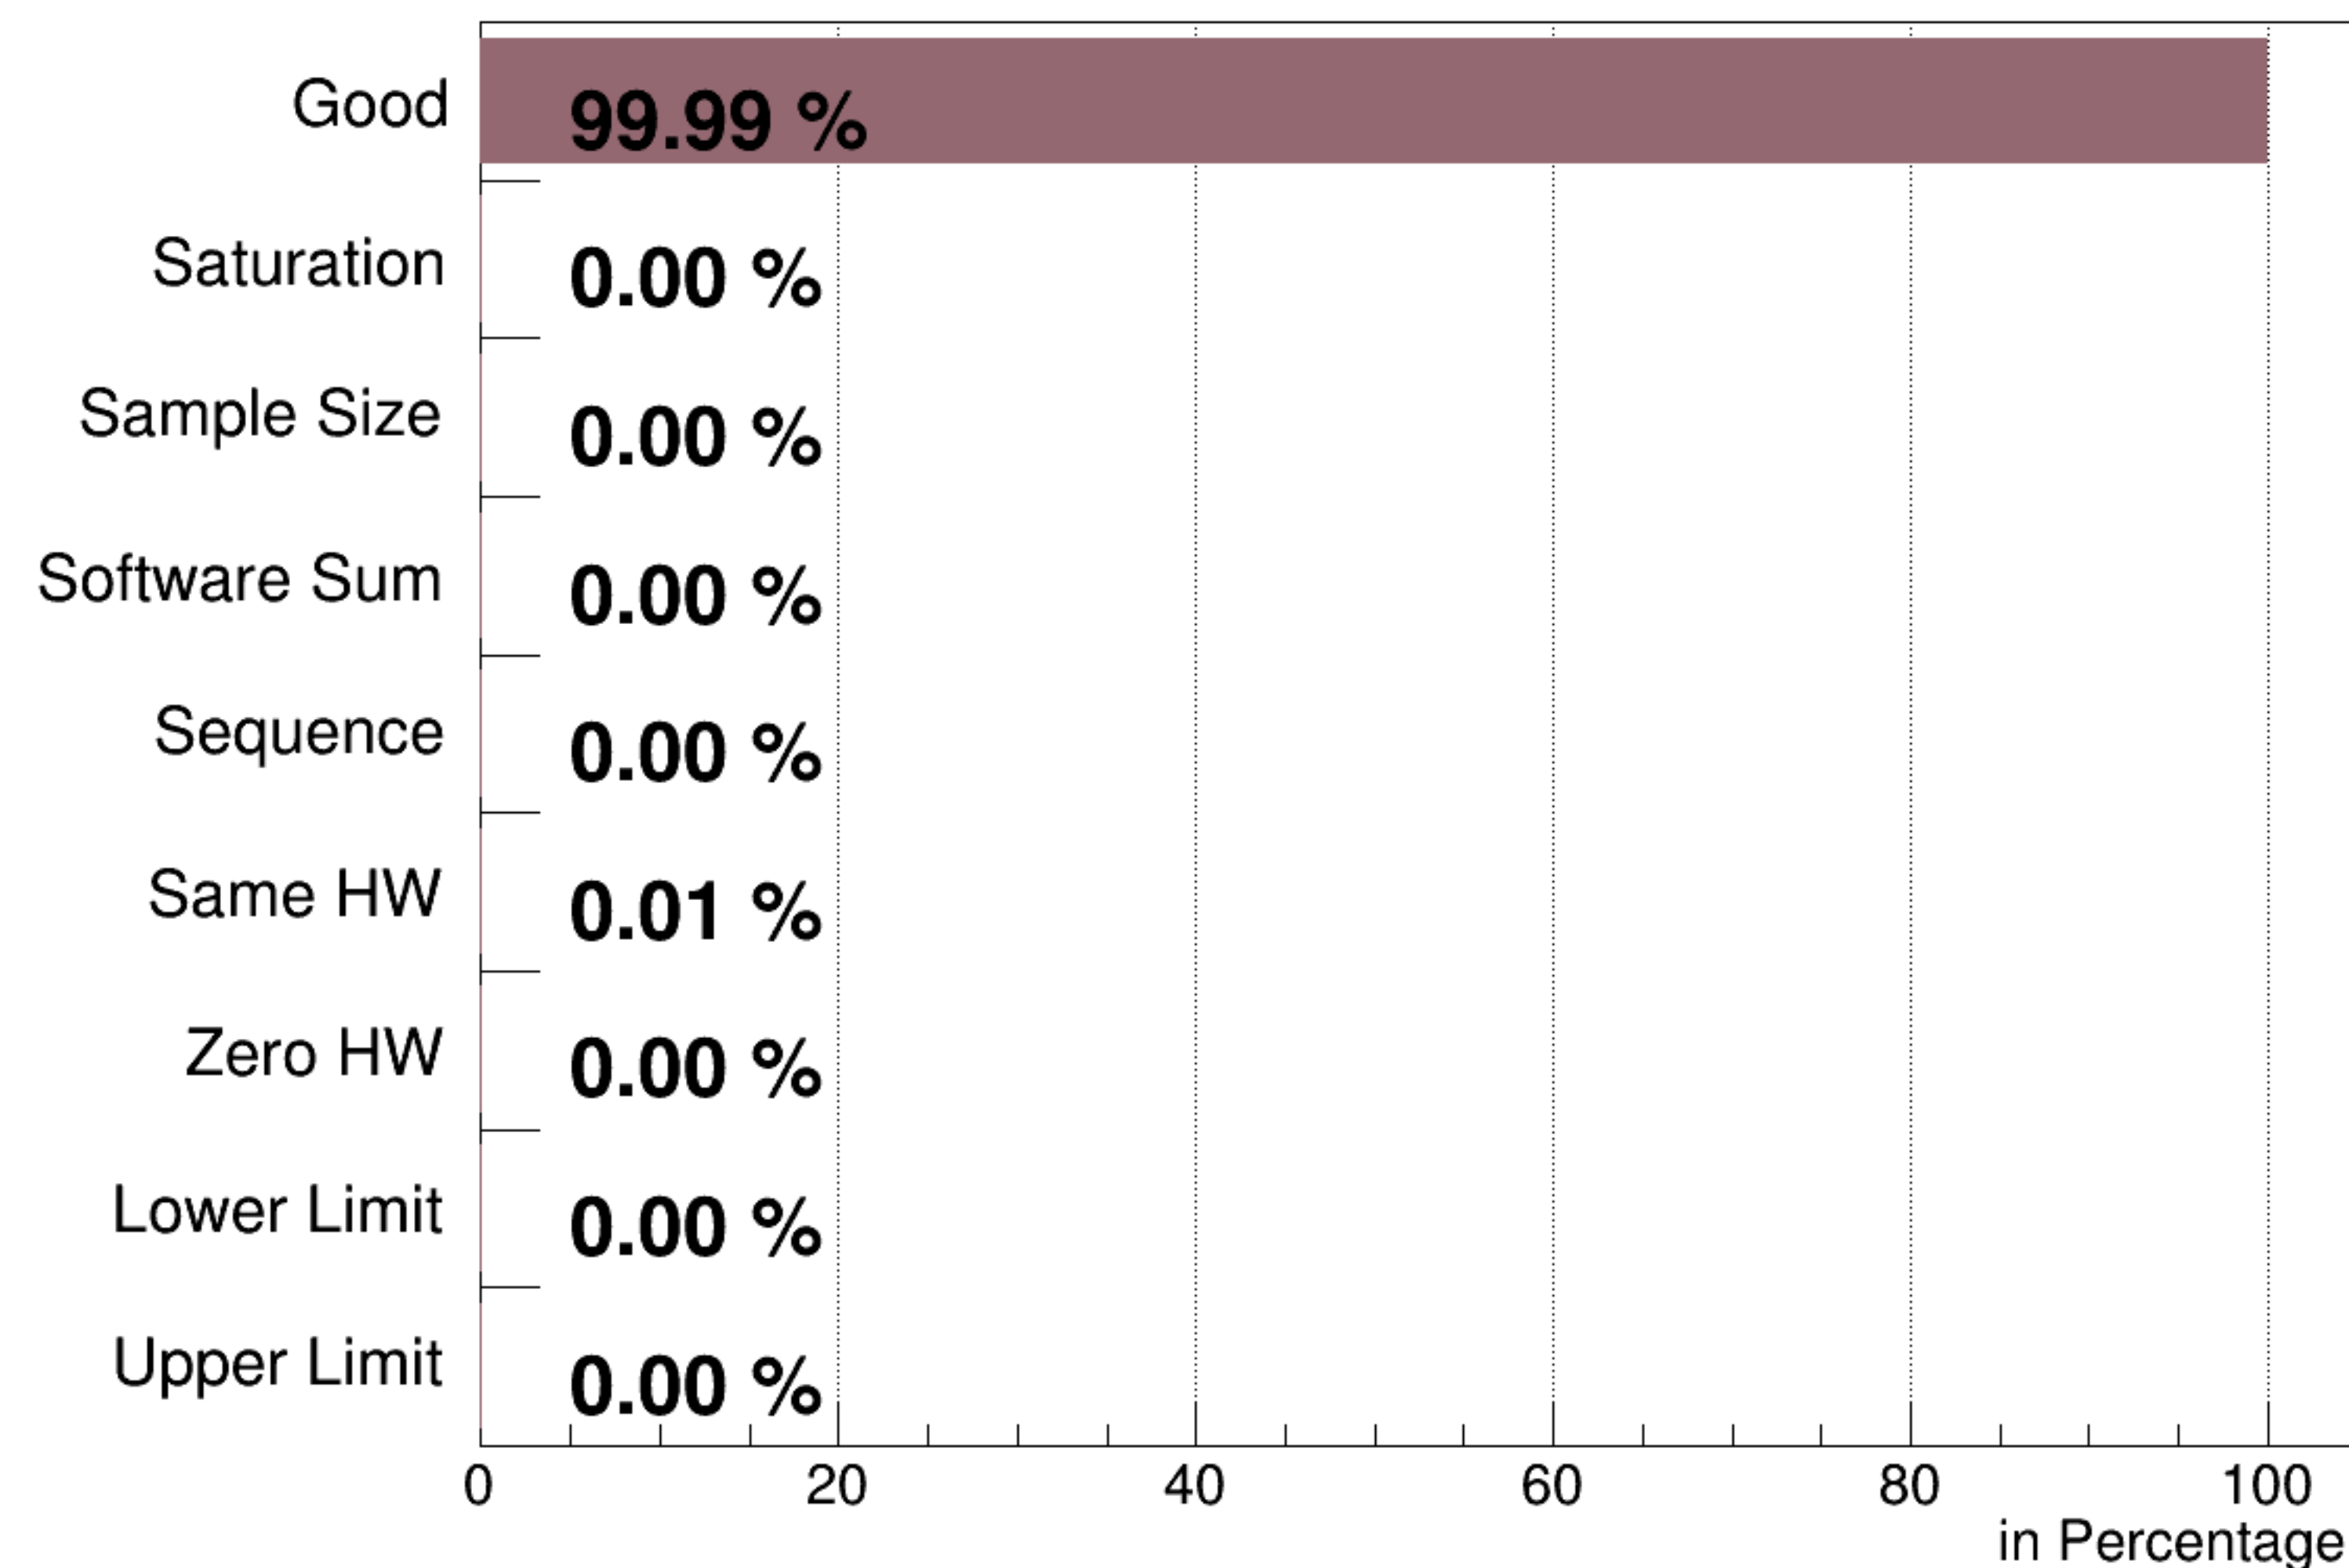 


bpm4aXM Device Error Counter

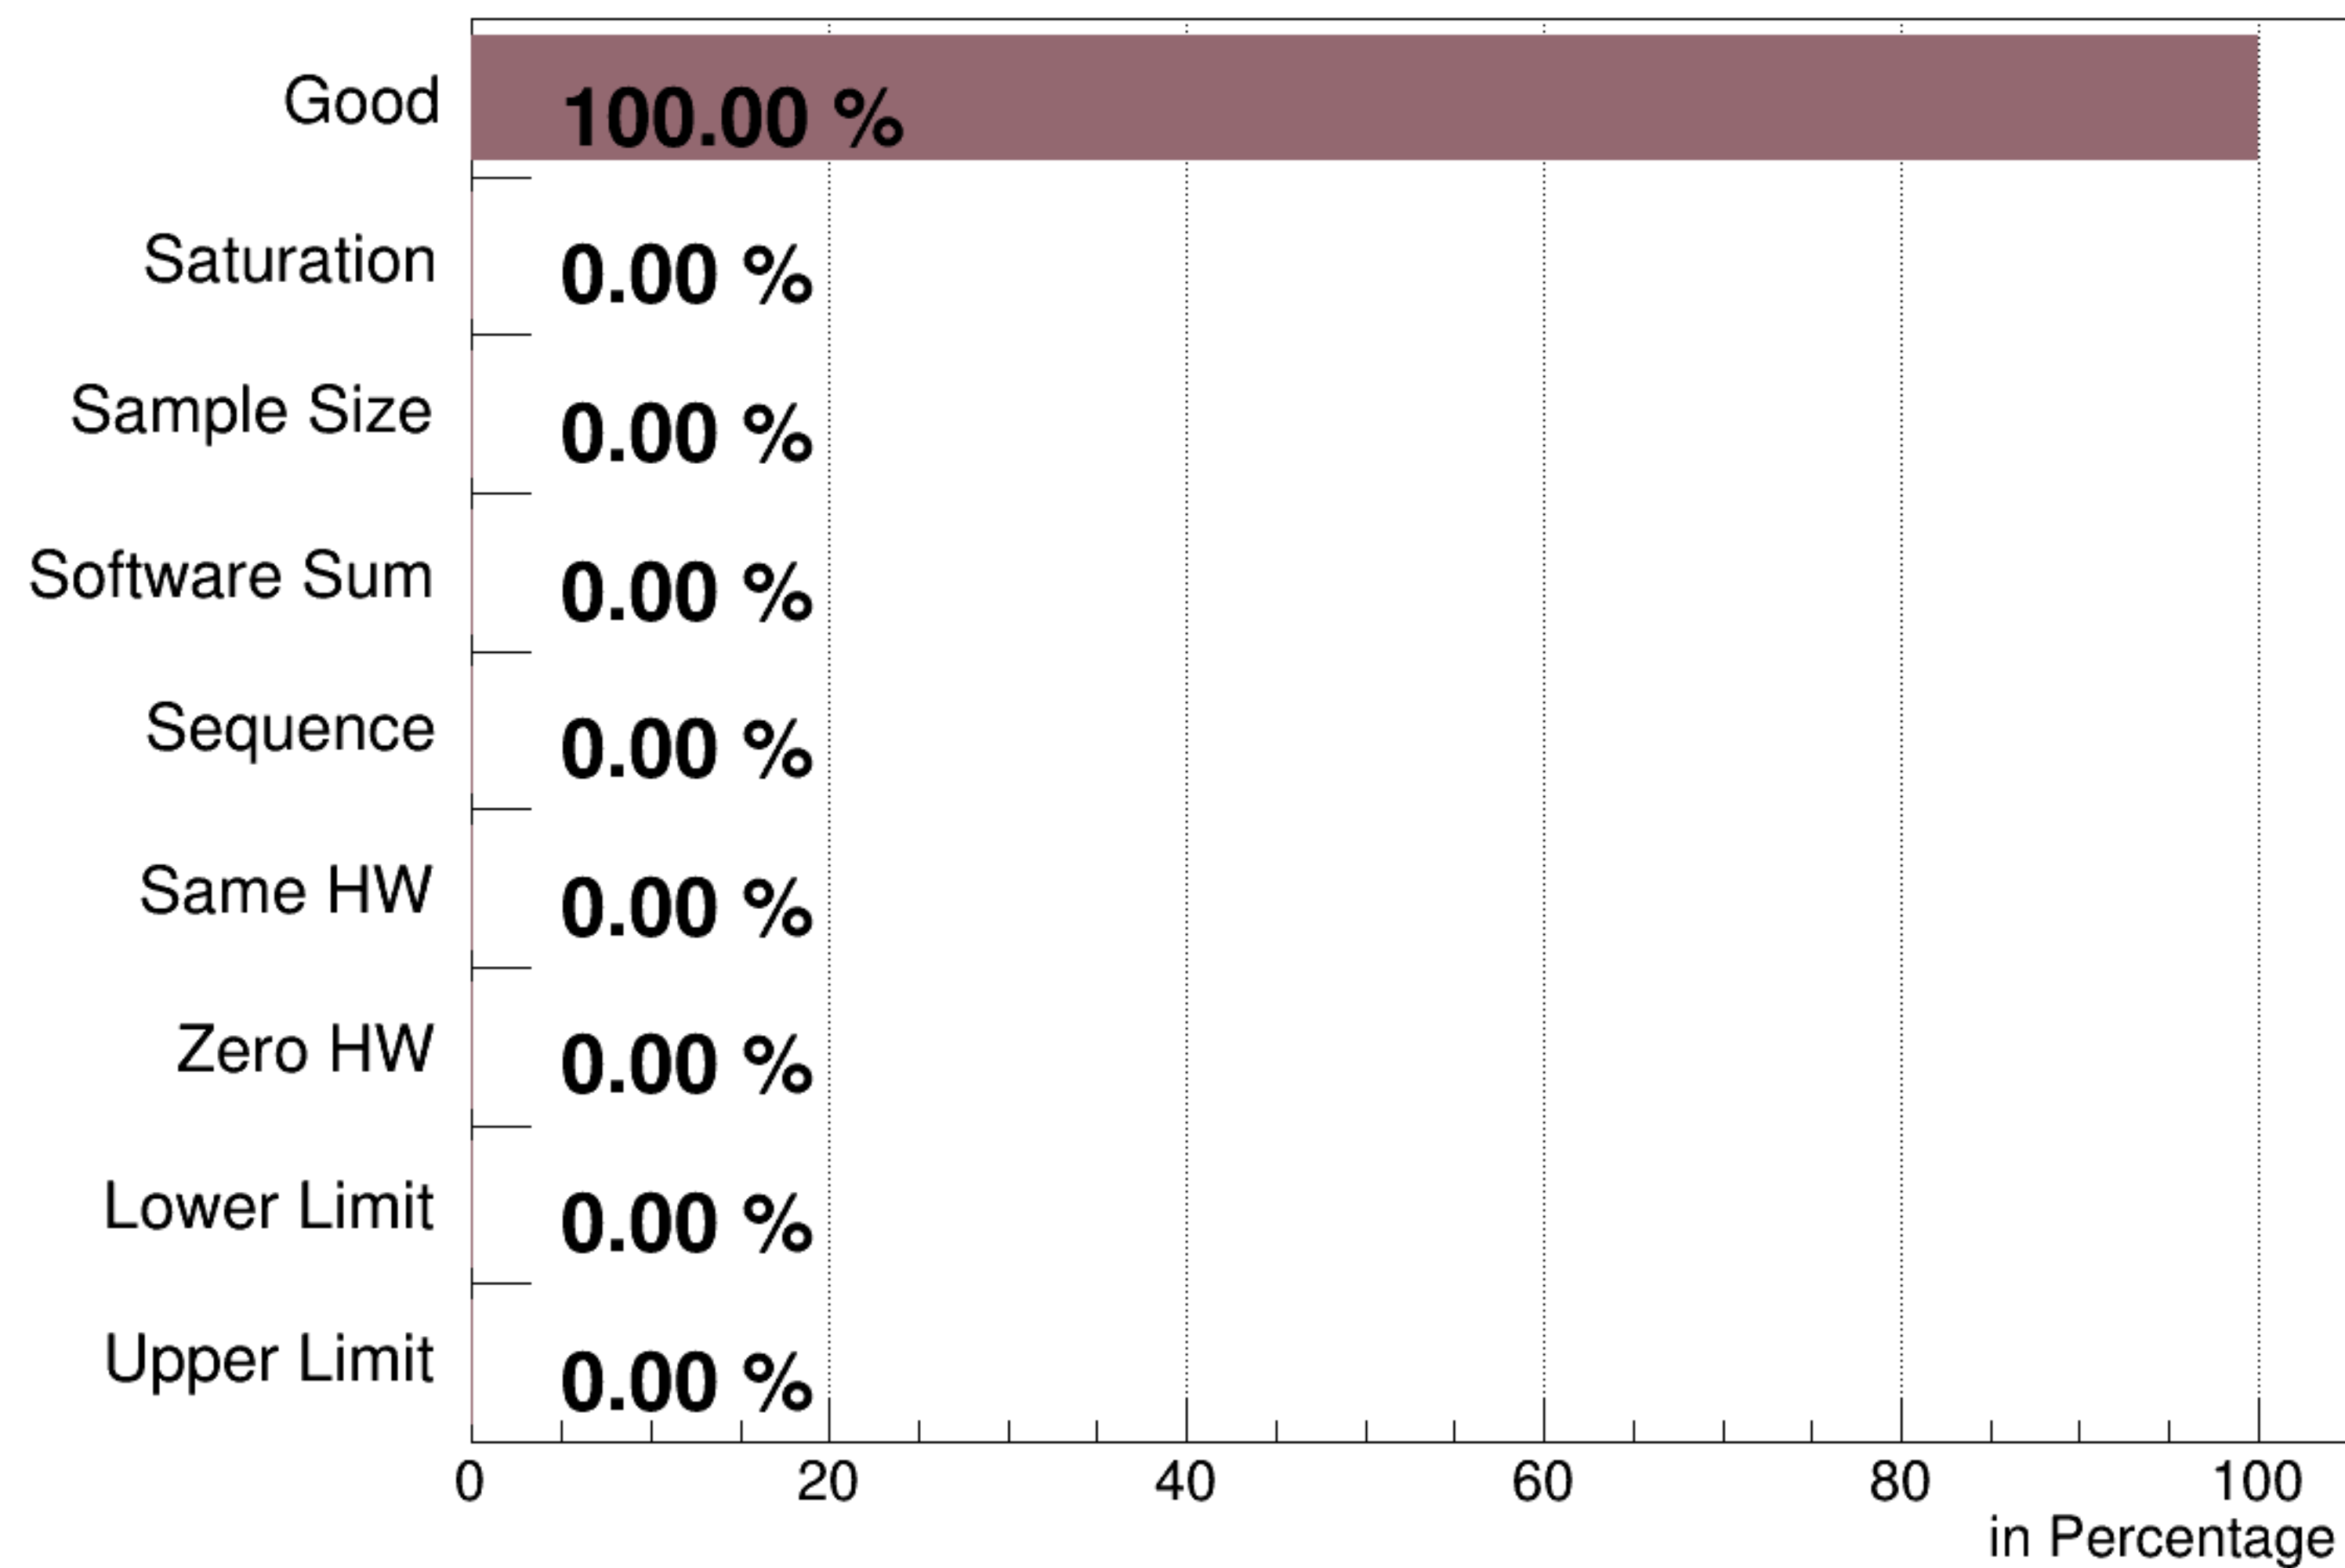 


bpm4aXP Device Error Counter

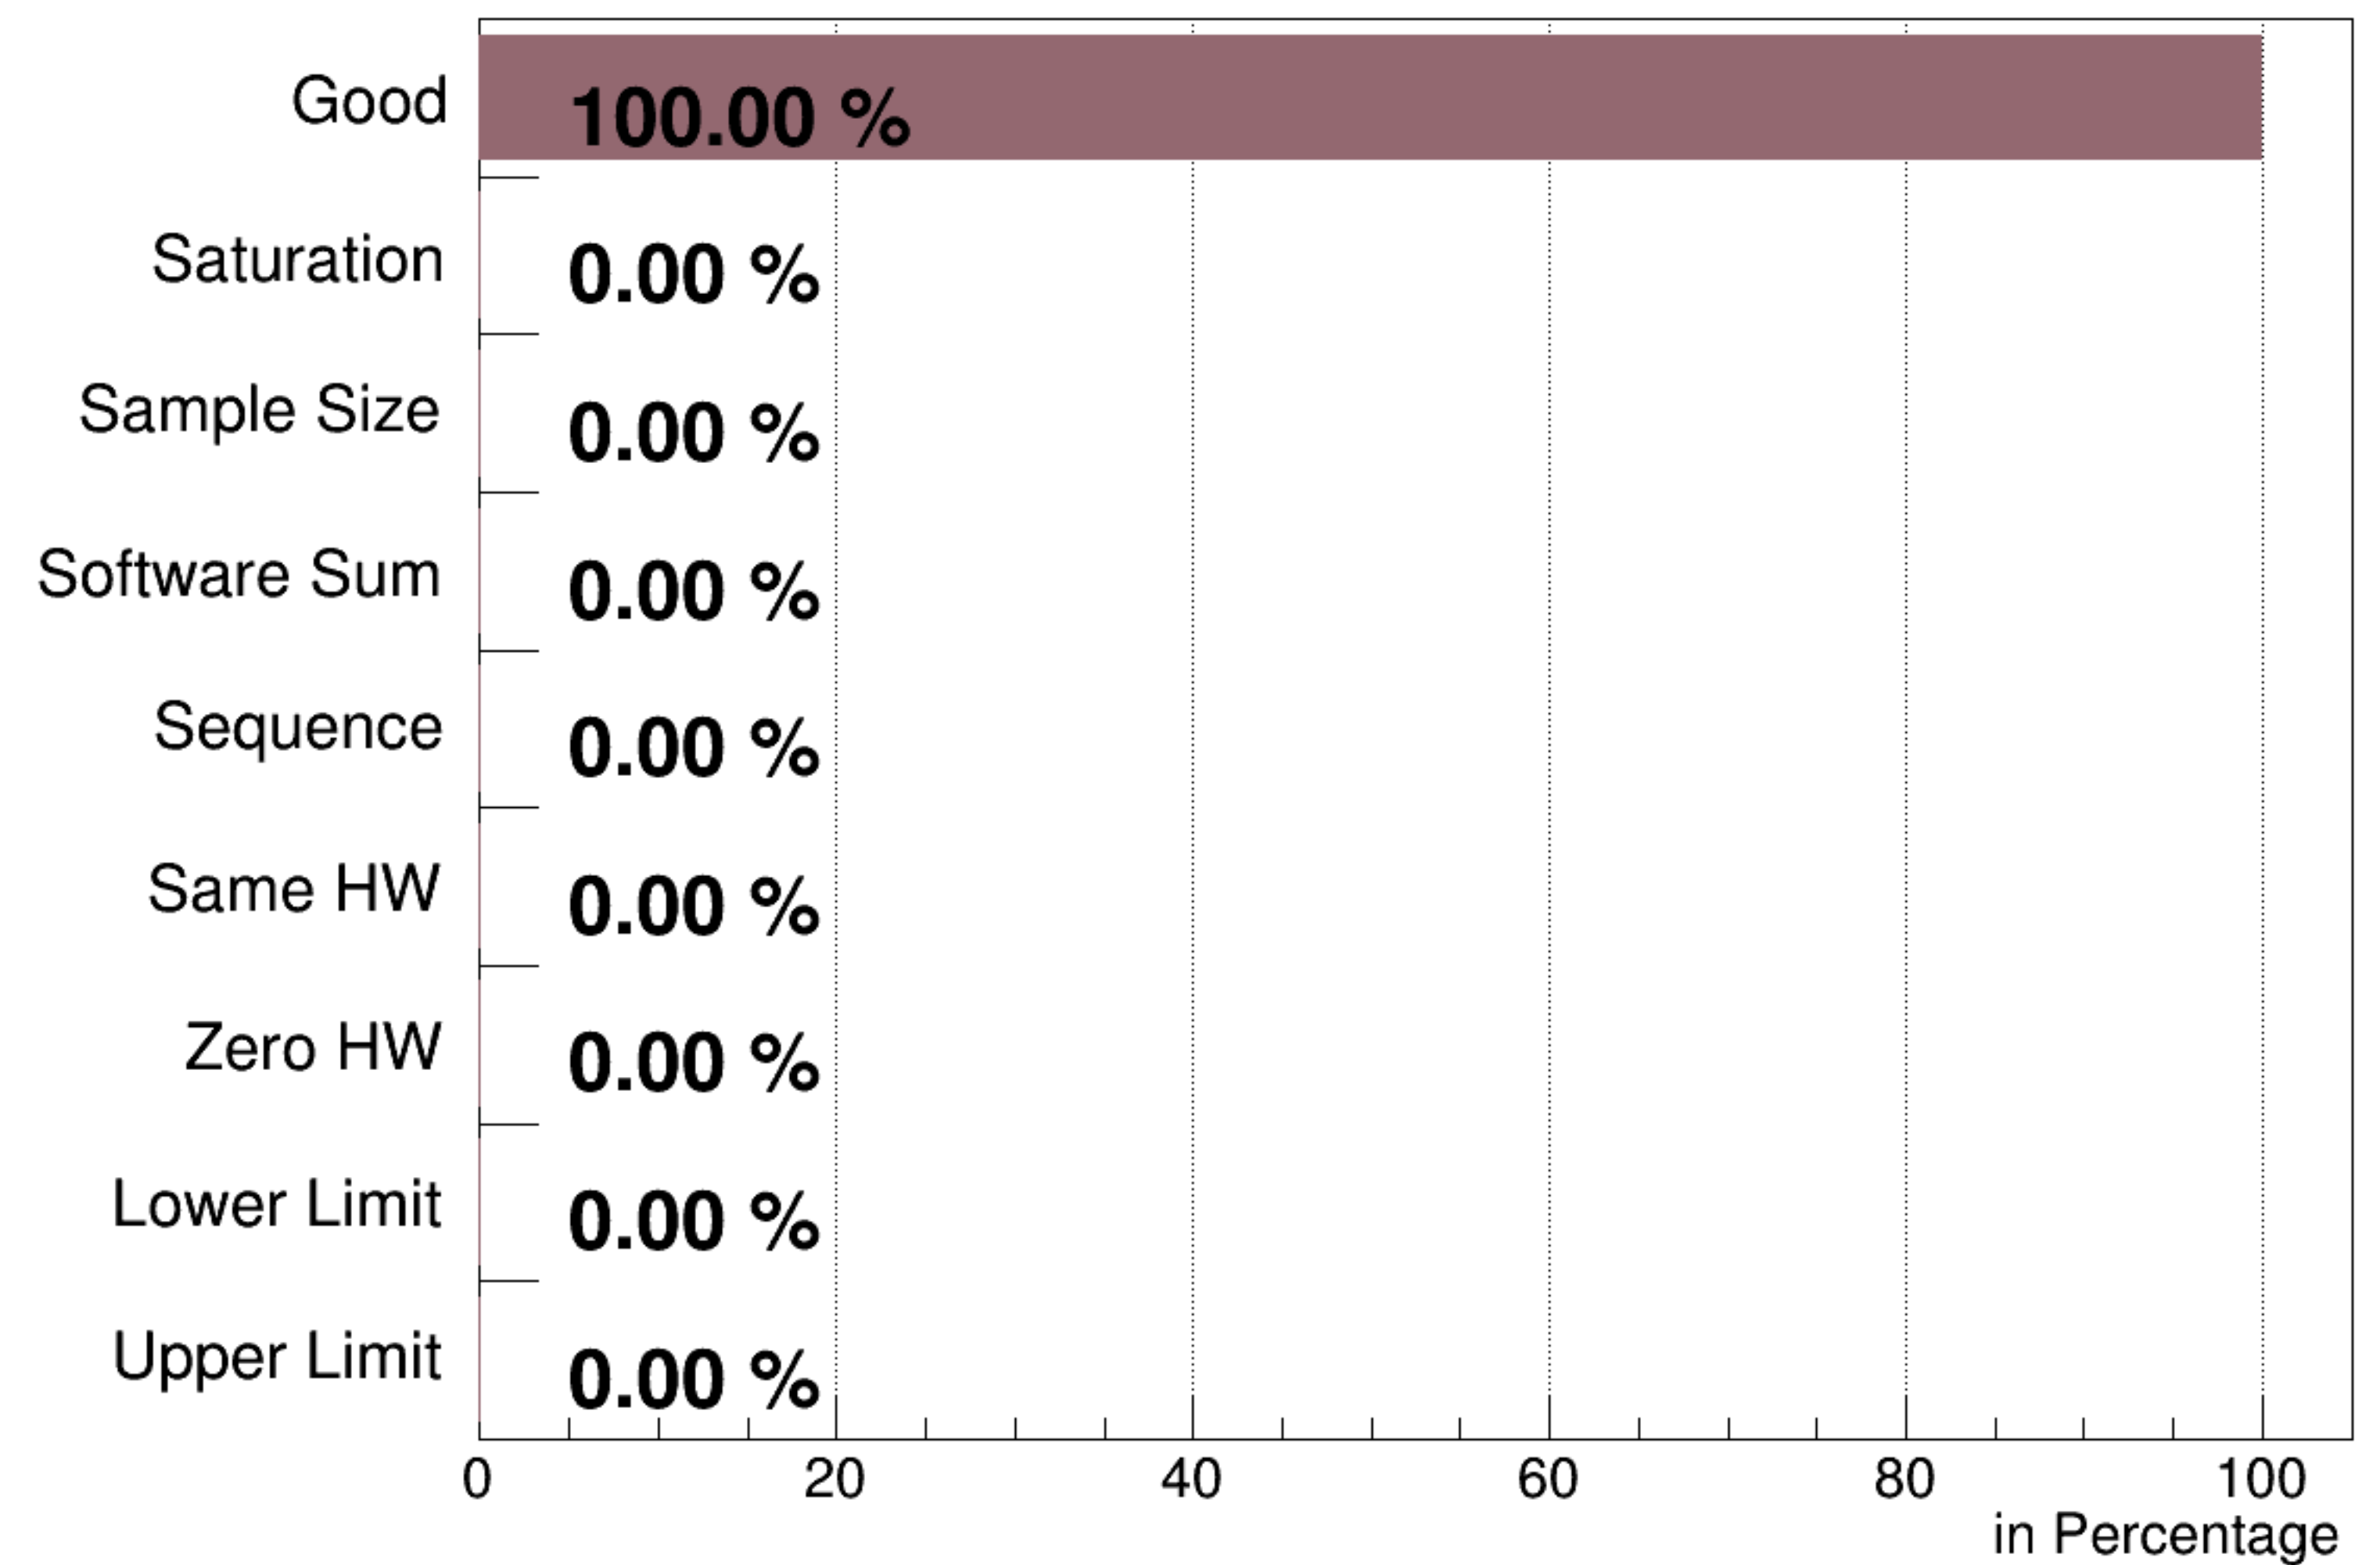 


bpm4aYP Device Error Counter

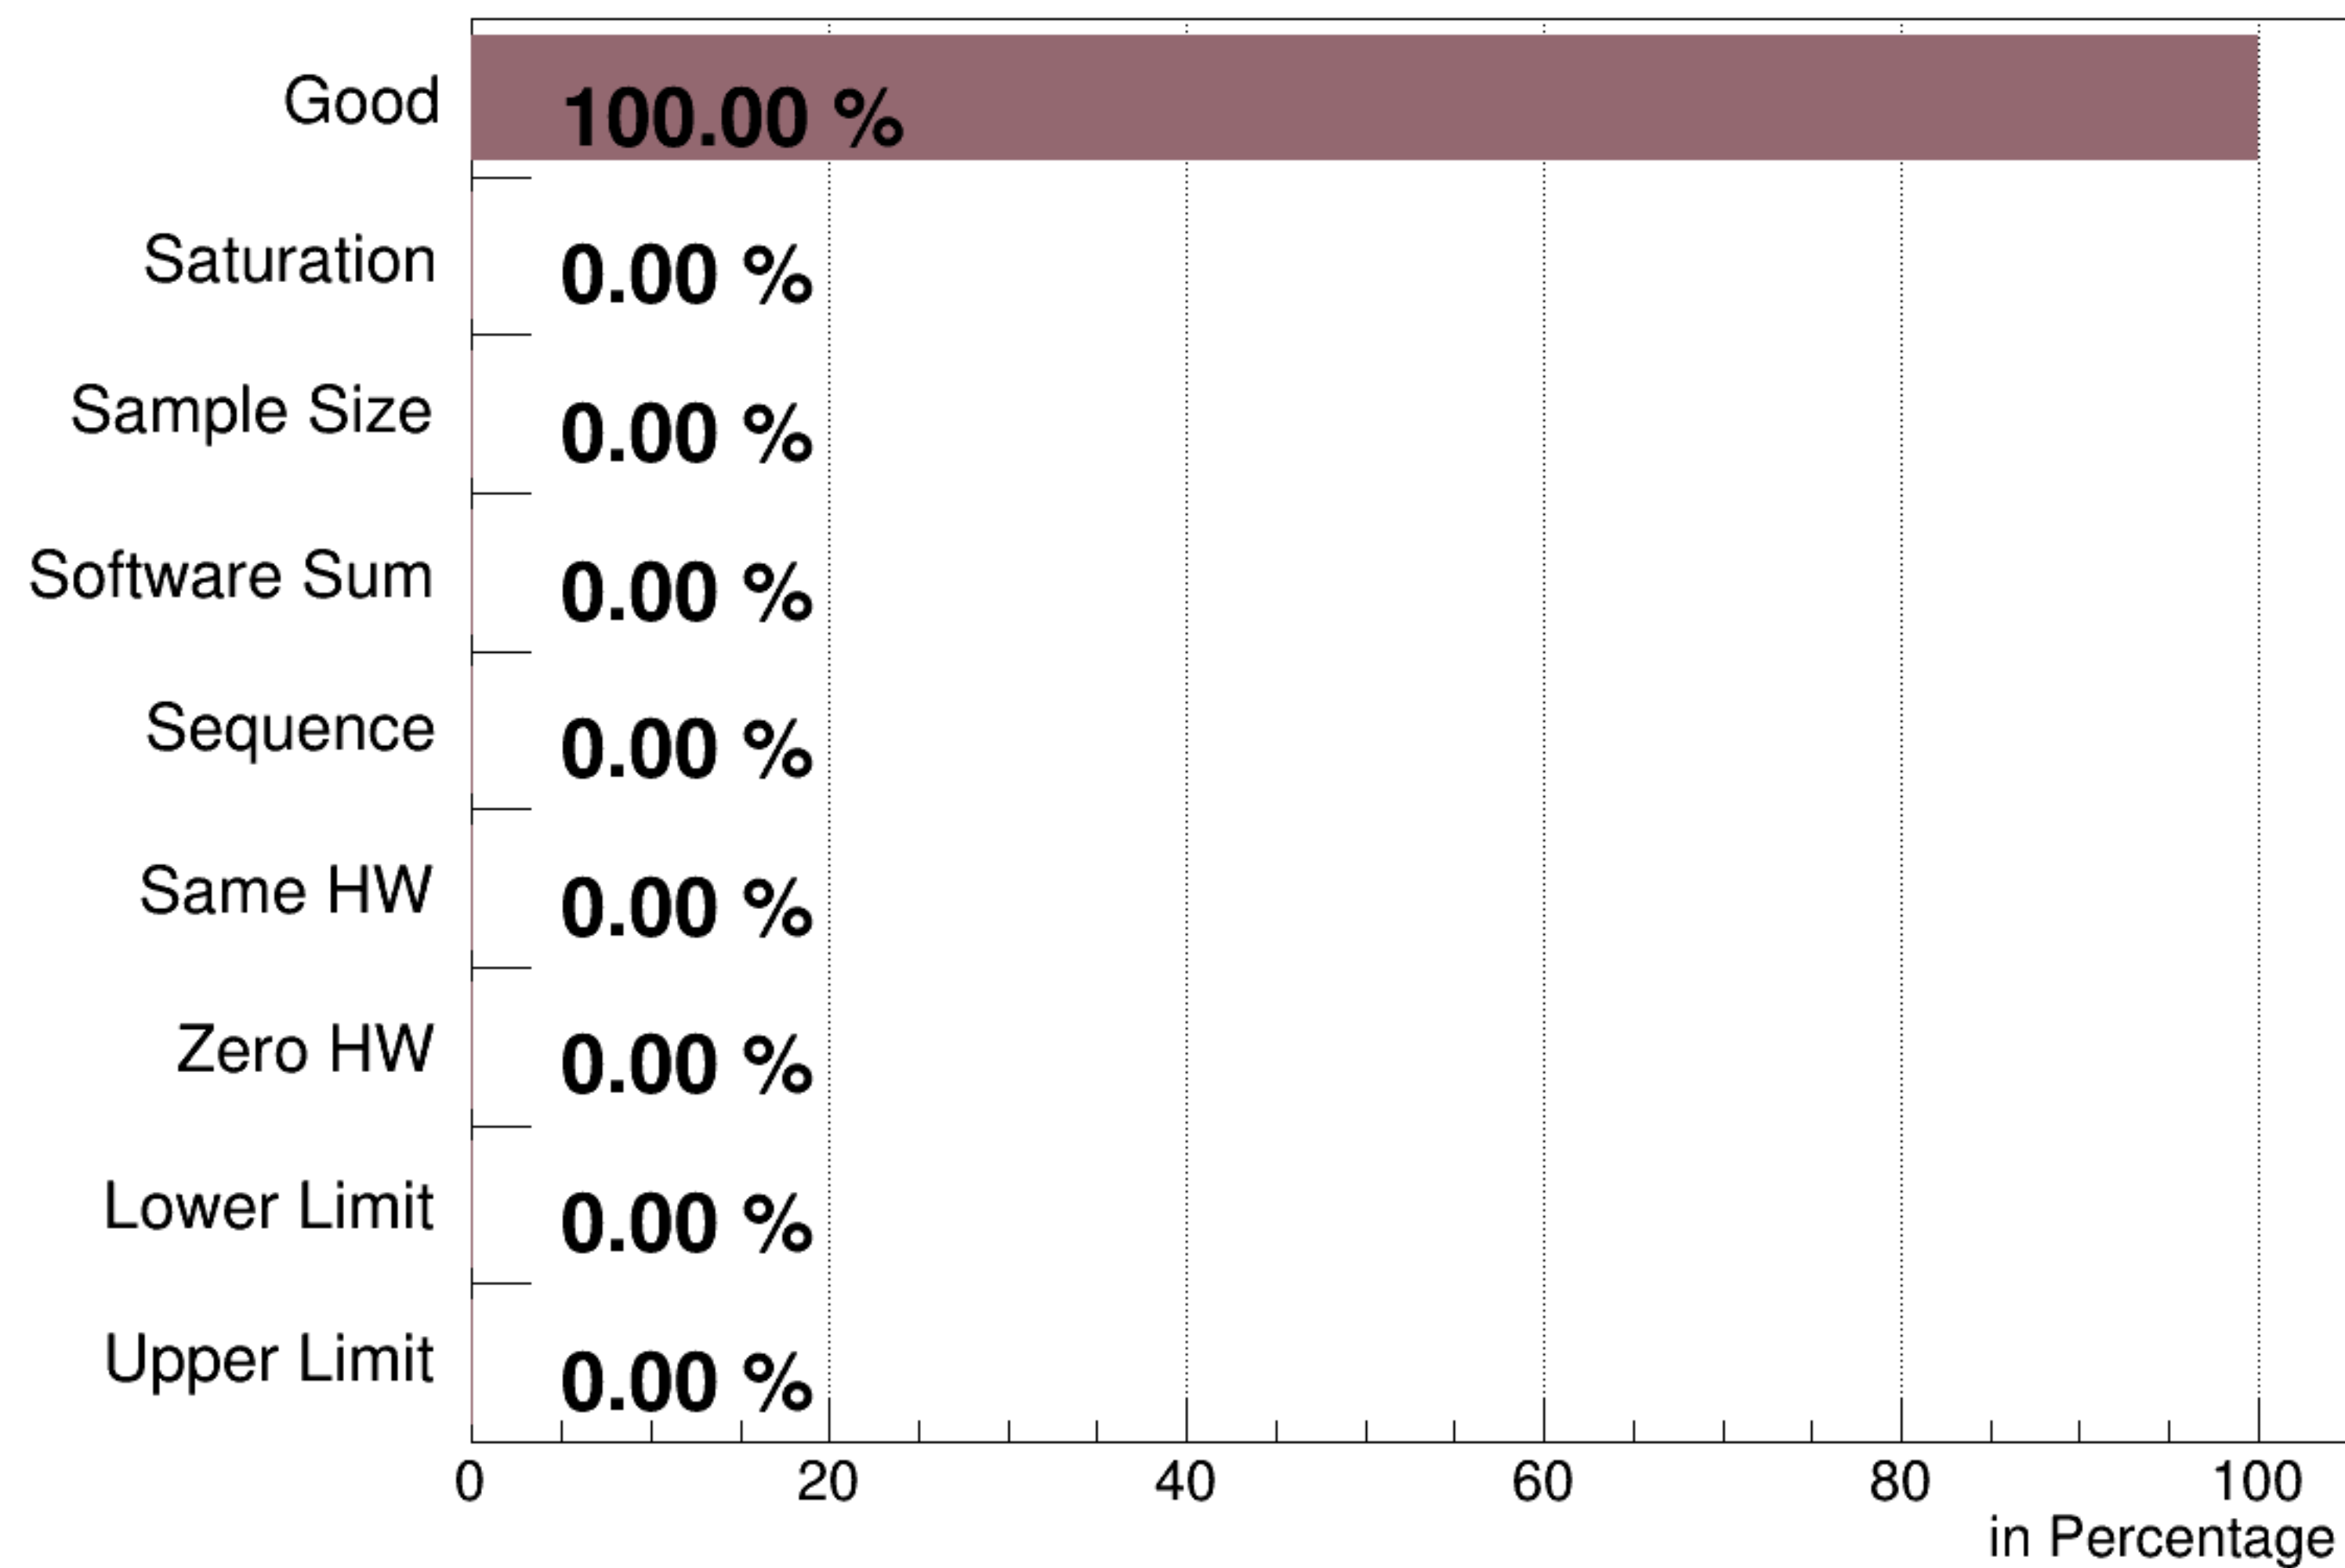 


bpm4aYM Device Error Counter

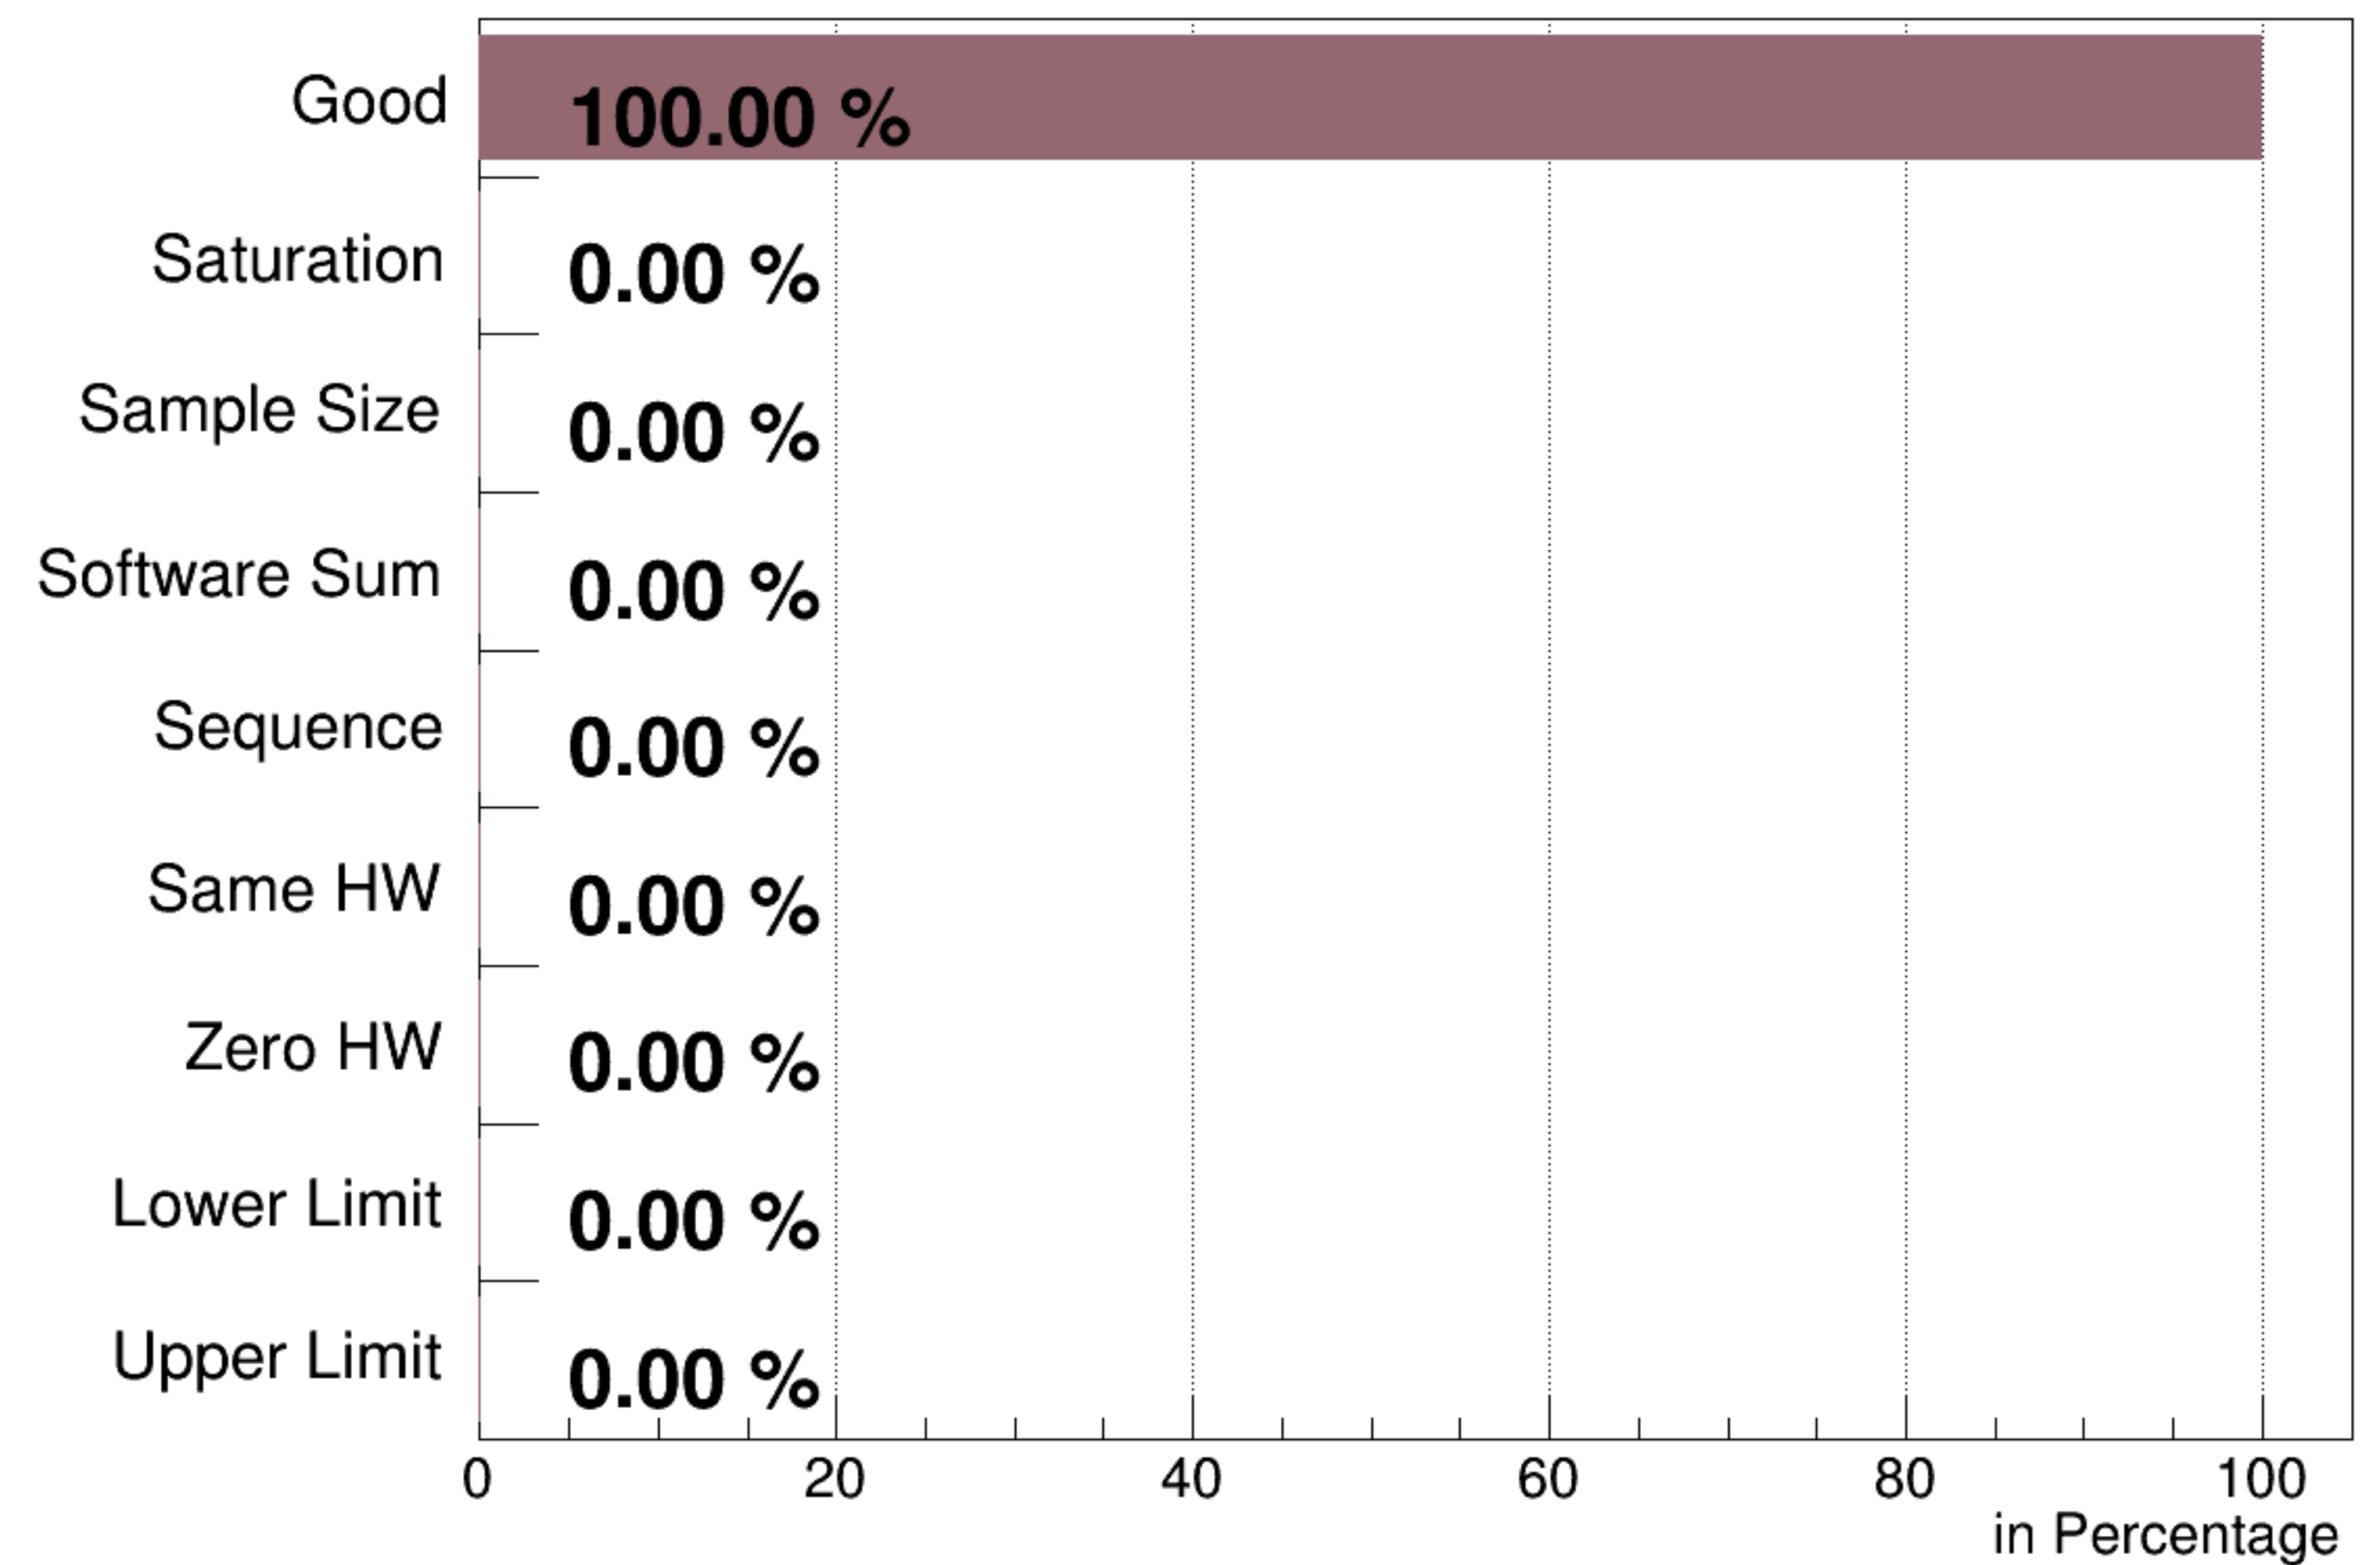 


bpm4eXM Device Error Counter

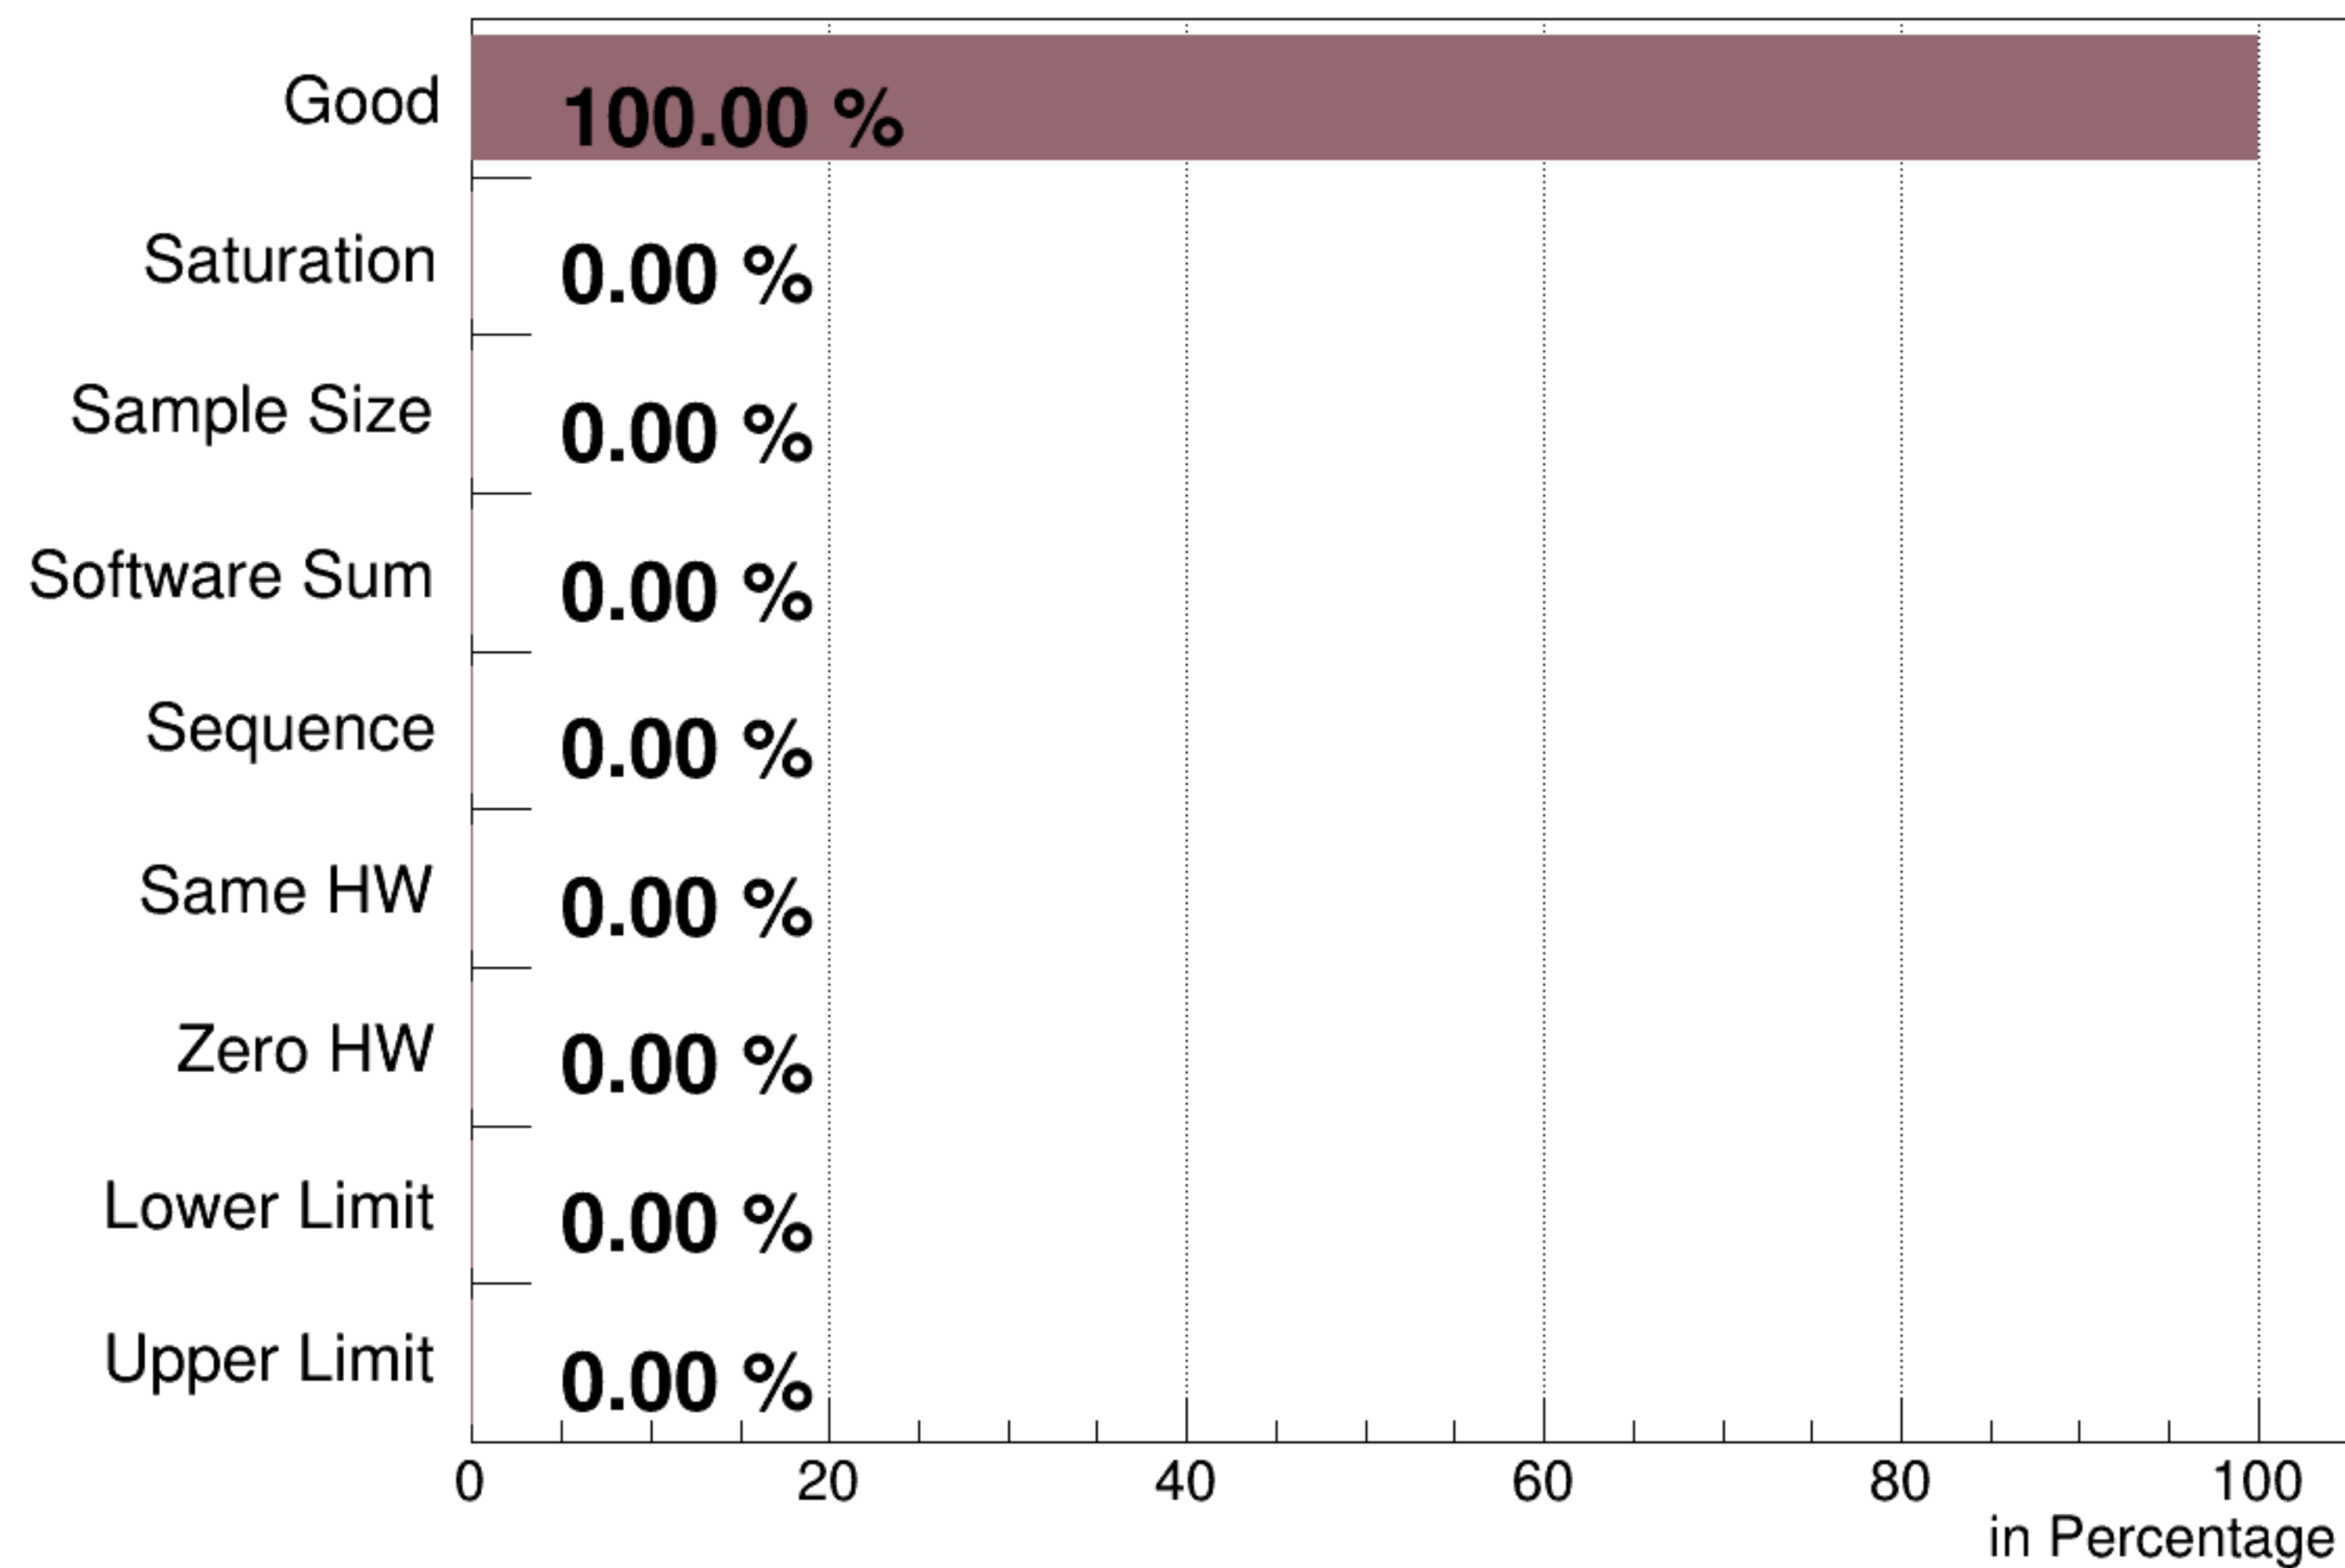 


bpm4eXP Device Error Counter

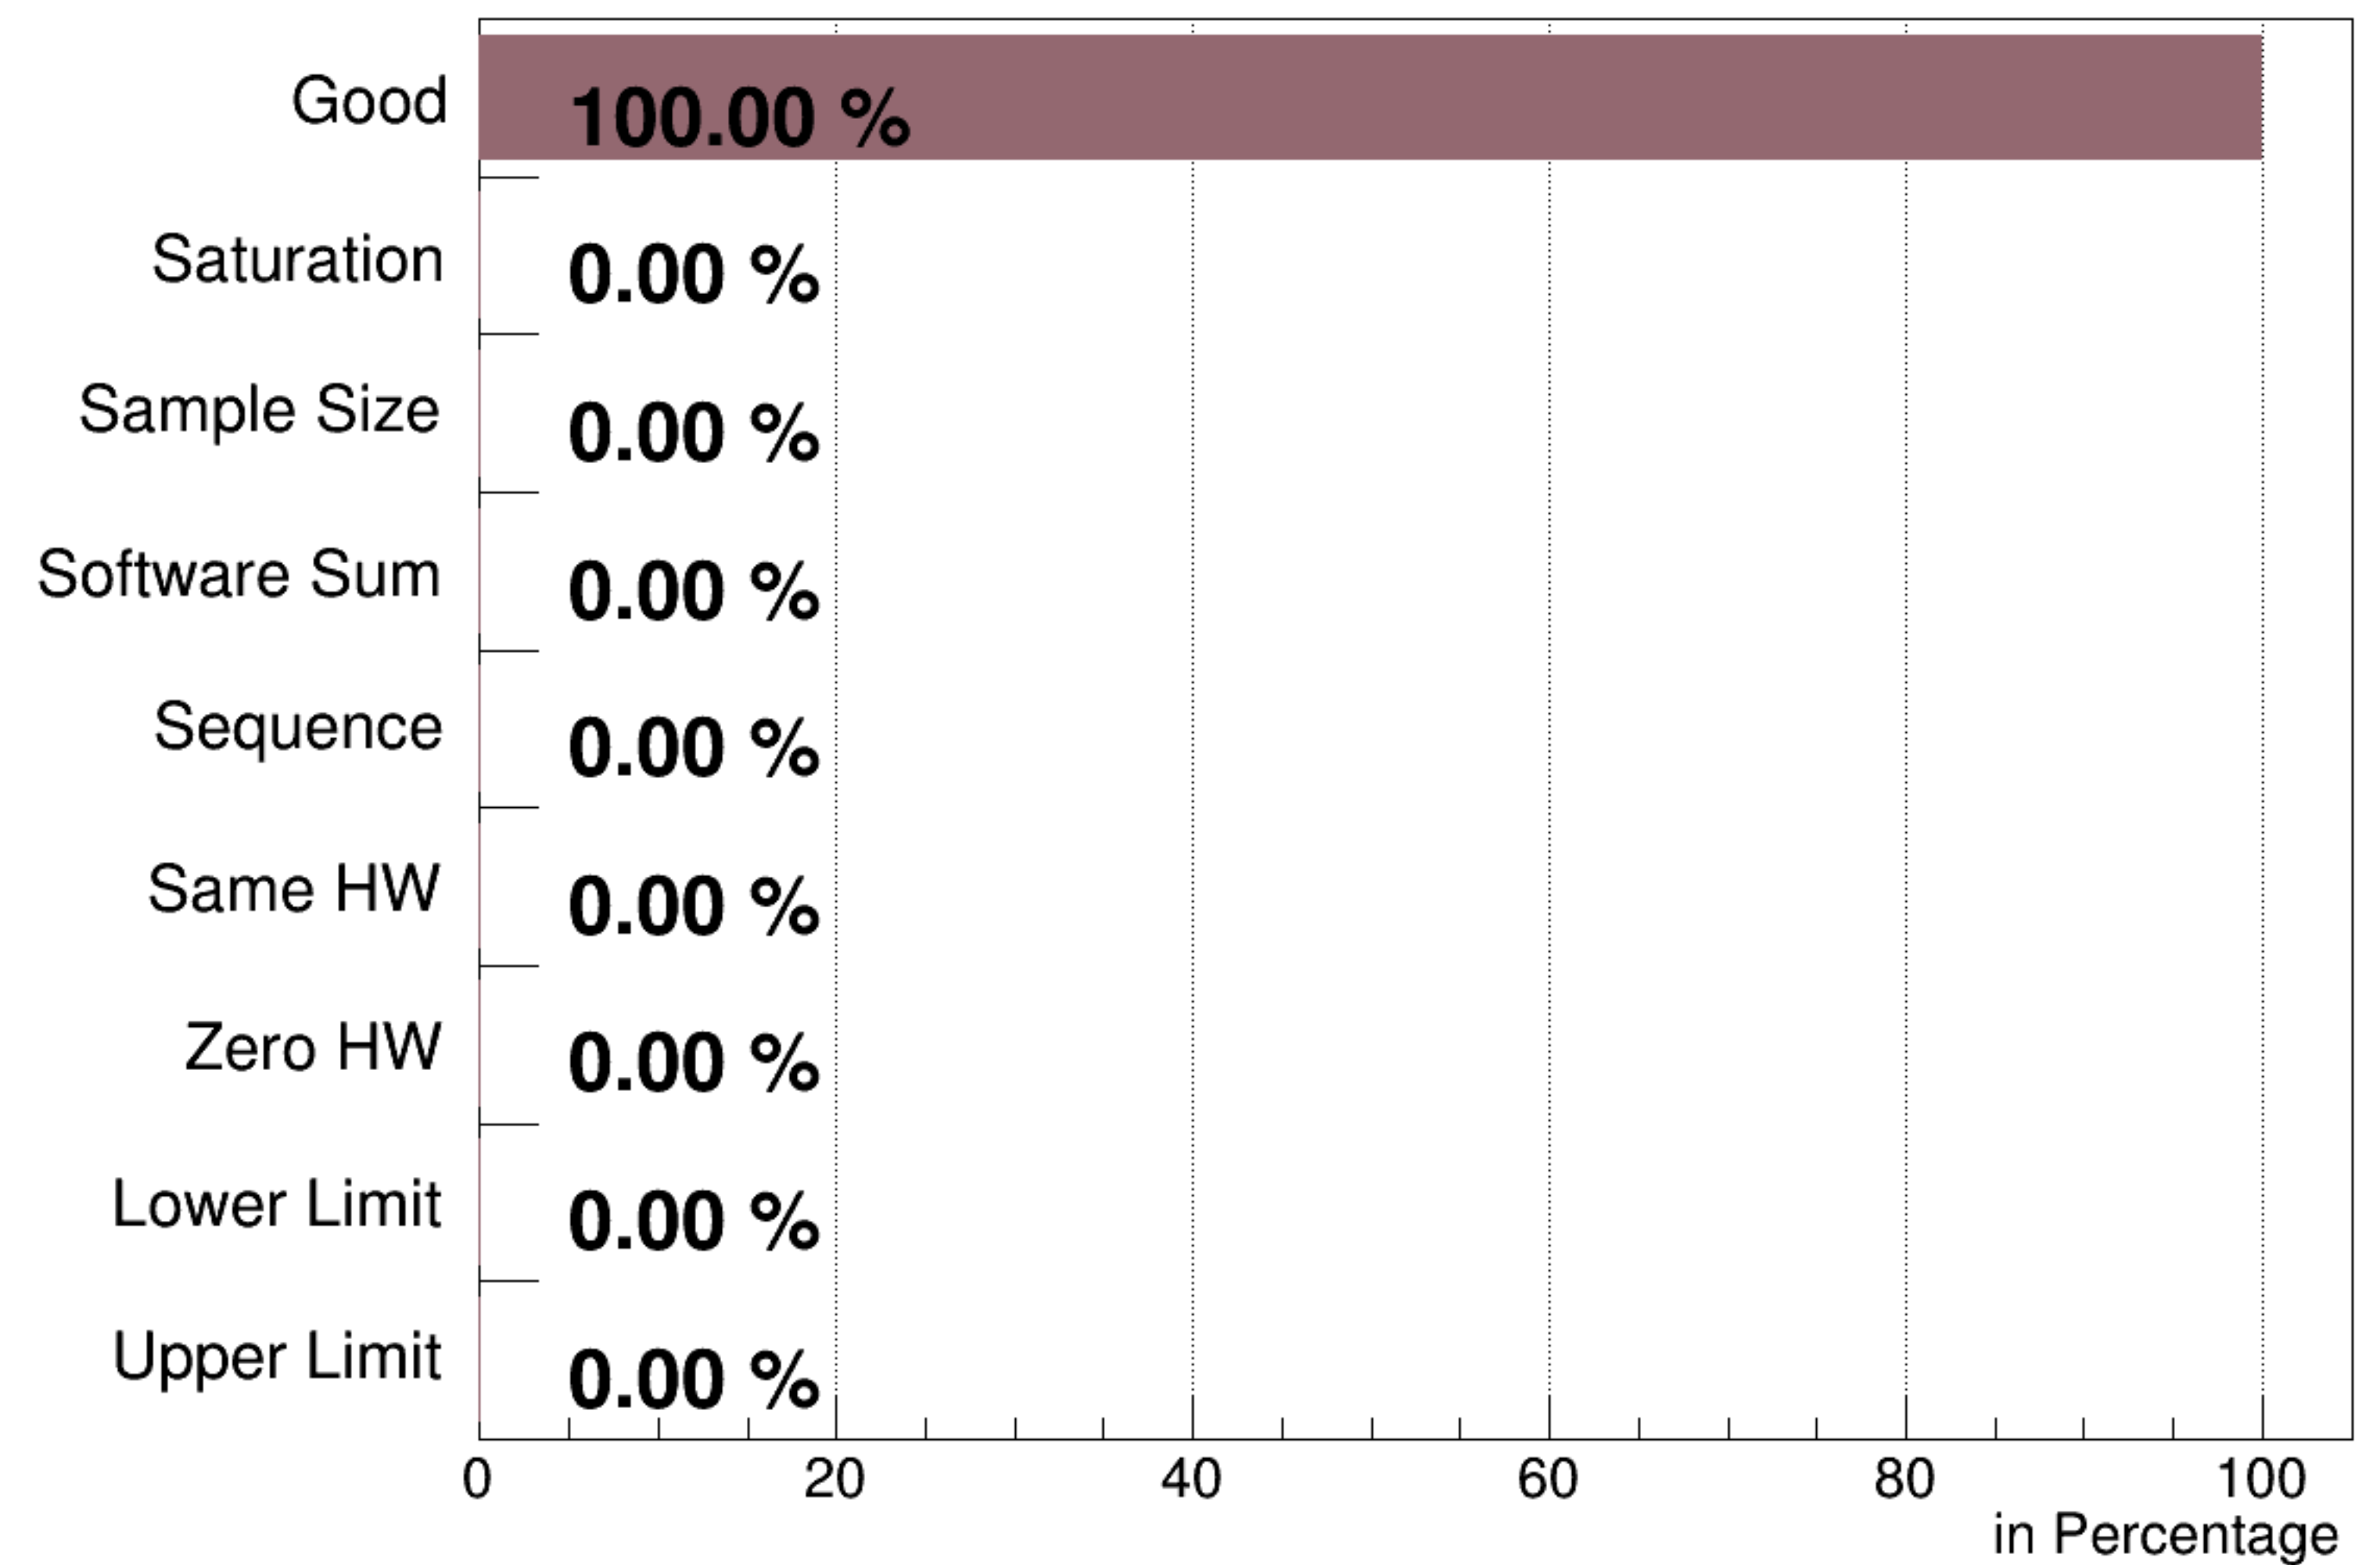 


bpm4eYP Device Error Counter

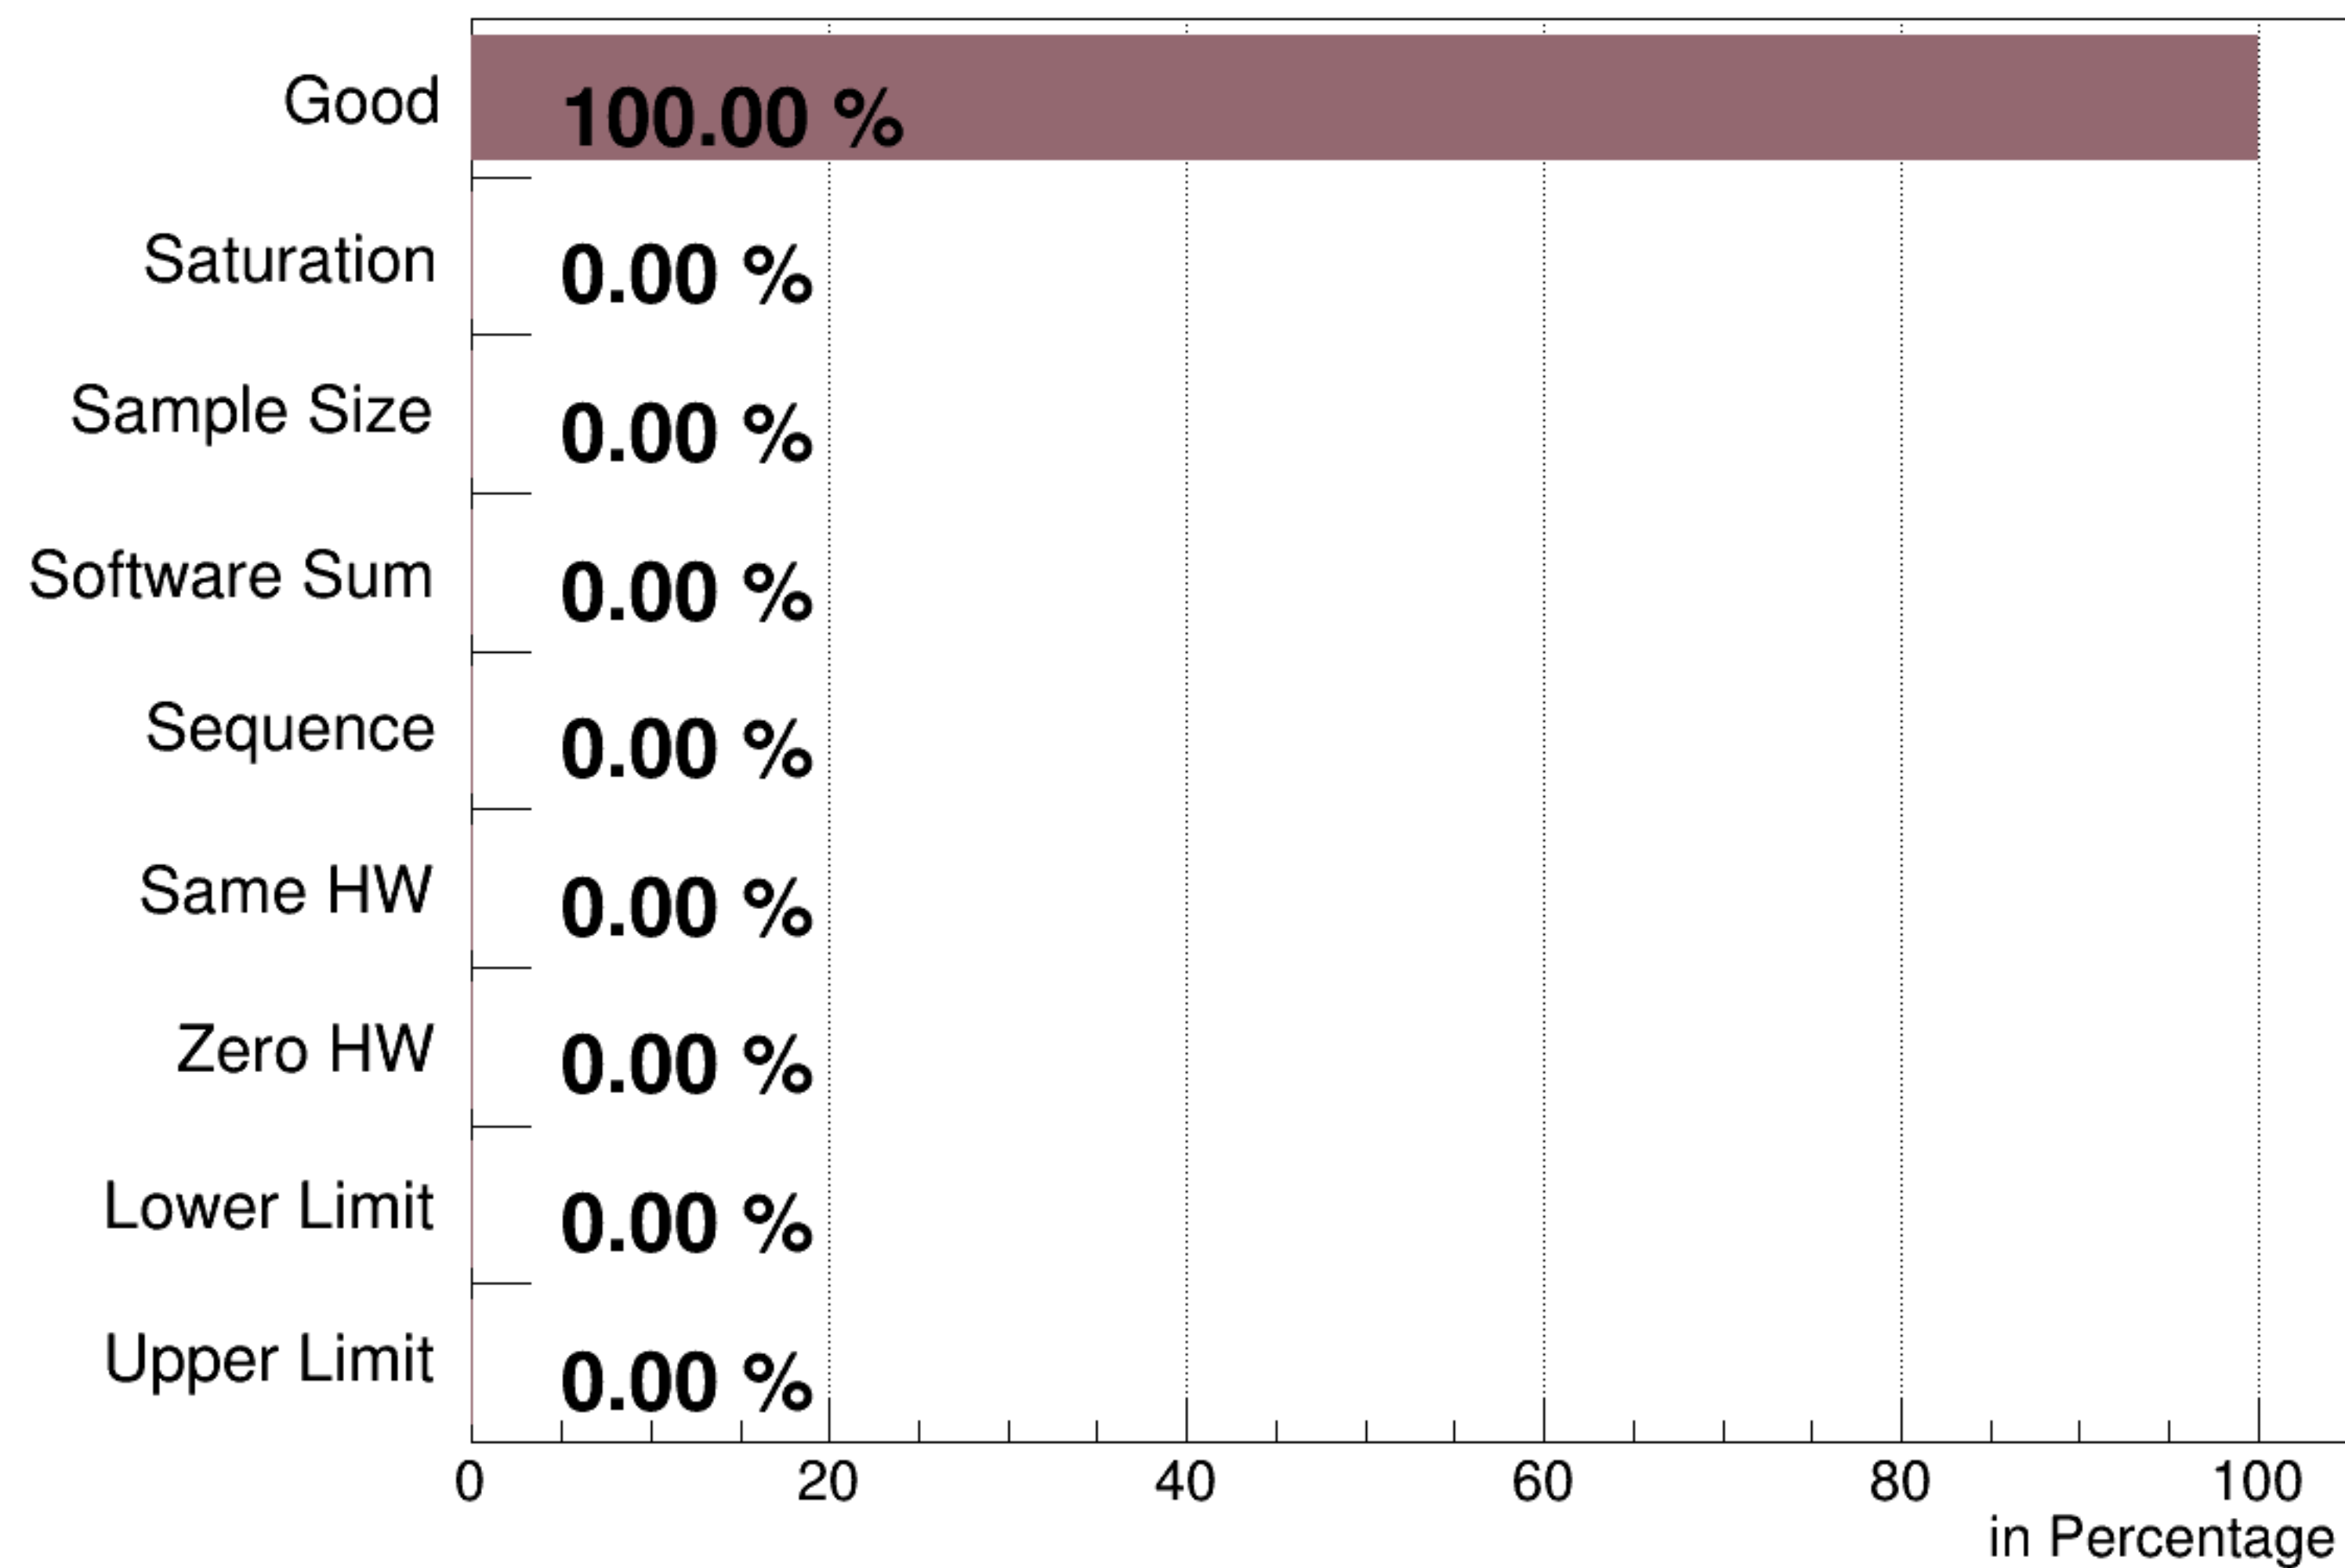 


bpm4eYM Device Error Counter

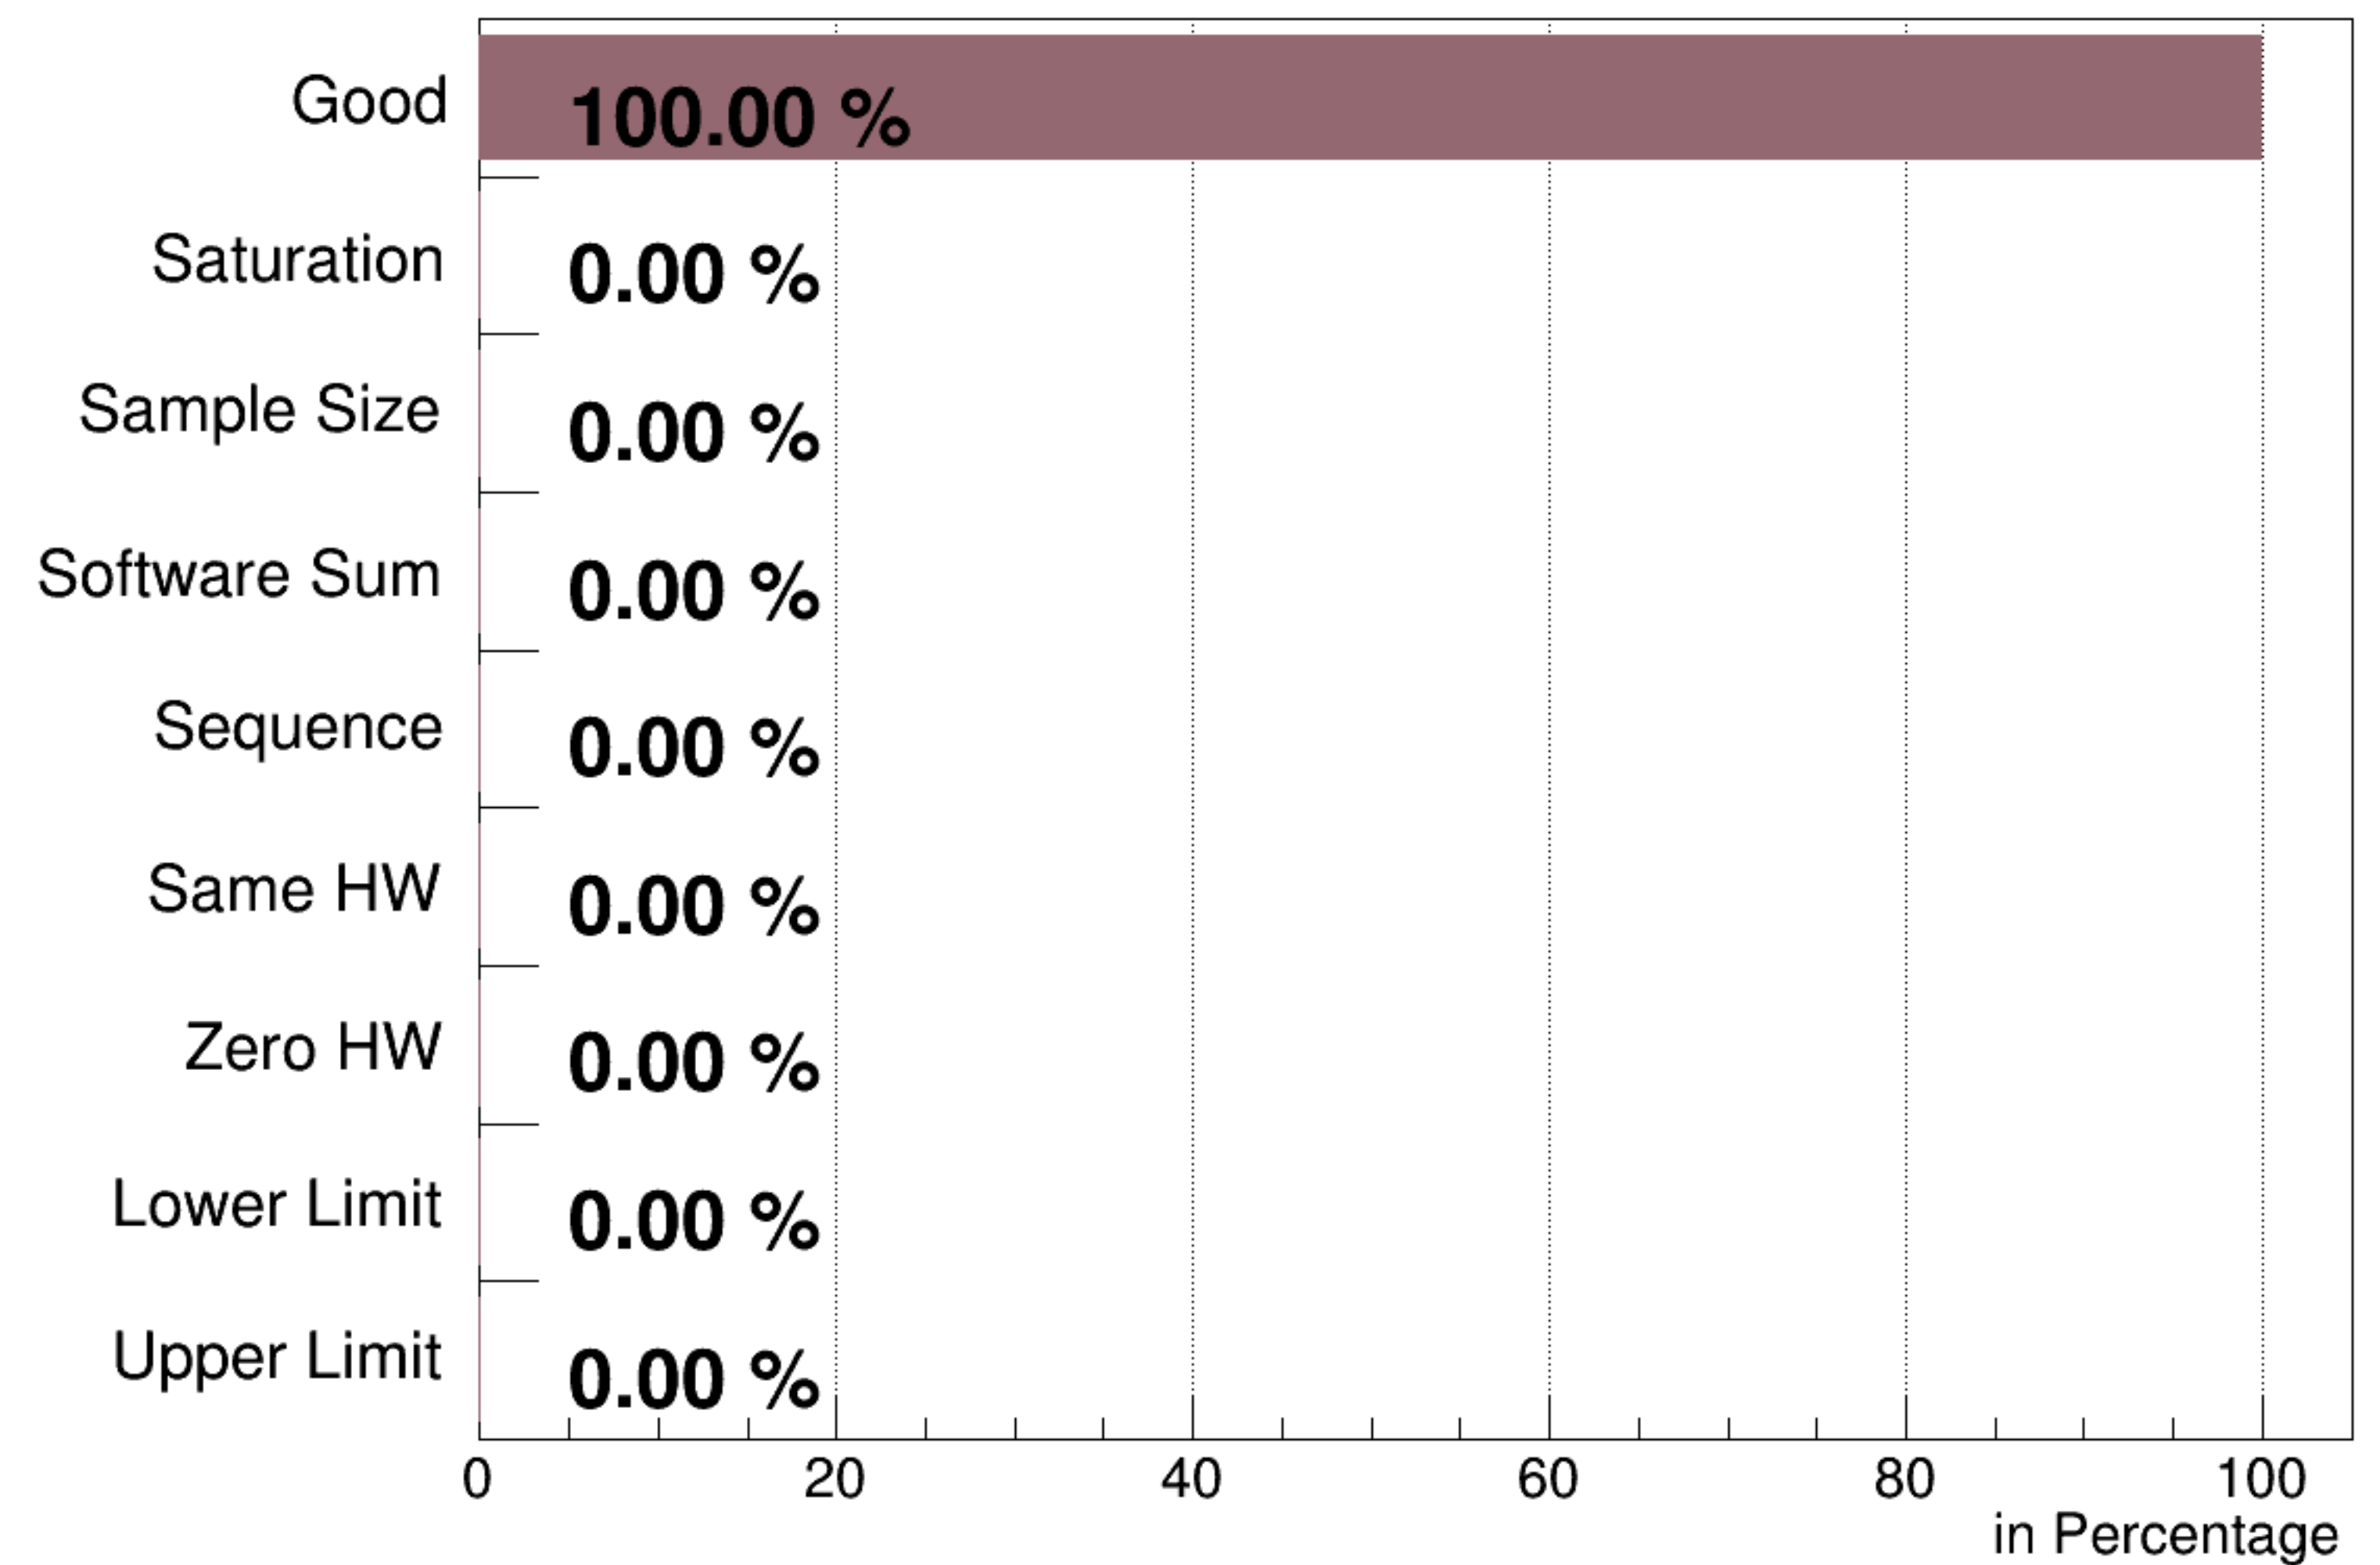 


bpm12XM Device Error Counter

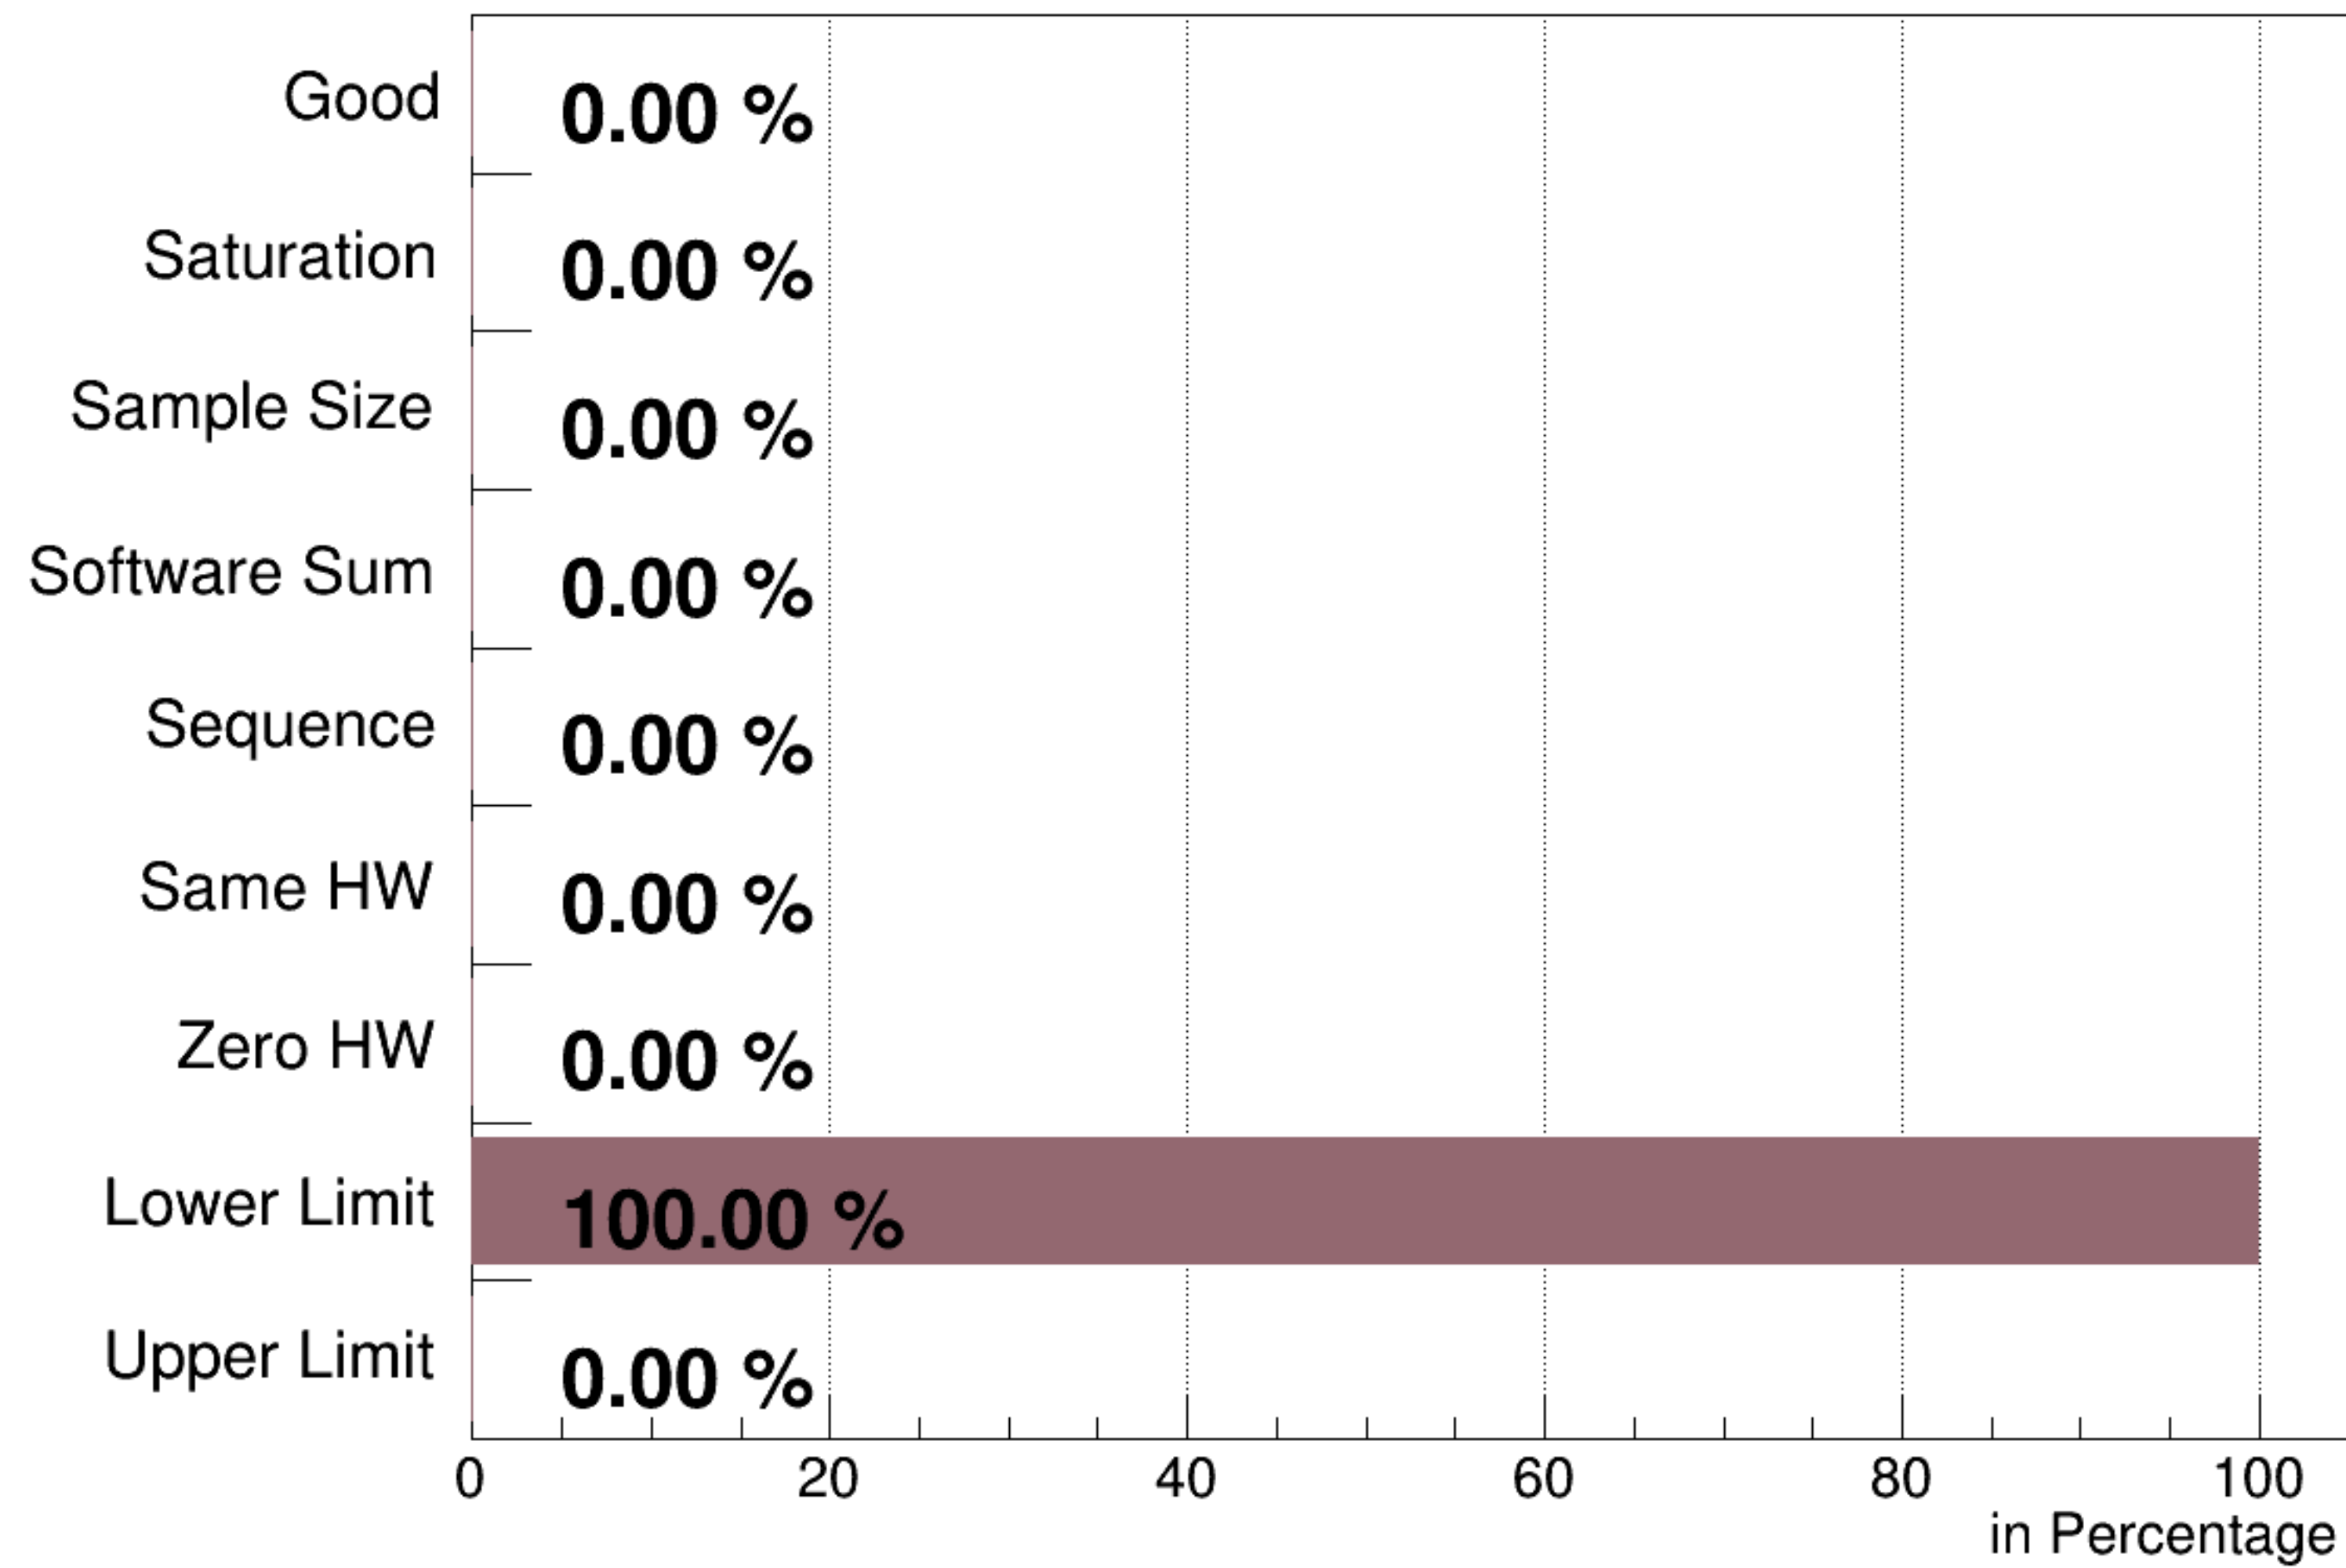 


bpm12XP Device Error Counter

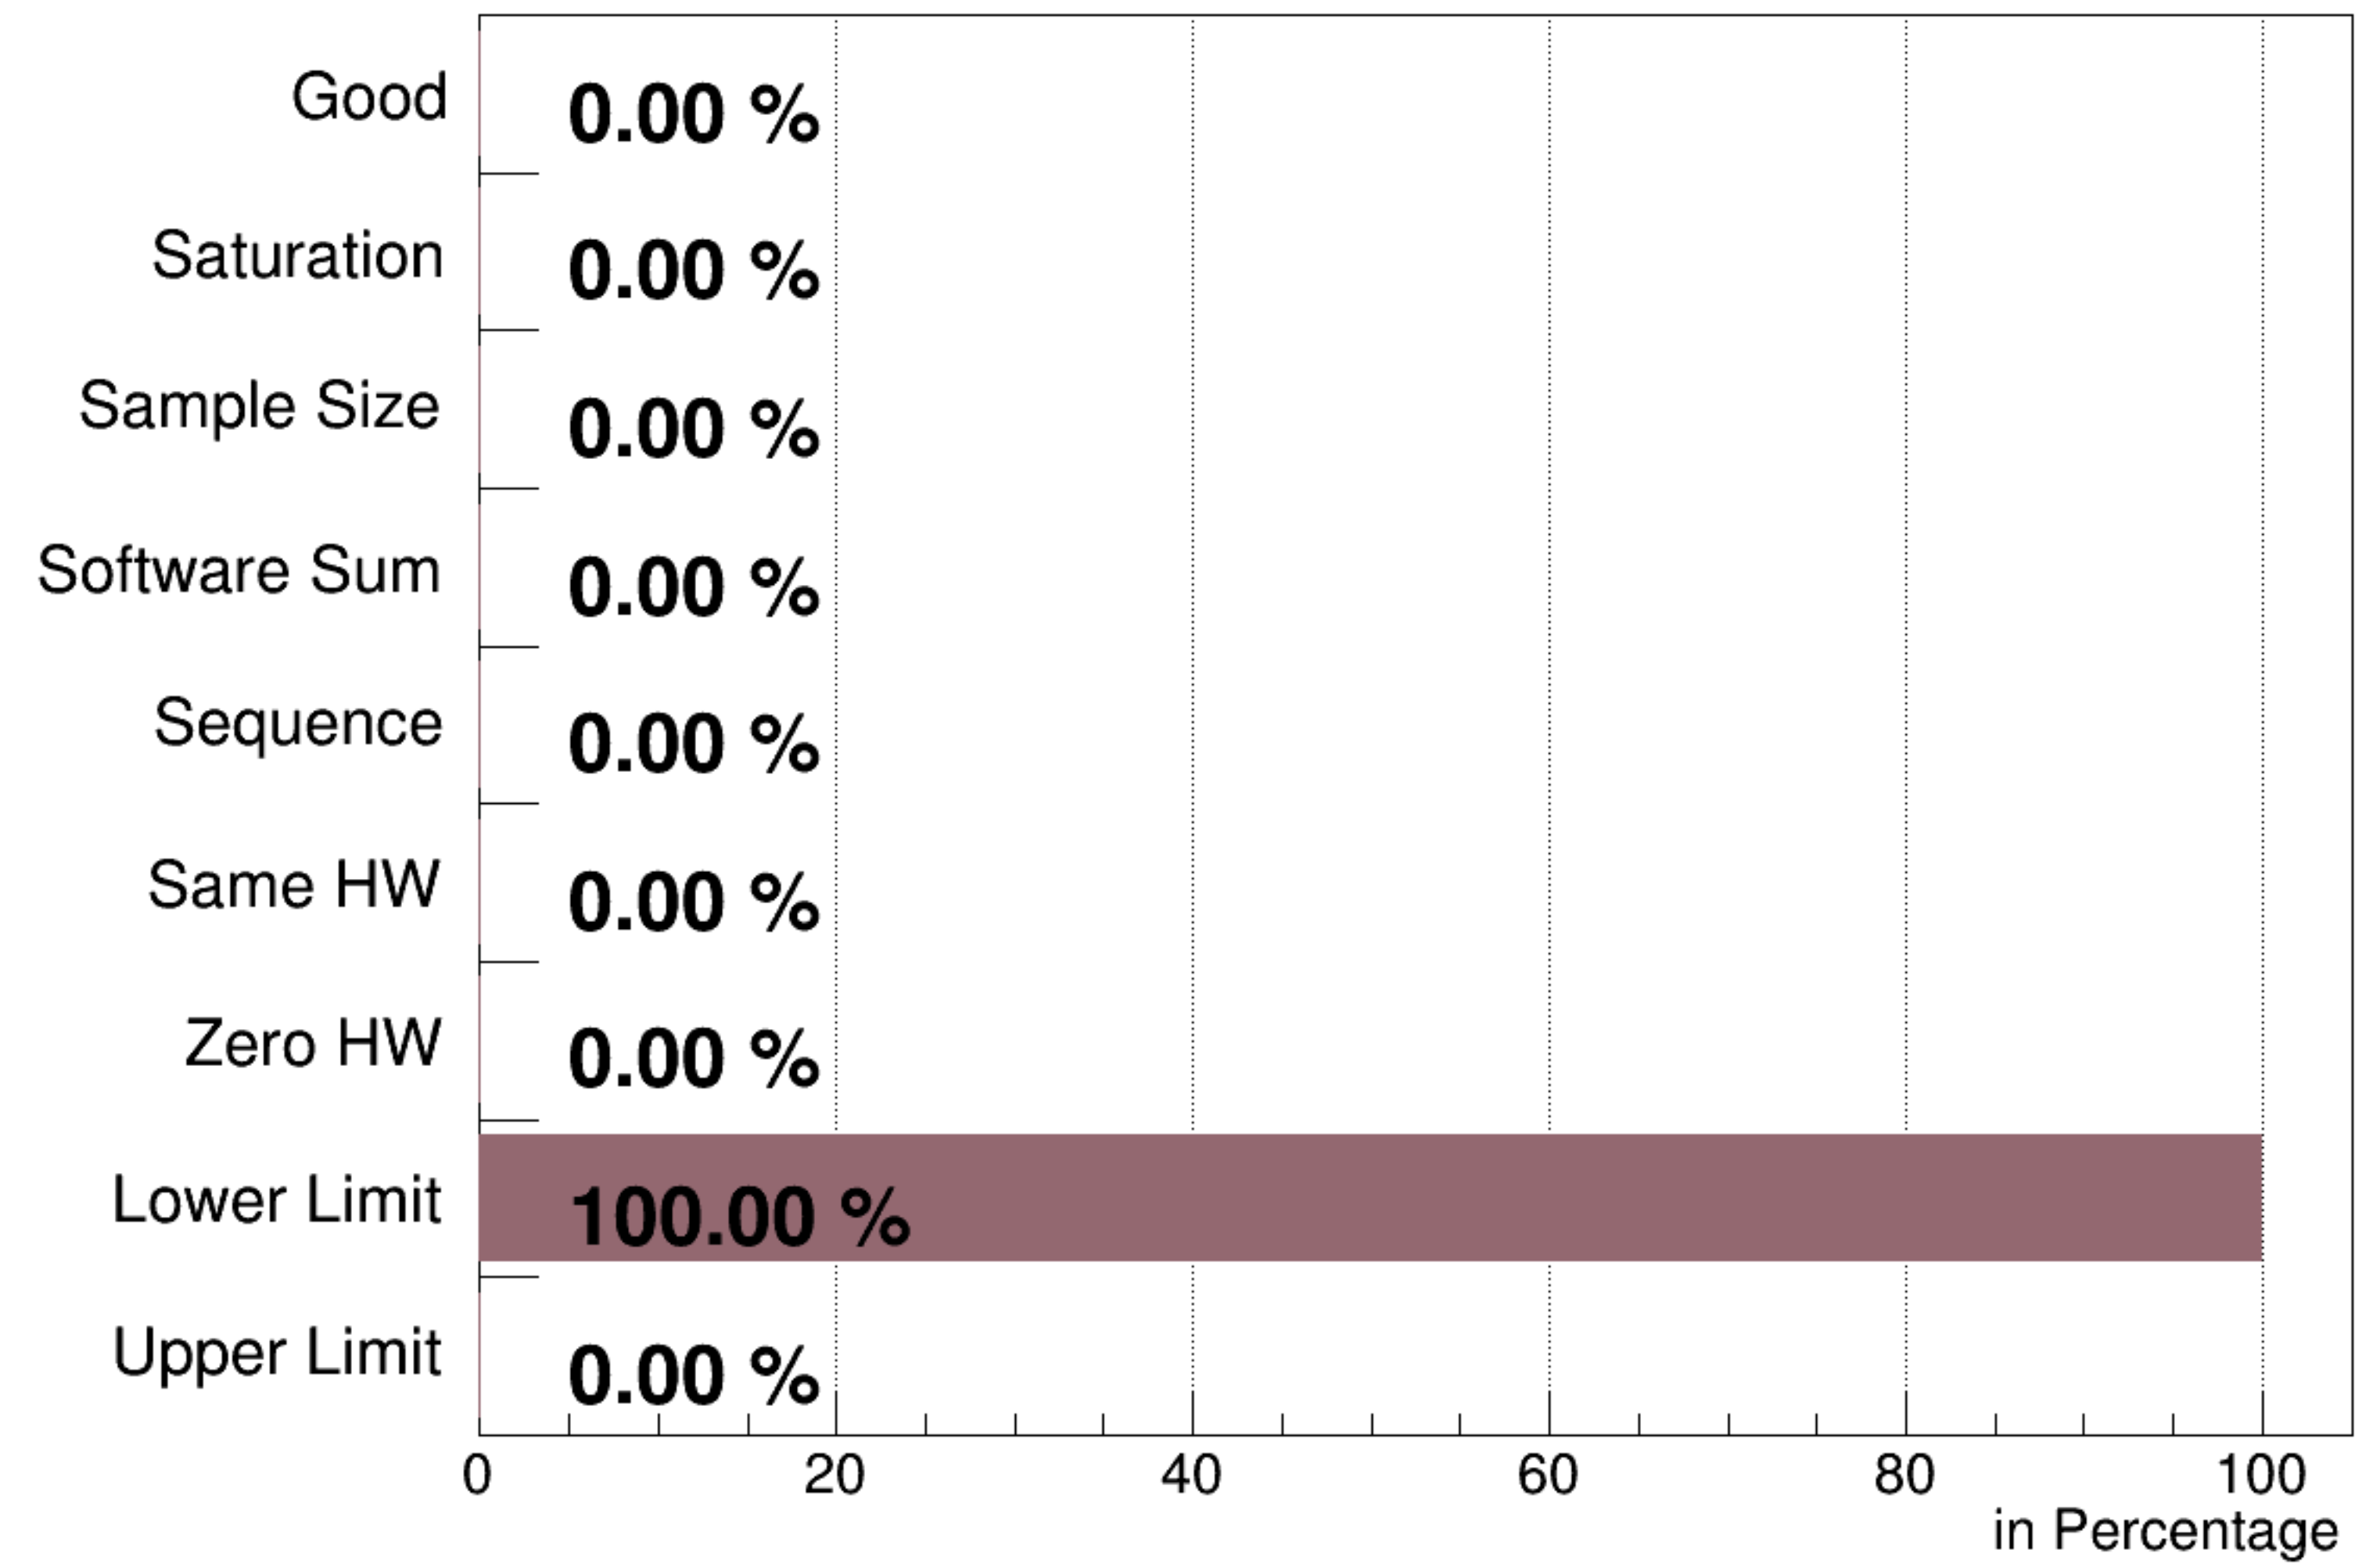 


bpm12YP Device Error Counter

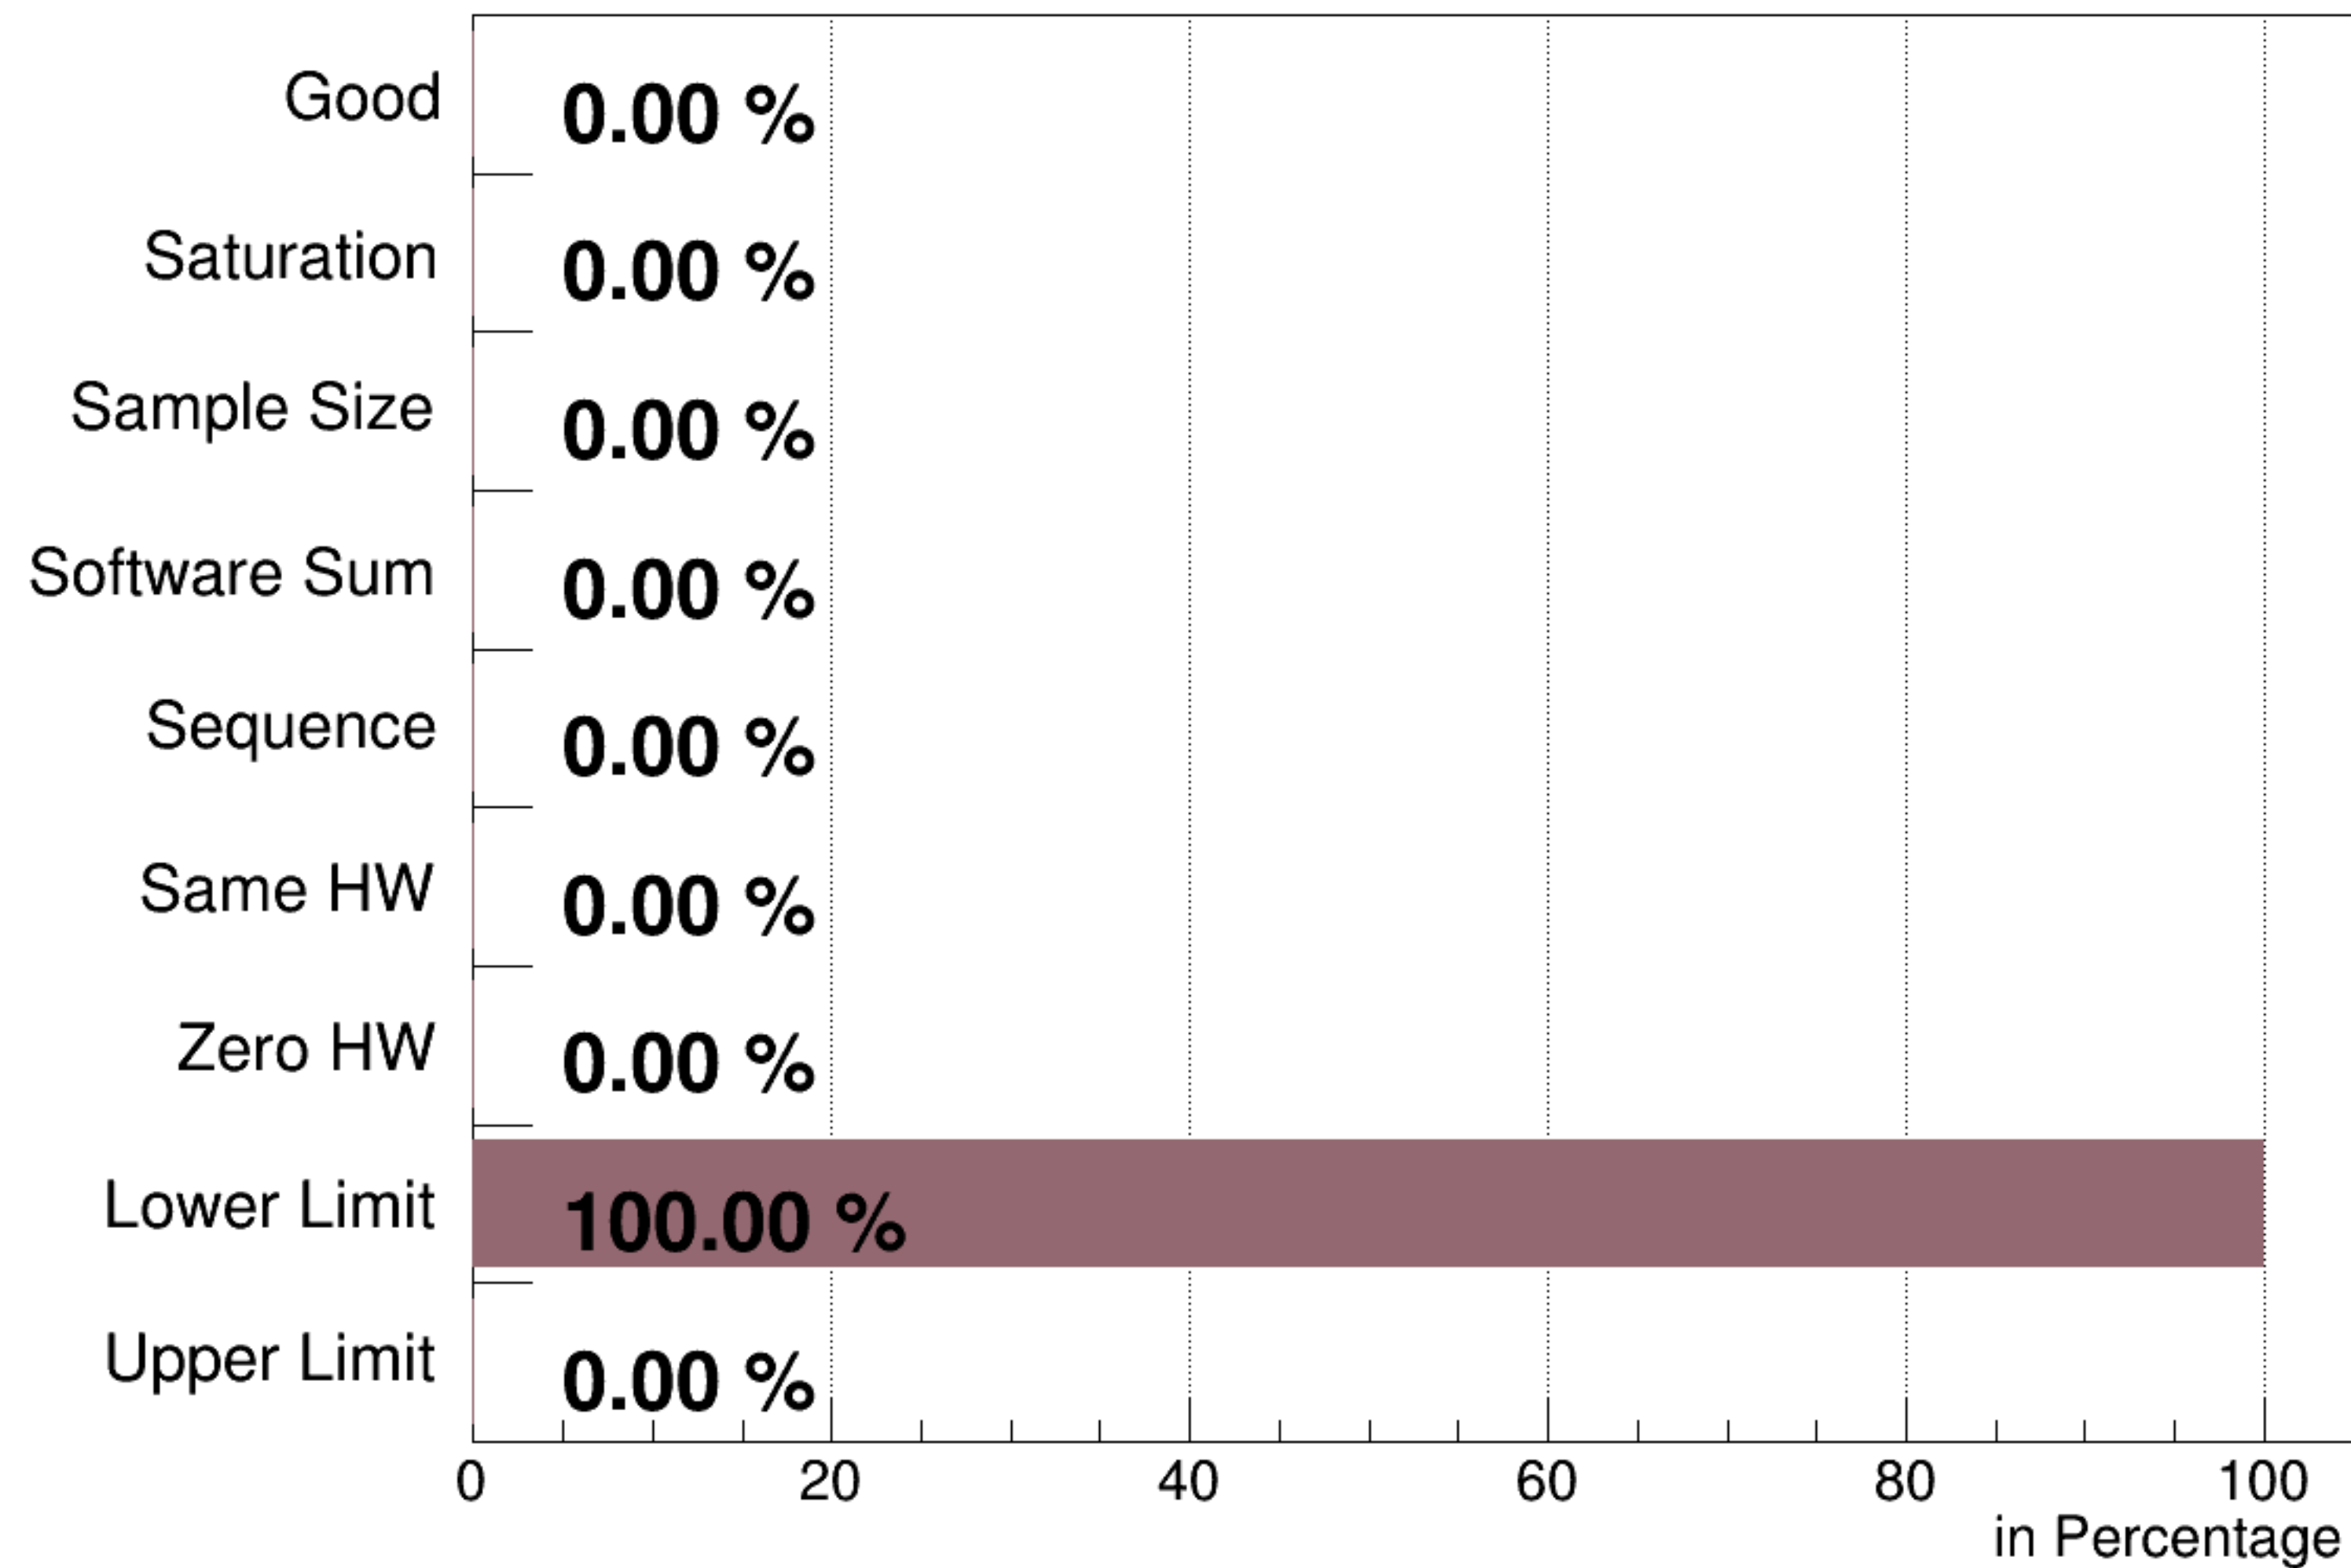 


bpm12YM Device Error Counter

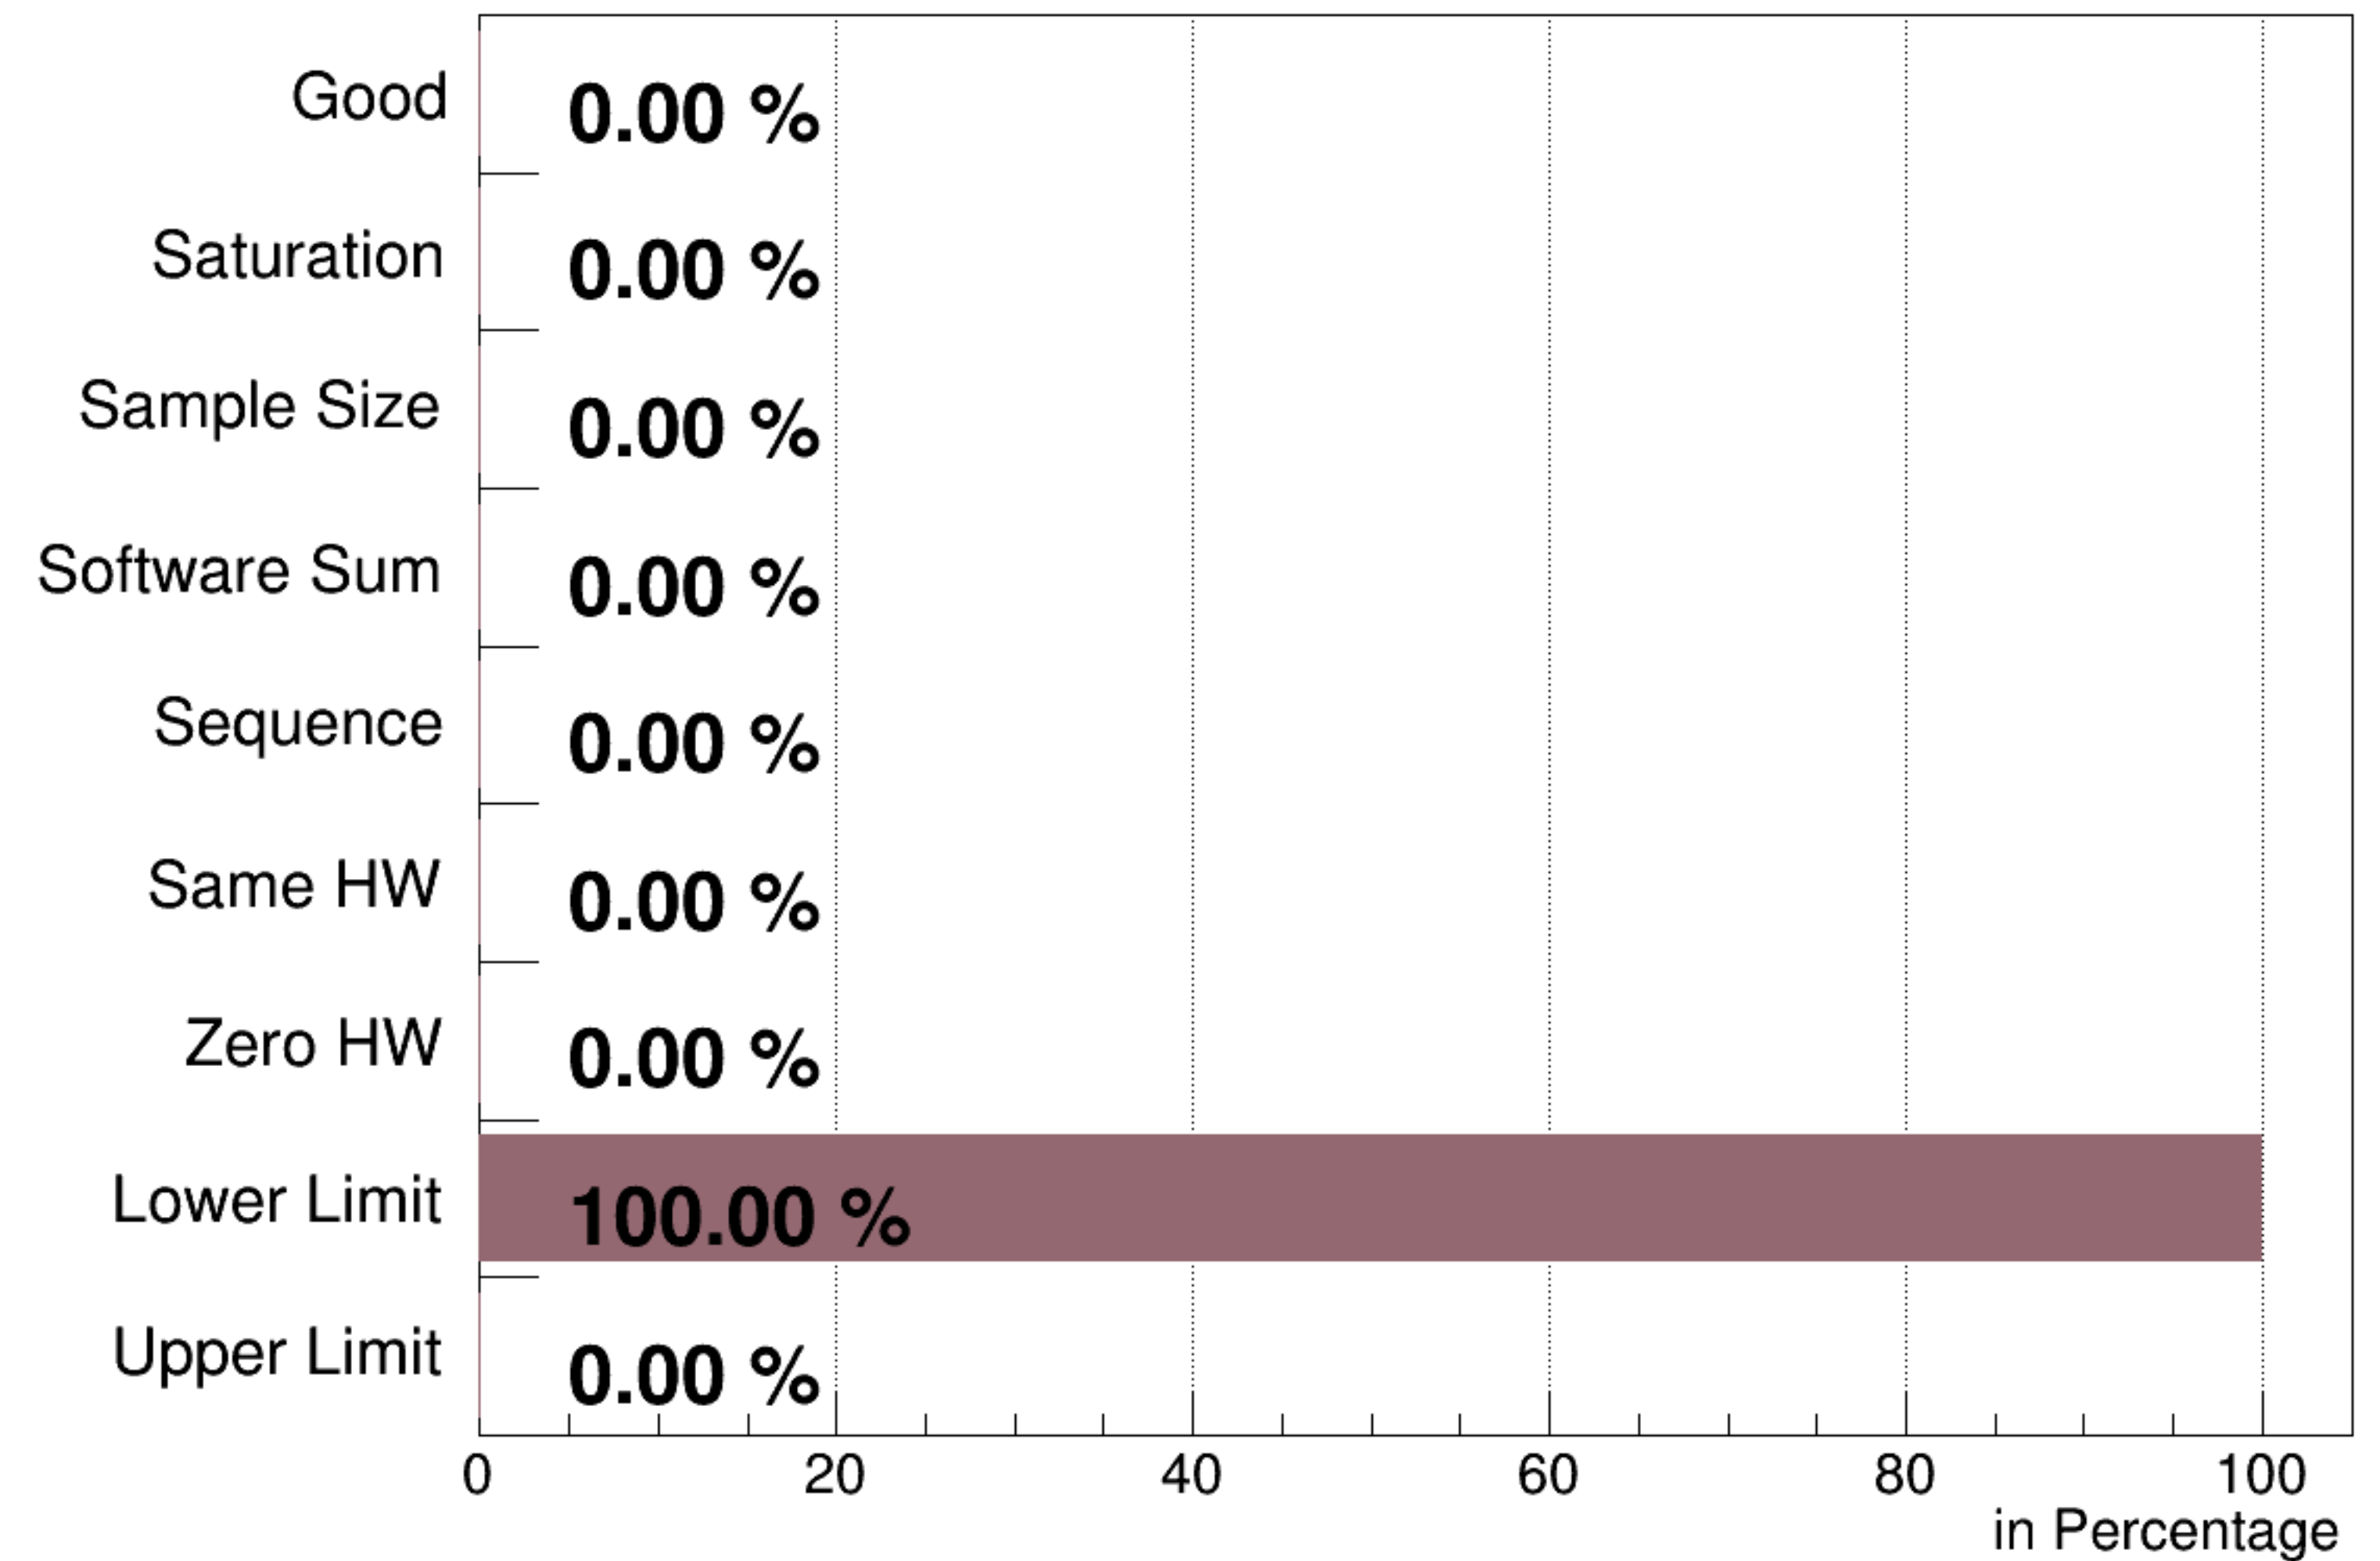 


bpm11XM Device Error Counter

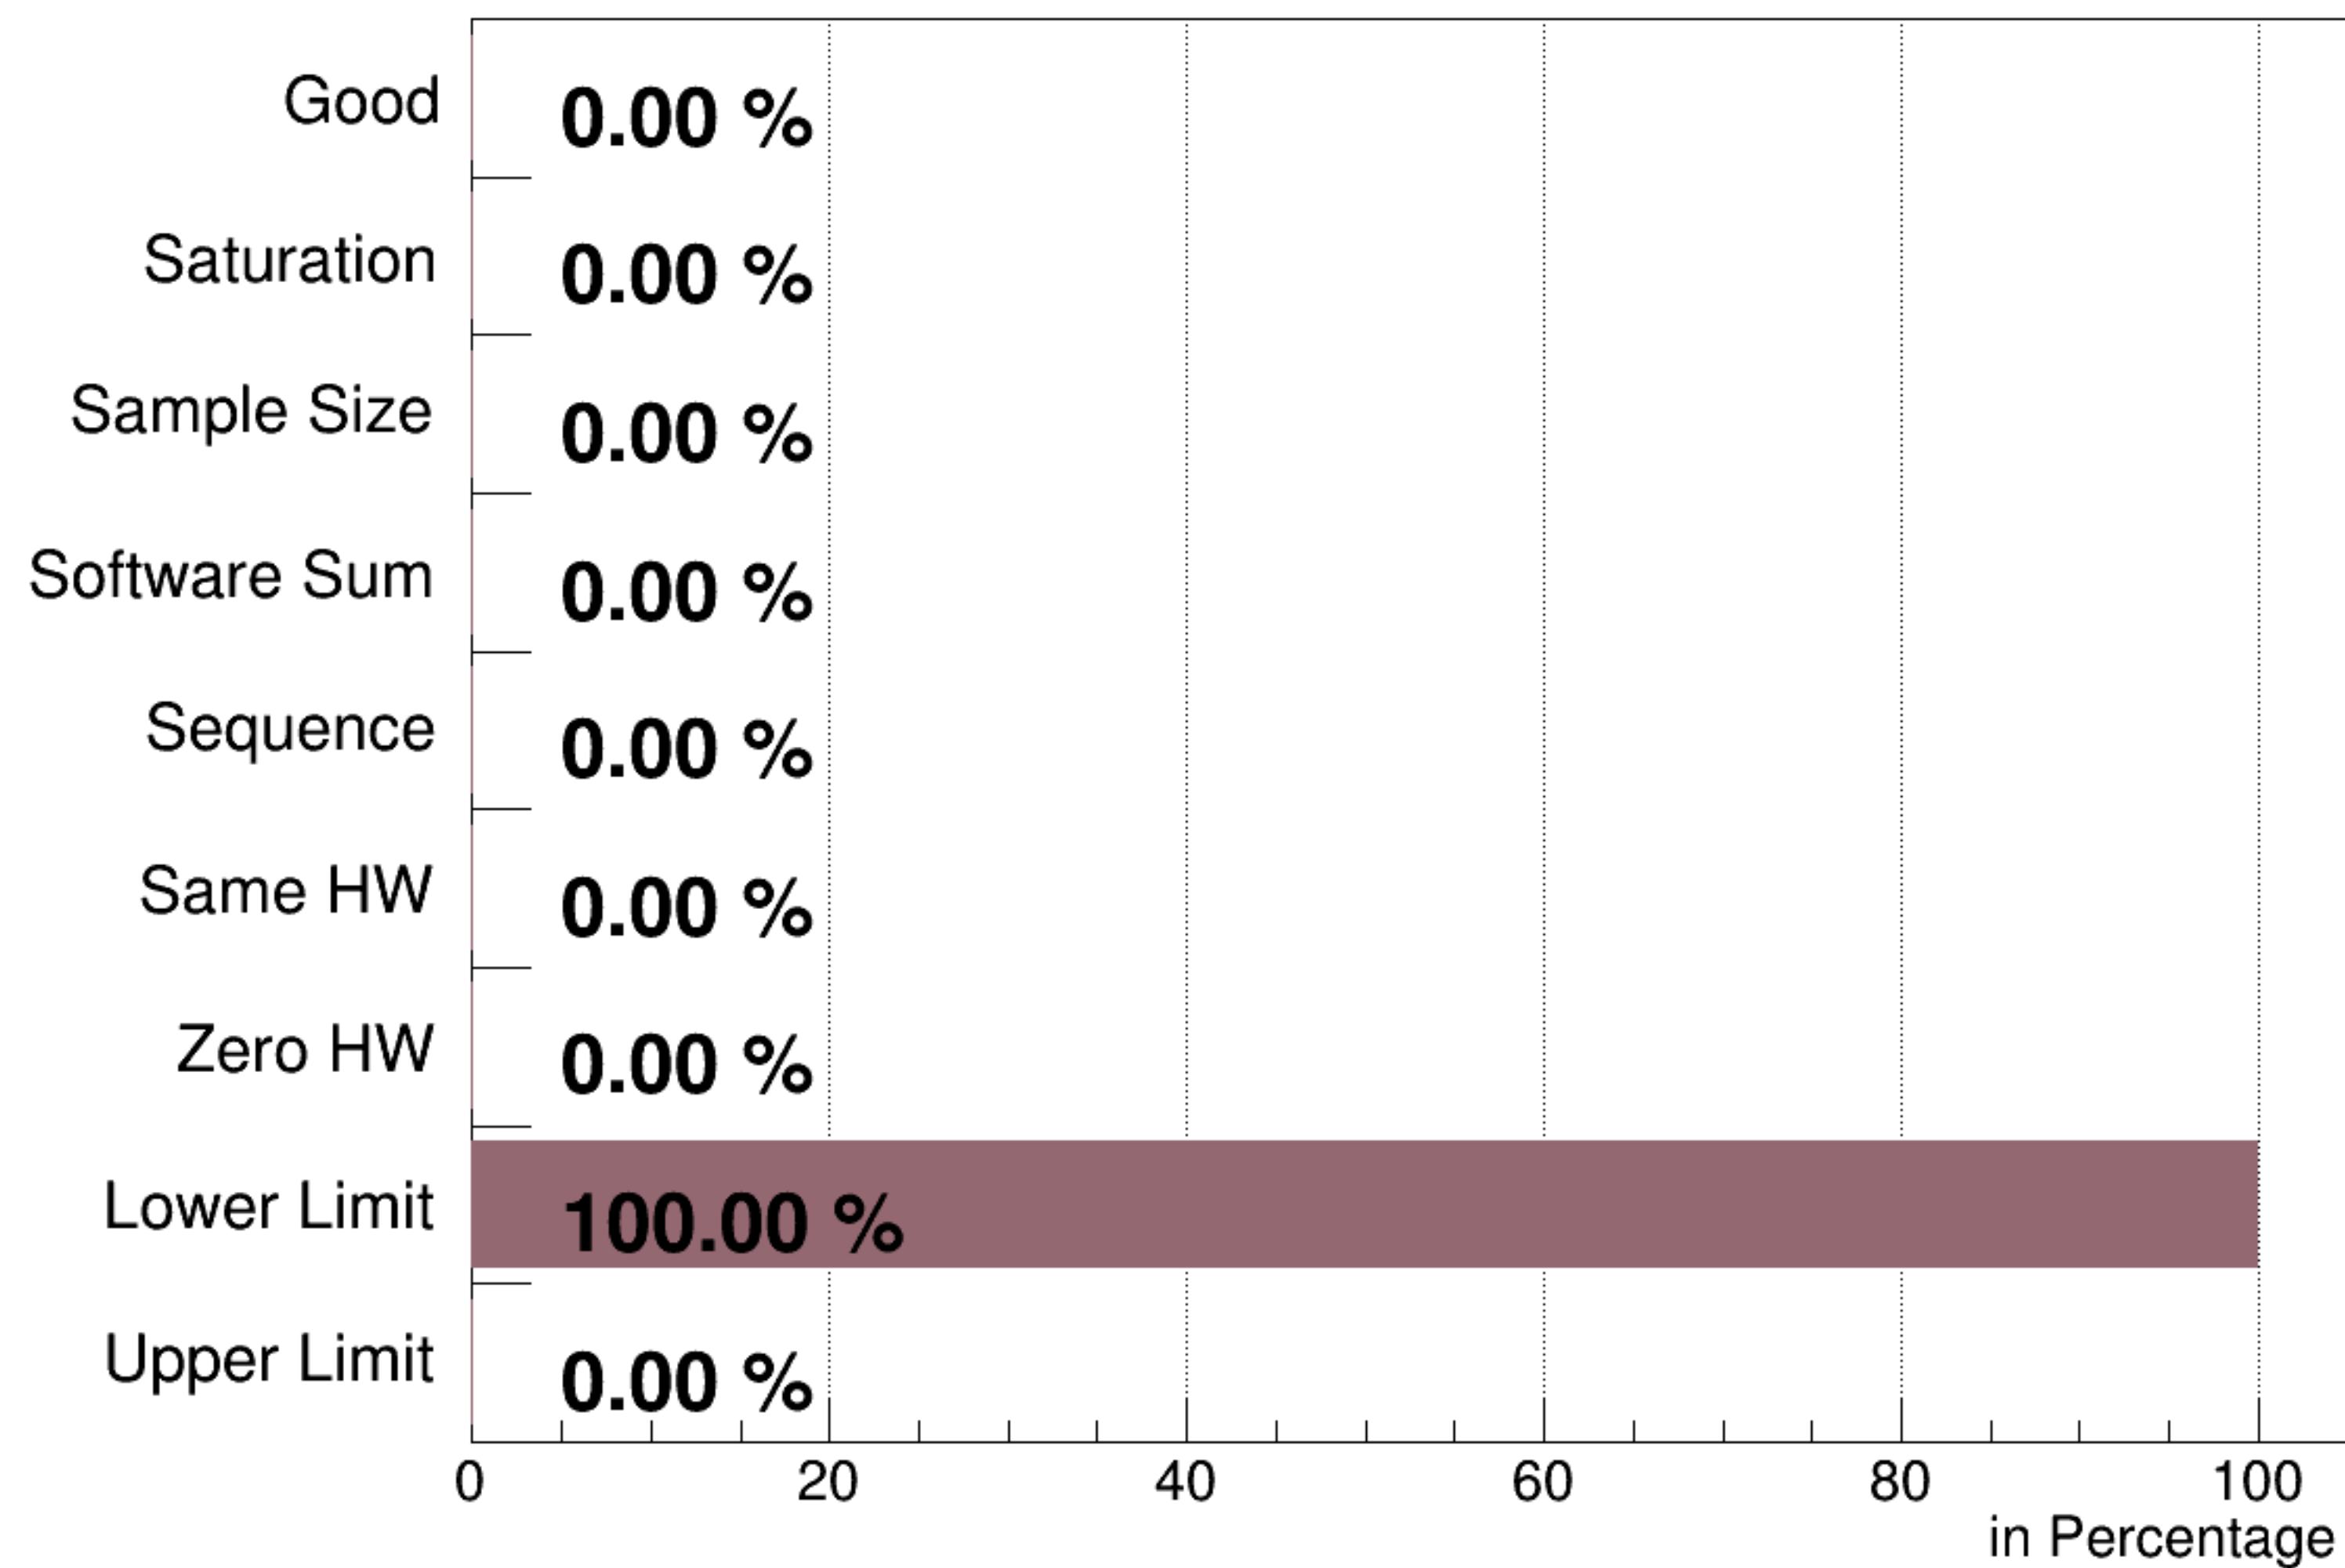 

bpm11XP Device Error Counter

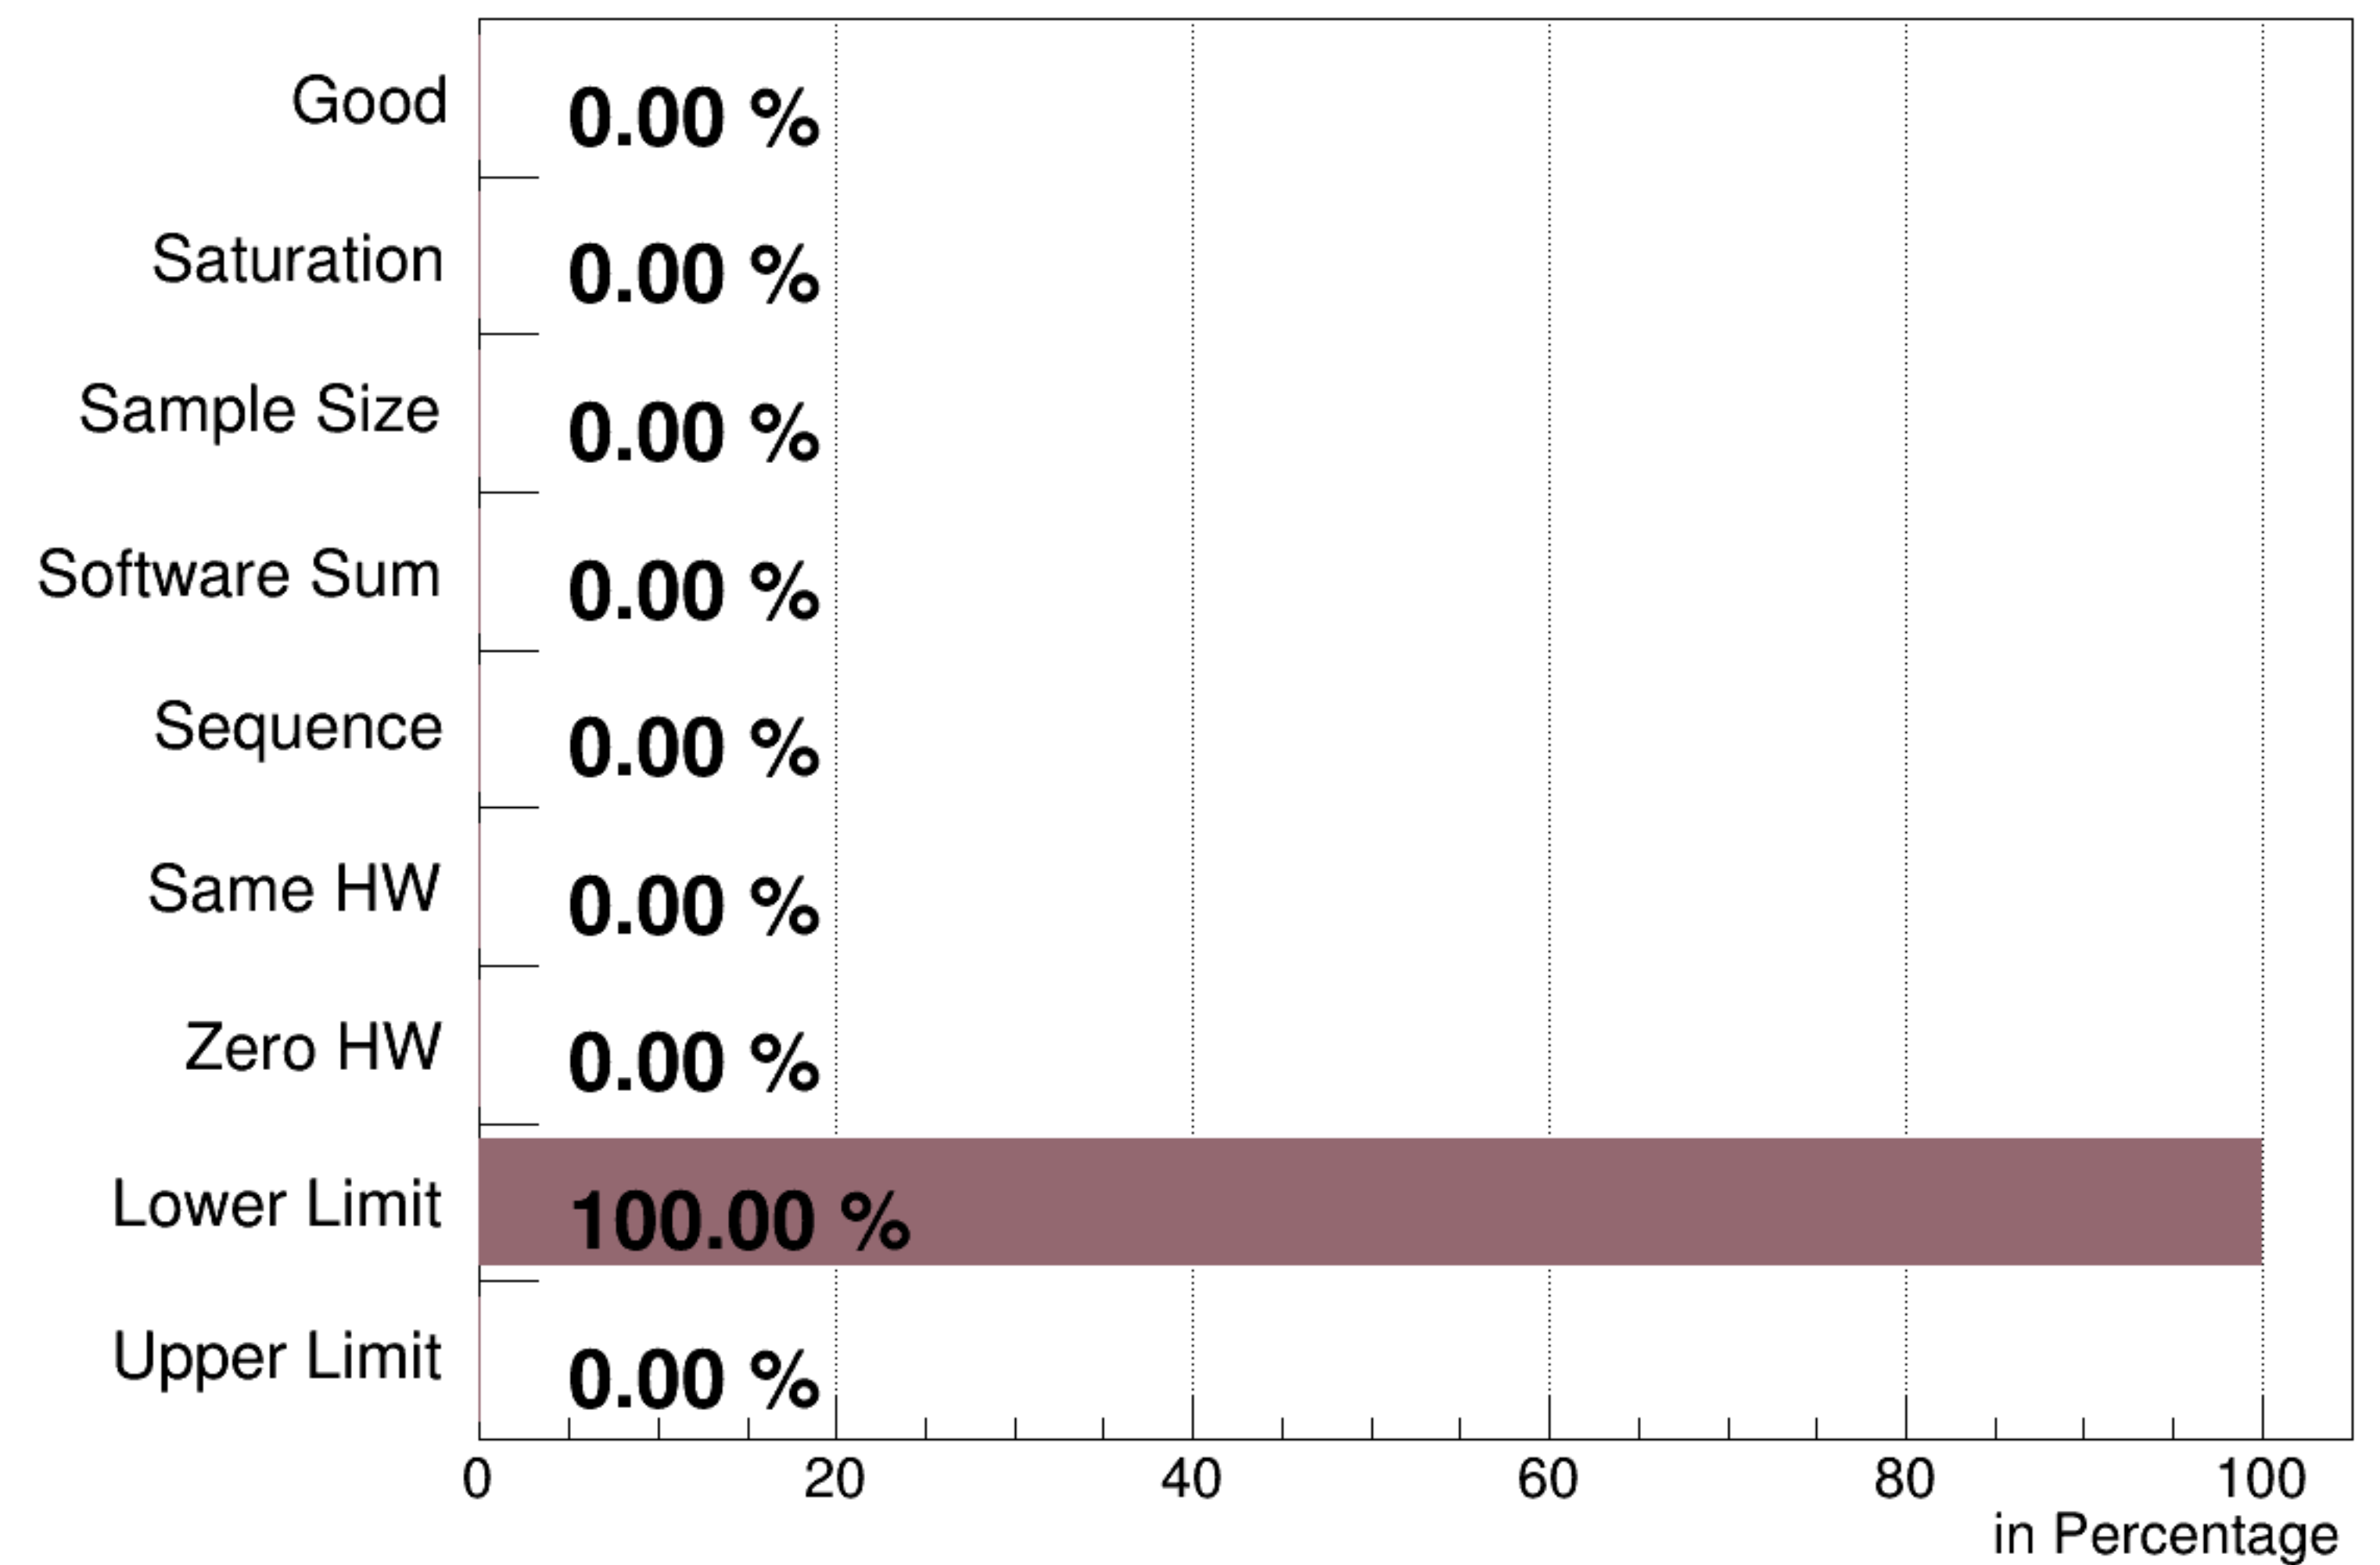 

bpm11YP Device Error Counter

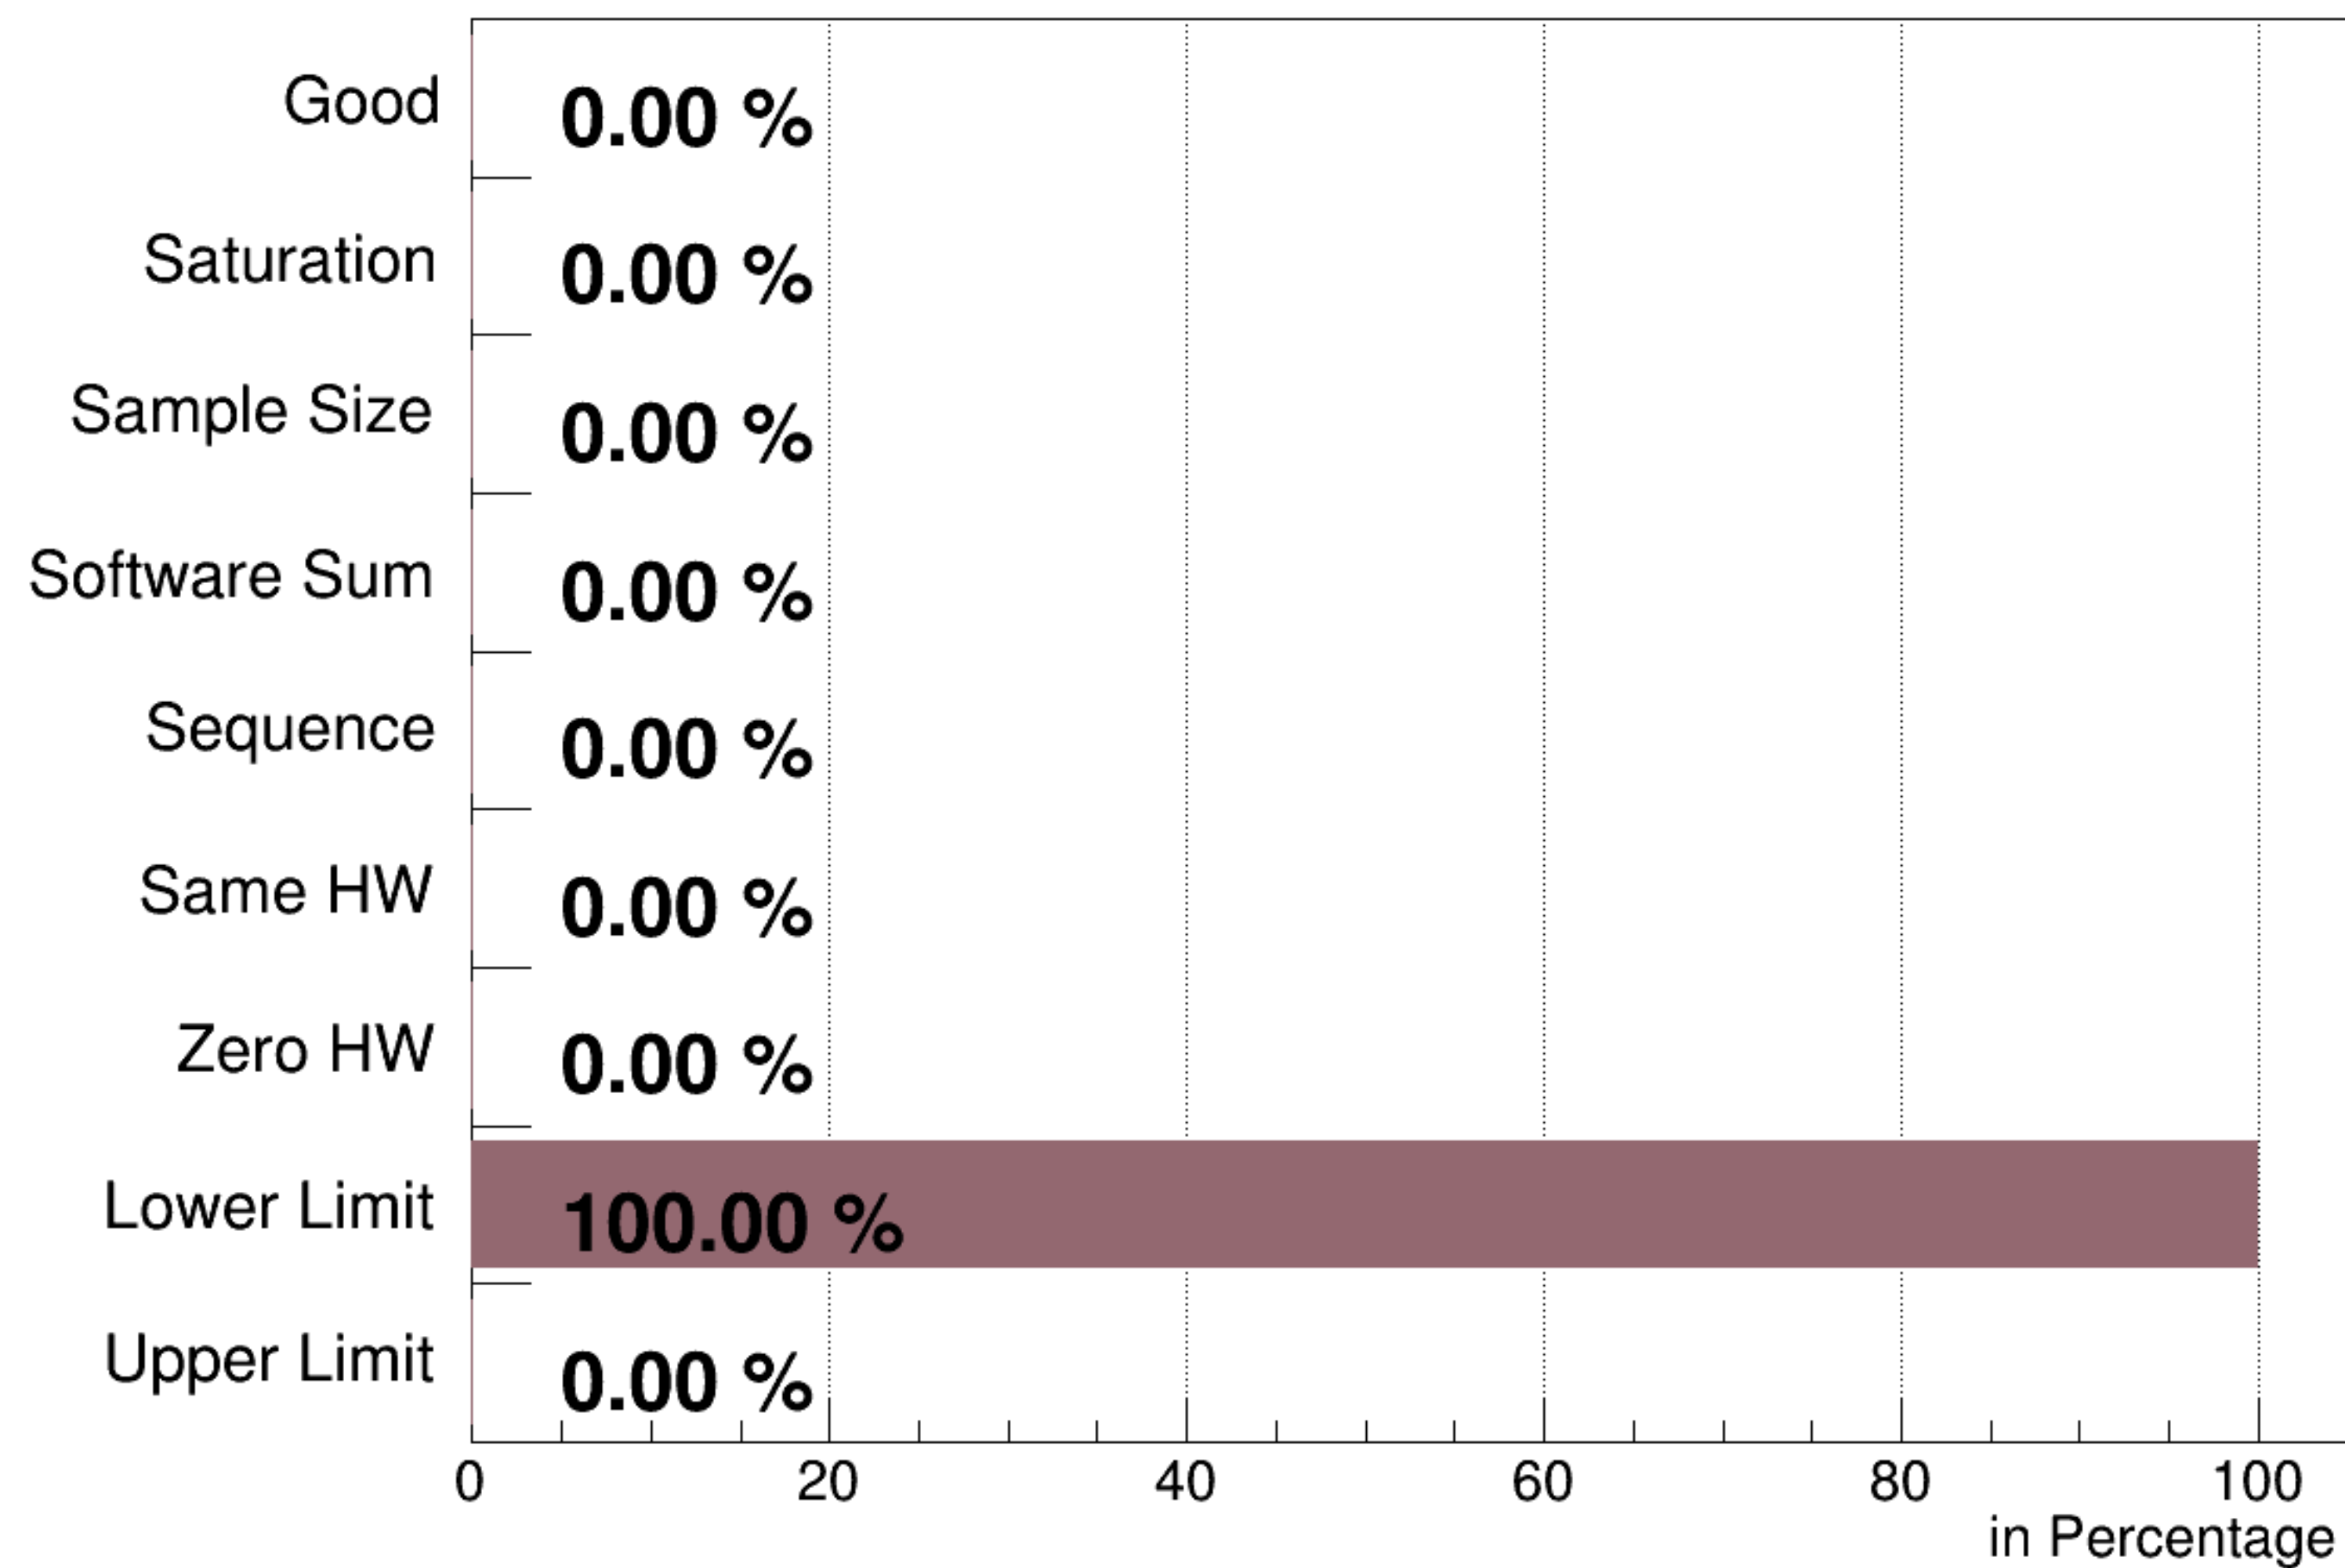 

bpm11YM Device Error Counter

